



# Disassembling Nokia 2366i Front Cover

This guide shows you how to remove the front cover of the Nokia 2366i.

Written By: Kristen



---

## INTRODUCTION

This guide shows you how to remove the front cover of the phone so that you can access the internal components found there.


---

### **TOOLS:**

- [Spudger](#) (1)
-



## Step 1 — Battery

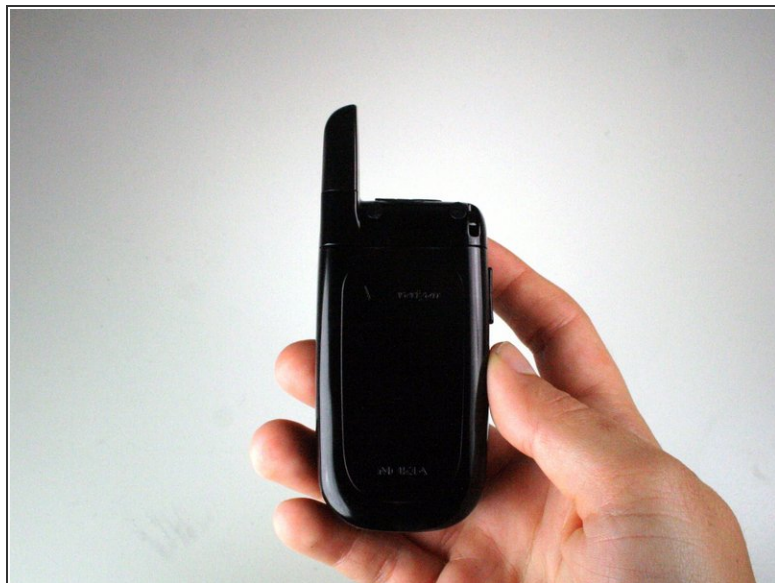

- Turn off the phone.
- ⓘ Position the phone so that the back side is in view.

## Step 2



- Apply pressure on the cover while simultaneously sliding the cover downward.
- Remove the back battery cover.

## Step 3



- Insert the spudger between the base of the phone and the phone battery.
- Position the phone so that the battery won't fall out of the phone.
- Carefully lift the battery out of the phone.
- ⓘ The battery lifts out of the phone easily.

## Step 4 — Front Cover



- Keep the phone closed.
- ⓘ Hold the phones sideways with the front cover of the phone facing up.



## Step 5



- Find the slight crease on the side that divides the display assembly in half.
  - Slowly wedge the spudger into the crease.
- ⚠ It's a little difficult to perform this step because the crease is narrow. Do not rush because you may damage the phone

## Step 6



- Run the spudger all along the crease while lifting up.
- Separate the front cover from the front base.

To reassemble your device, follow these instructions in reverse order.