



Graco Snugrider Elite Rear Wheels Replacement

This guide shows how to replace malfunctioning rear wheels.


Written By: Dan Potts



INTRODUCTION

This guide will outline how to remove the rear wheels from the frame of the stroller. Be prepared to use a lot of force to push in the buttons that secure the wheels to the stroller.

Step 1 — Rear Wheels

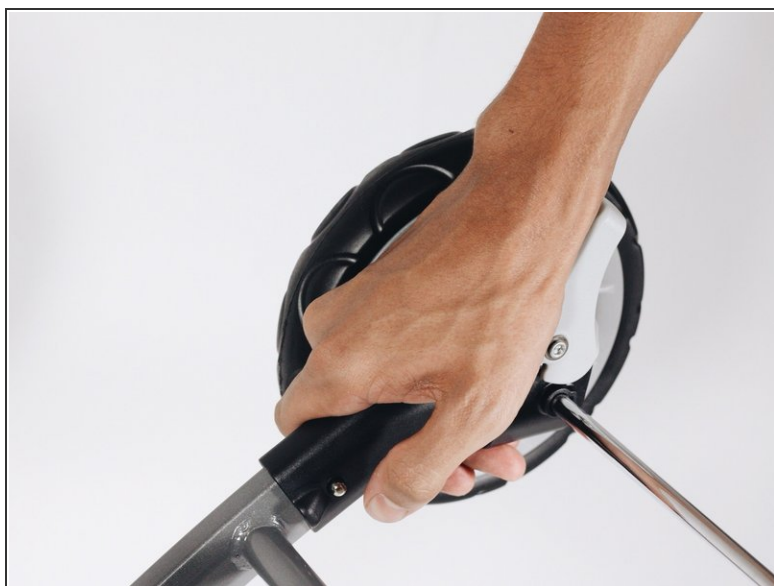

- Angle the stroller downward and place your fingers on the silver buttons located above the wheels.

Step 2



- With the buttons held down, pull the rear wheels off.
- ⓘ This step may require the use of a small object, such as a pen, to push in the buttons.

To reassemble your device, follow these instructions in reverse order.