




Dell XPS 15-L502X Battery Replacement

This guide will walk you through how to replace the battery.


Written By: Vishal

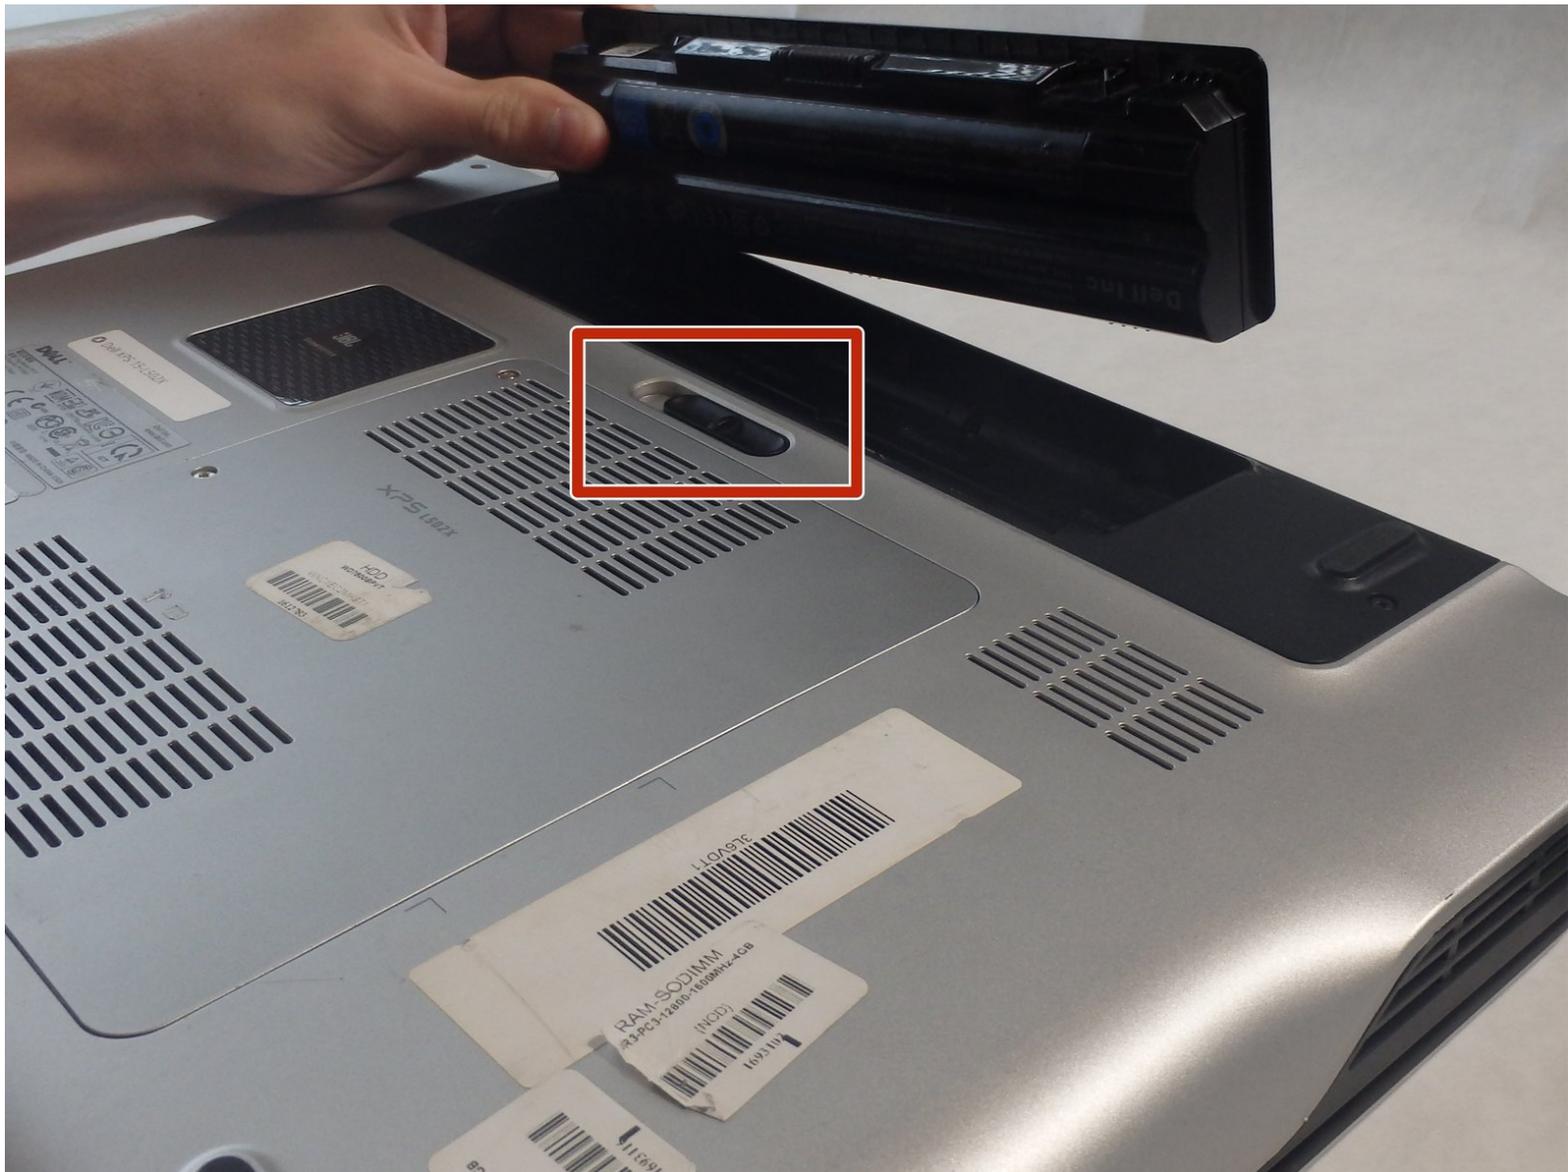

INTRODUCTION

If your computer will not charge and only runs while plugged in, the battery may need replaced. Use this guide to easily replace your laptop's battery.

Step 1 — Battery

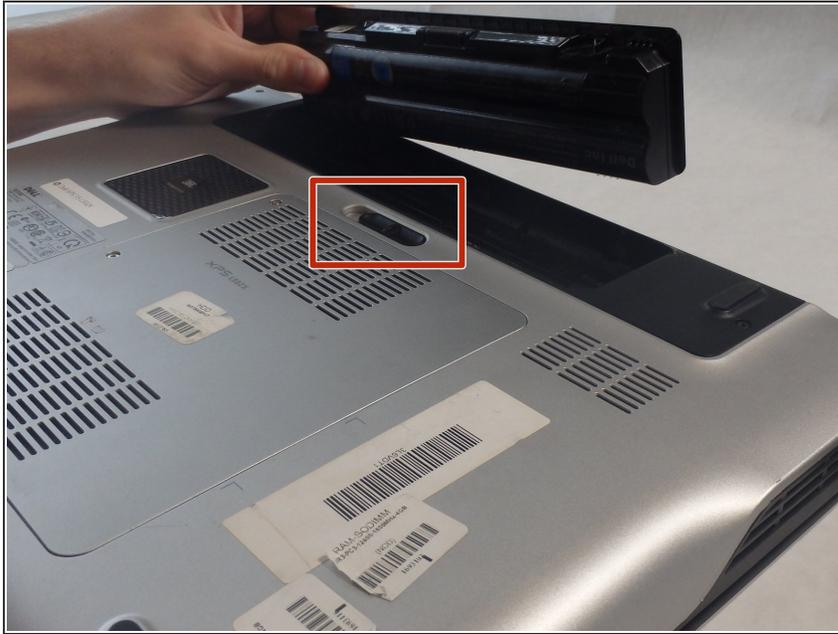

- Push the slider to the left.
- Lift battery out of the compartment.

To reassemble your device, follow these instructions in reverse order.