


Jazz UltraTab C855 Camera Replacement

This guide will show you how to replace a broken camera in your Jazz UltraTab C855 tablet.

Written By: Kyle Haas

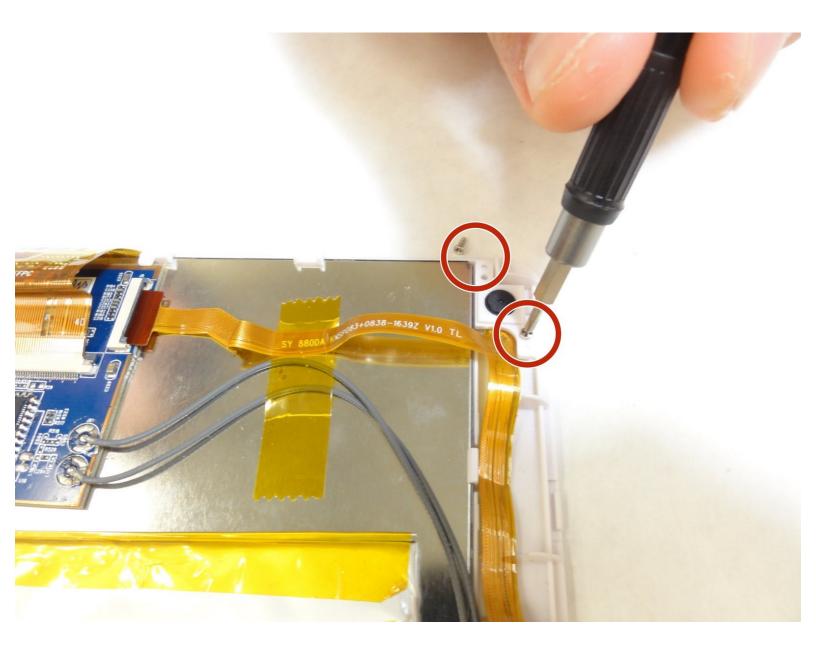

INTRODUCTION

Don't dump your device simply because the camera isn't working! This guide will help you easily replace the faulty camera on your tablet.

TOOLS:

- Phillips #000 Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Back Cover




Remove the 4 exterior screws using a <u>Phillips #000 Screwdriver</u>.

Step 2




 Pry the back case off using the blue <u>Plastic Opening Tools</u>. Work one along the seem until you can get your fingers under to pull it apart.

Step 3 — Camera

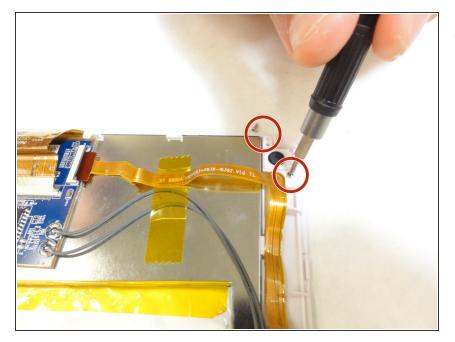


• Remove the two screws holding the internal camera in place.

Step 4

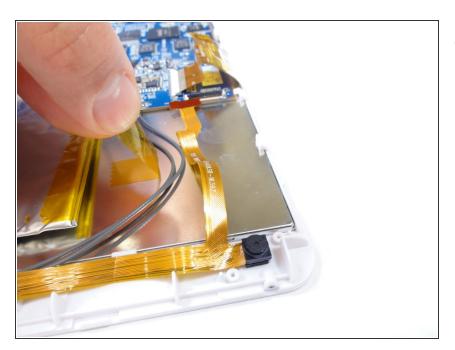

• Carefully remove the tape of the ribbon cables attached to the camera.

Step 5

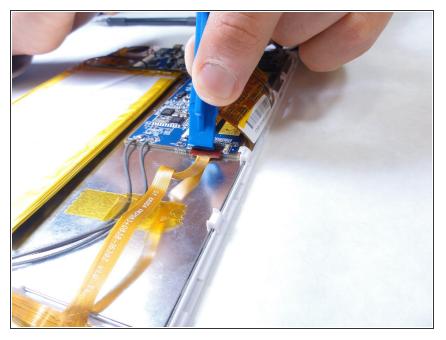

 Using a plastic opening tool, lift open the tab that holds the connection between the camera and motherboard in place. The ribbon cable will become detached.

Step 6



• Finally, detach the camera lenses from the cover by gently pulling them away from the case.

To reassemble your device, follow these instructions in reverse order.