



Dell Inspiron 1564 Laptop Battery Replacement

Dell Inspiron 1564 Laptop Battery Replacement

Written By: Matthew Johnson



INTRODUCTION

If your Dell Inspiron 1564 Laptop is not holding a charge or will not turn on, a battery replacement may be the solution.



PARTS:


- [Dell Inspiron 1564 Battery](#) (1)
-

Step 1 — Battery



- ① Place the laptop on a flat surface and open the cover.
- Unplug the power cord from the laptop.

Step 2

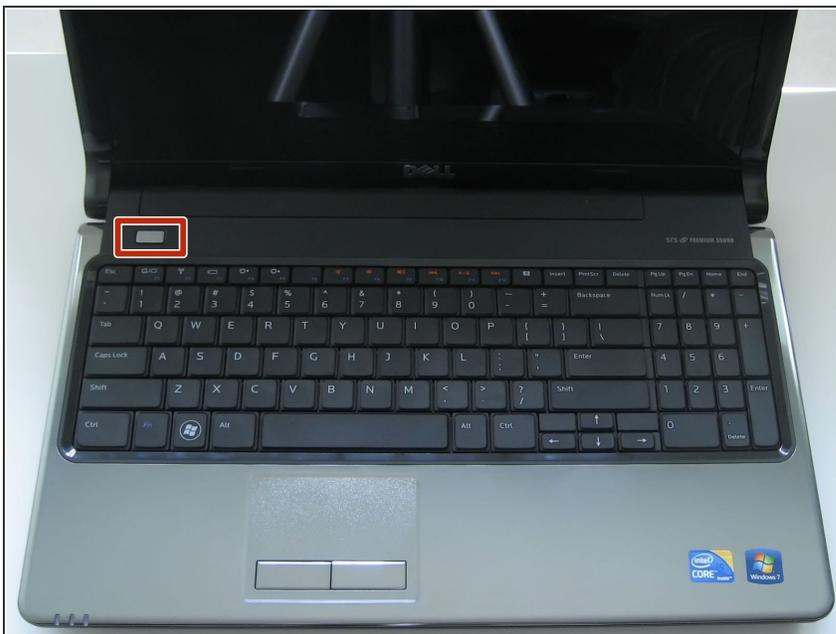

- Turn the laptop off by holding down the silver power button in the upper left corner until all the lights turn off.
- ⚠ If the laptop is not turned off, there is a risk of electrical shock when replacing the battery.

Step 3



- Close the cover of the laptop and turn the laptop over so the the bottom is facing up.
- Locate the release latch.
- Locate the battery on the bottom of the laptop.

Step 4



- Slide the battery release latch to the right and hold it.
- With your other hand, pull the battery away from the laptop and release the latch.
- ⓘ Discard the old battery according to your local laws.

- A new Dell Inspiron 1564 battery can be bought at www.laptopbatteryhq.com for about \$30