



HTC Ozone Frame Replacement

Internal components of a cell phone device are...

Written By: Marco Jokada



INTRODUCTION

Internal components of a cell phone device are protected by a plastic frame (i.e. motherboard, keyboard, screen, etc.)

TOOLS:

[iFixit Opening Tool](#) (1)

[T5 Torx Screwdriver](#) (1)

Step 1 — Rear Battery Cover




- Flip the phone over to have the rear cover facing up.
- The camera lens should be towards the top of the phone.

Step 2



- Slide the cover up, towards the top of phone, to unlock the battery cover.
- Lift the cover off phone and remove it.

Step 3 — Battery

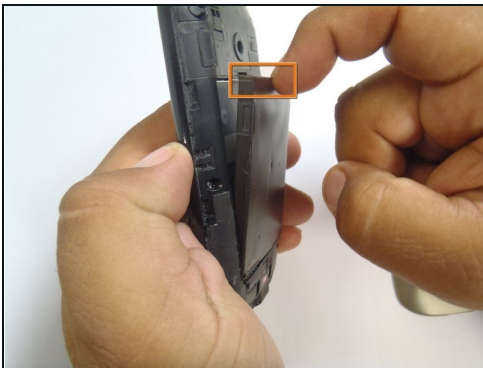


- Use your finger to push the top of the battery downwards and lift the battery out of the phone.

Step 4 — Frame



- Remove the six Torx #5 screws that are securing the rear frame.

Step 5

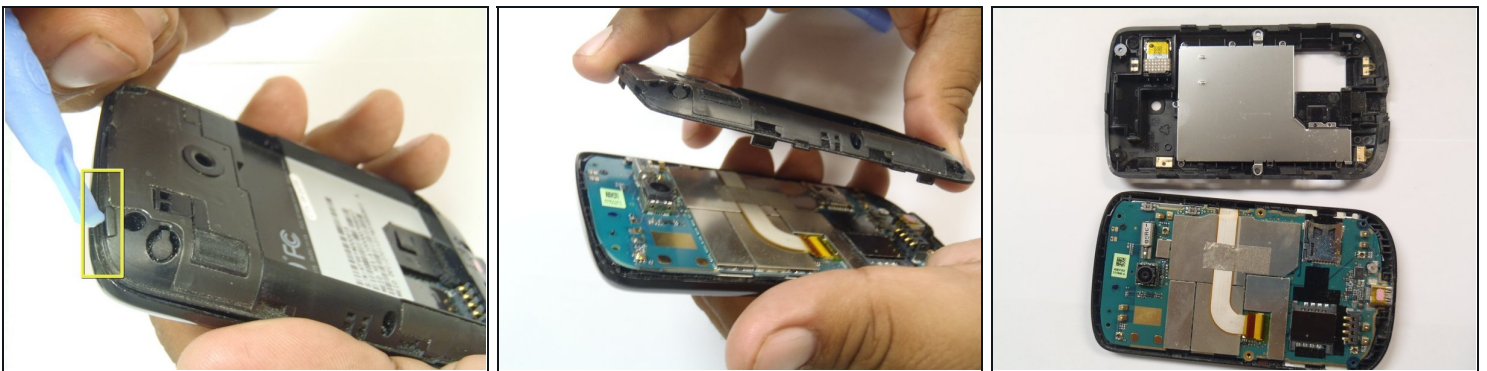

- Pry the frame open, releasing the eight plastic tabs around the edge of the frame, using the plastic opening tool.
 - ① A [plastic card](#) can be used instead of the plastic opening tool.

To reassemble your device, follow these instructions in reverse order.