



iPhone 3G SIM Card Replacement

Remove or replace the SIM card in your iPhone 3G.

Written By: iRobot



INTRODUCTION

How to remove the SIM card.



TOOLS:


- [SIM Card Eject Tool](#) (1)



PARTS:

- [iPhone 3G and 3GS SIM Tray](#) (1)


Step 1 — SIM Card

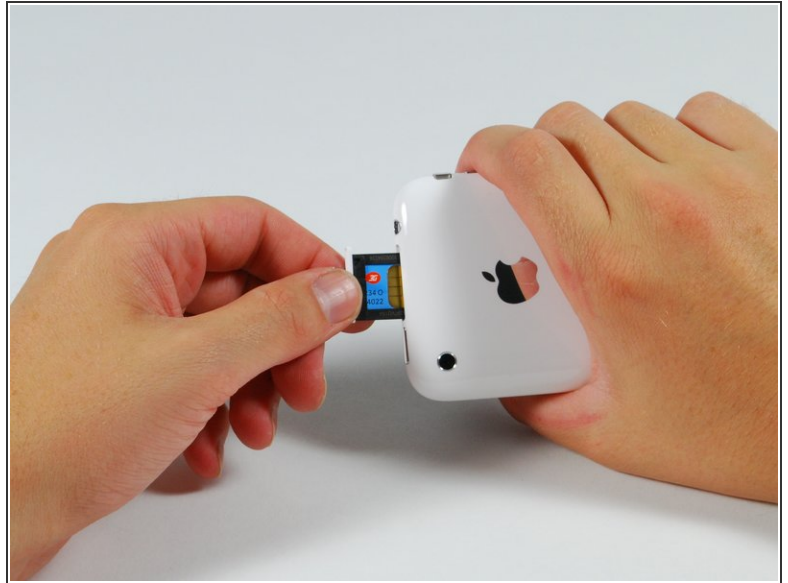

i Apple includes a "SIM eject tool" with the iPhone 3G. If you don't have this tool, don't worry, an ordinary paperclip works just as well.

- Insert your SIM eject tool or a paper clip into the hole next to the headphone jack.
- Press down on the tool until the SIM card tray pops out.

Step 2

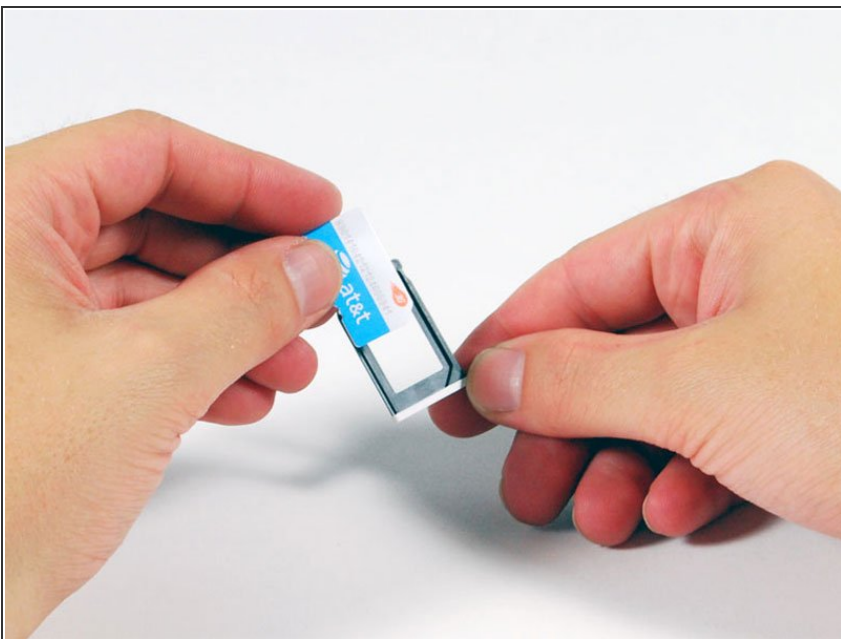

- Remove the SIM card from the SIM card tray.
- ★ The cut-off corner should make it easy to reinstall the SIM card in the correct orientation.

To reassemble your device, follow these instructions in reverse order.