

PowerBook G4 Titanium Mercury Keyboard Replacement

Written By: iRobot



INTRODUCTION

Replacing this keyboard is easy. It requires no tools, and takes only a few minutes.

PARTS:


• G4 Titanium Mercury Keyboard (1)

Step 1 — Keyboard



- Remove the battery.
- Turn the keyboard locking screw so that it is parallel to the space bar.
- Pull the keyboard release tabs toward you and lift up on the keyboard until it pops free.

Step 2

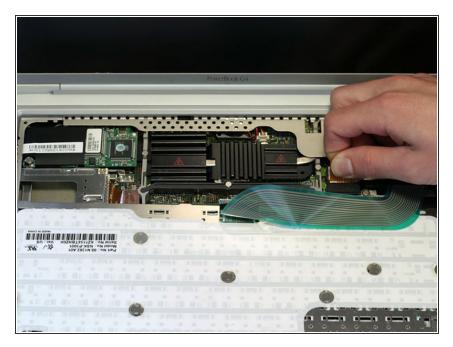

- Rest the keyboard face down on the trackpad area.
- Disconnect the keyboard connector from the logic board.

Step 3



• Your laptop should look approximately like this.

To reassemble your device, follow these instructions in reverse order.