


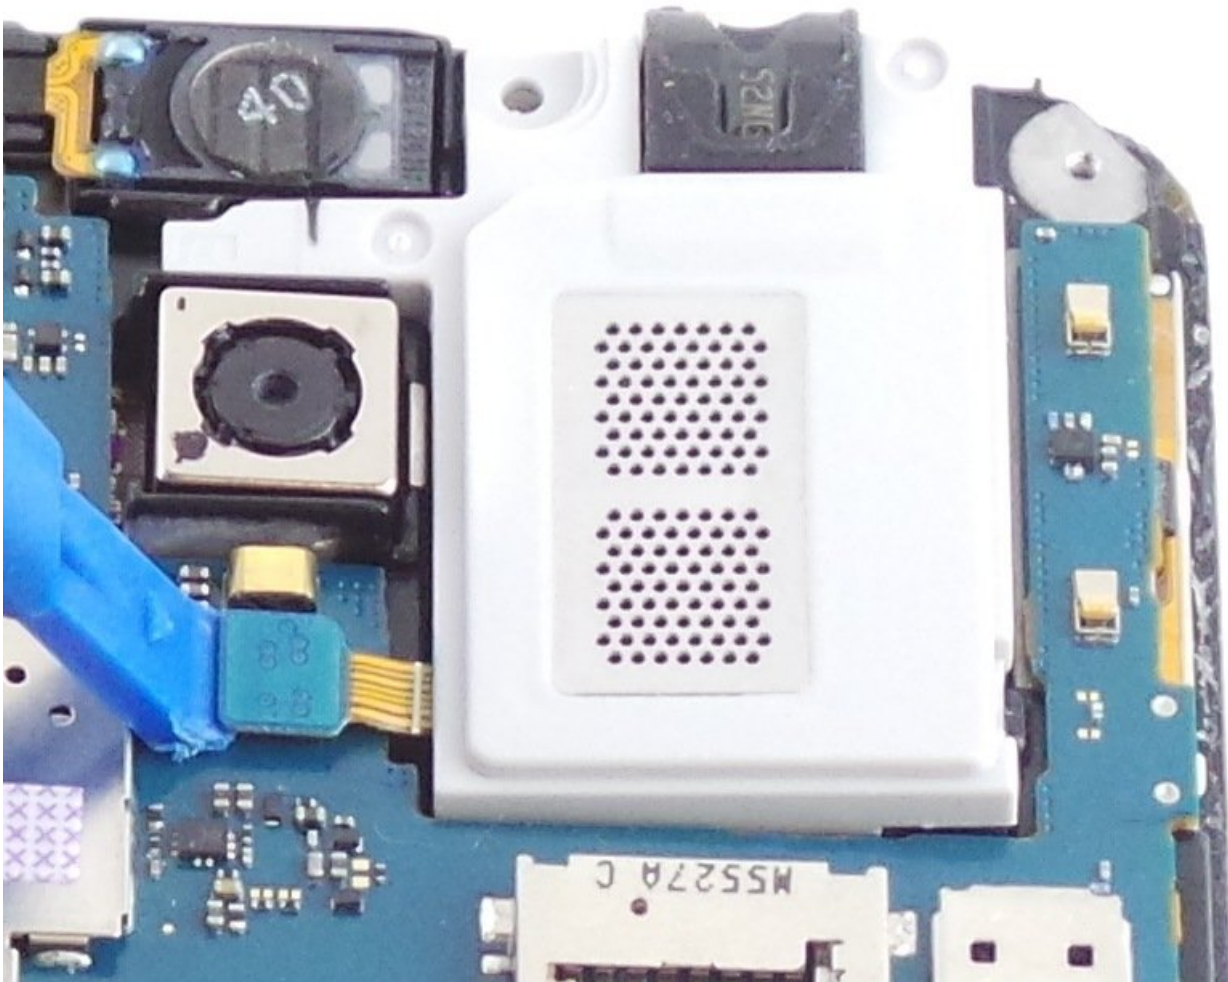

Samsung Galaxy Grand Prime Headphone Jack/Speaker Assembly Replacement

If your not getting any sound to your speakers and you know your speakers aren't broken, you need to replace your audio jack.

Written By: Kyle Ruff



INTRODUCTION


This repair is need to replace a bad audio jack or speaker.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery

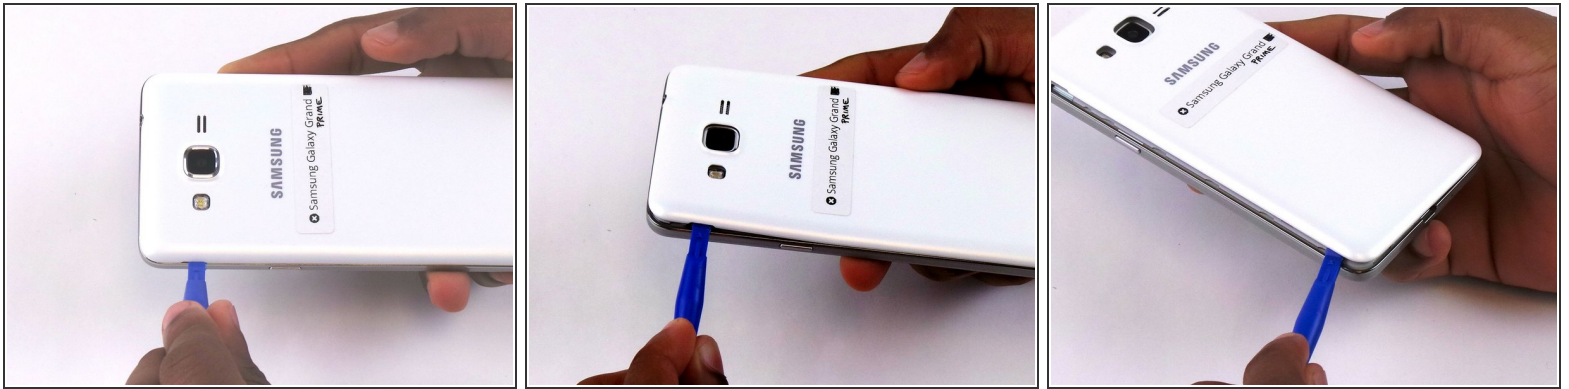

- Remove the back cover of phone by lifting up on the back cover tab with the blue plastic opening tool.
- Go around the edge of the back cover to completely remove it.

Step 2 — Remove the battery.




- Remove the old battery by lifting up on the thumb tab.
- Periodically clean the brass terminals on the battery and the phone. Place a minute amount of ISO on a Q-tip and gingerly clean the connections.

Step 3 — Midframe



- Remove the nine 4mm screws from the midframe with a Phillips #000 screwdriver.

Step 4

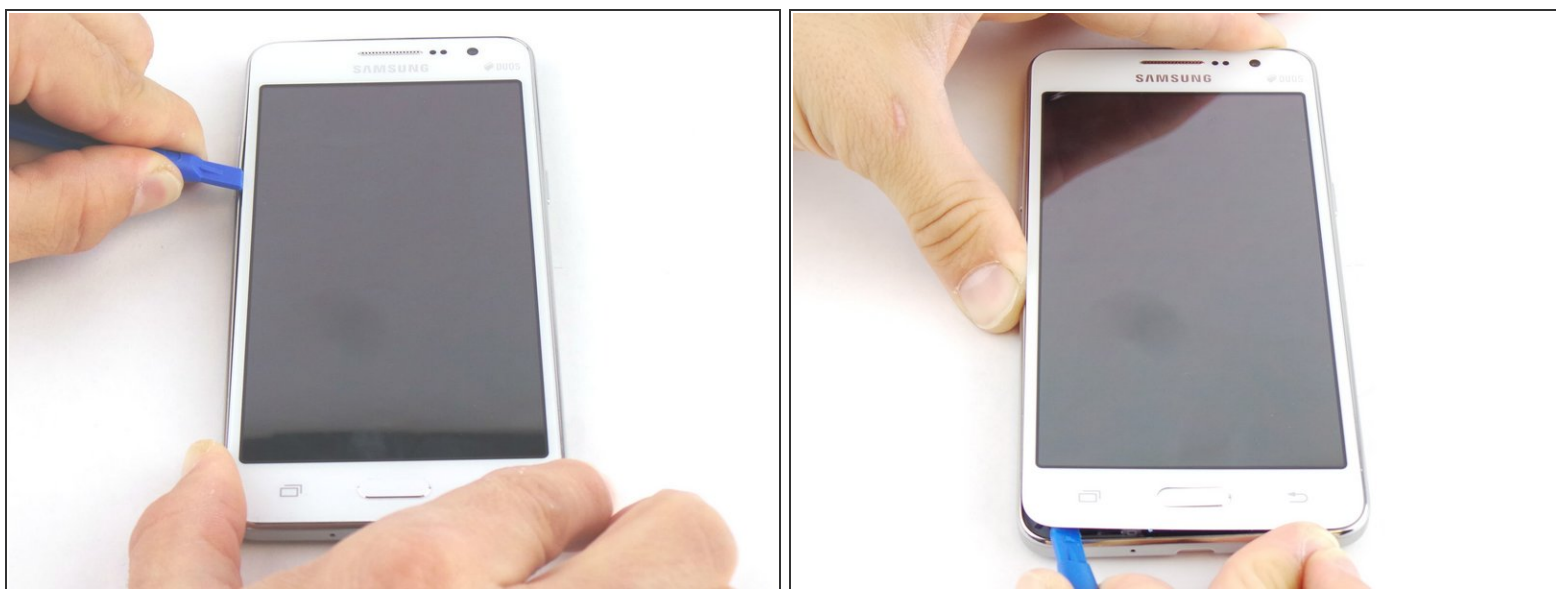


- Wedge the blue plastic opening tool in between the front and side panel.
- Move the blue plastic opening tool around the edges between the front and side panel.

Step 5



- Make sure that you detach the mid-frame from the inside too.

Step 6 — Headphone Jack/Speaker Assembly

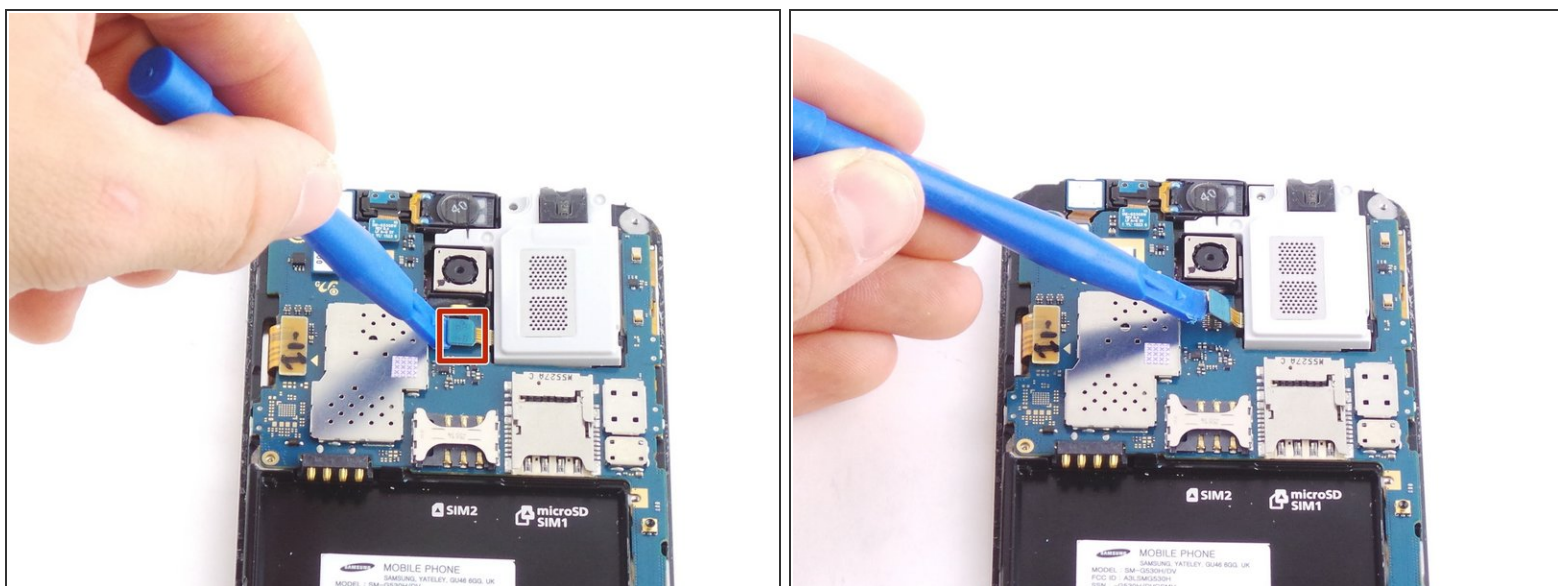

- Unhook the ribbon cable clip with the plastic opening tool and remove the audio jack.

To reassemble your device, follow these instructions in reverse order.