



# iBook G3 Clamshell LCD Bezel Replacement

Replacing the bezel covering the Lcd

Written By: aidan



---

# INTRODUCTION

Replacing the bezel covering the Lcd



## TOOLS:

- [T8 Torx Screwdriver](#) (1)
  - [Flathead Screwdriver](#) (1)
-

## Step 1 — Battery Cover



- Use a coin to unscrew the battery cover, and remove battery.

## Step 2 — Back Cover



- Use a t8 Torx driver to unscrew the two screws holding in the back cover, then remove the cover.




## Step 3



- Open the screen, and remove the two t8 Torx screws holding the bezel in place.

## Step 4

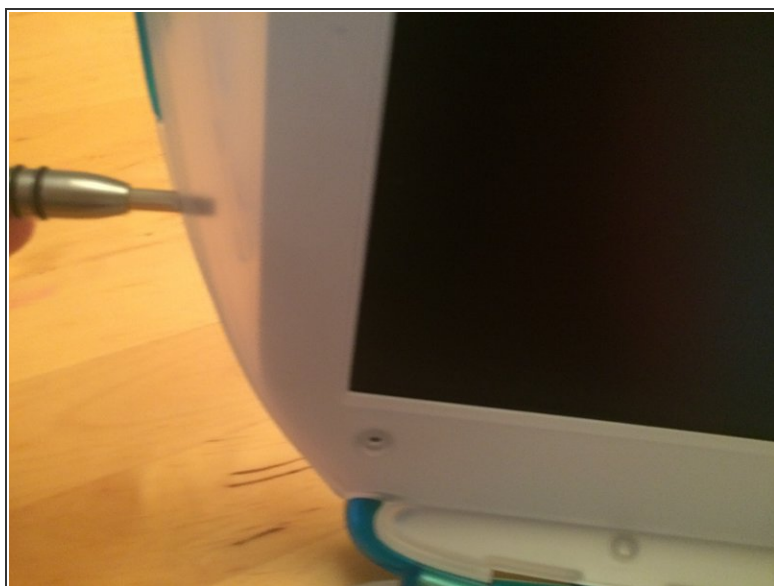

- Use a flat tip screw driver to unsnap the bezel from its place.
- When at the top rubberized area, pry the bezel down.

To reassemble your device, follow these instructions in reverse order.