




ASUS VivoBook S300CA-BBI5T01 CMOS Battery Replacement

A CMOS battery is a small battery attached to the computer's motherboard. It maintains the time, date, hard disk, and other configuration settings in the CMOS memory. This guide will focus on replacing it.

Written By: Keith Rachels

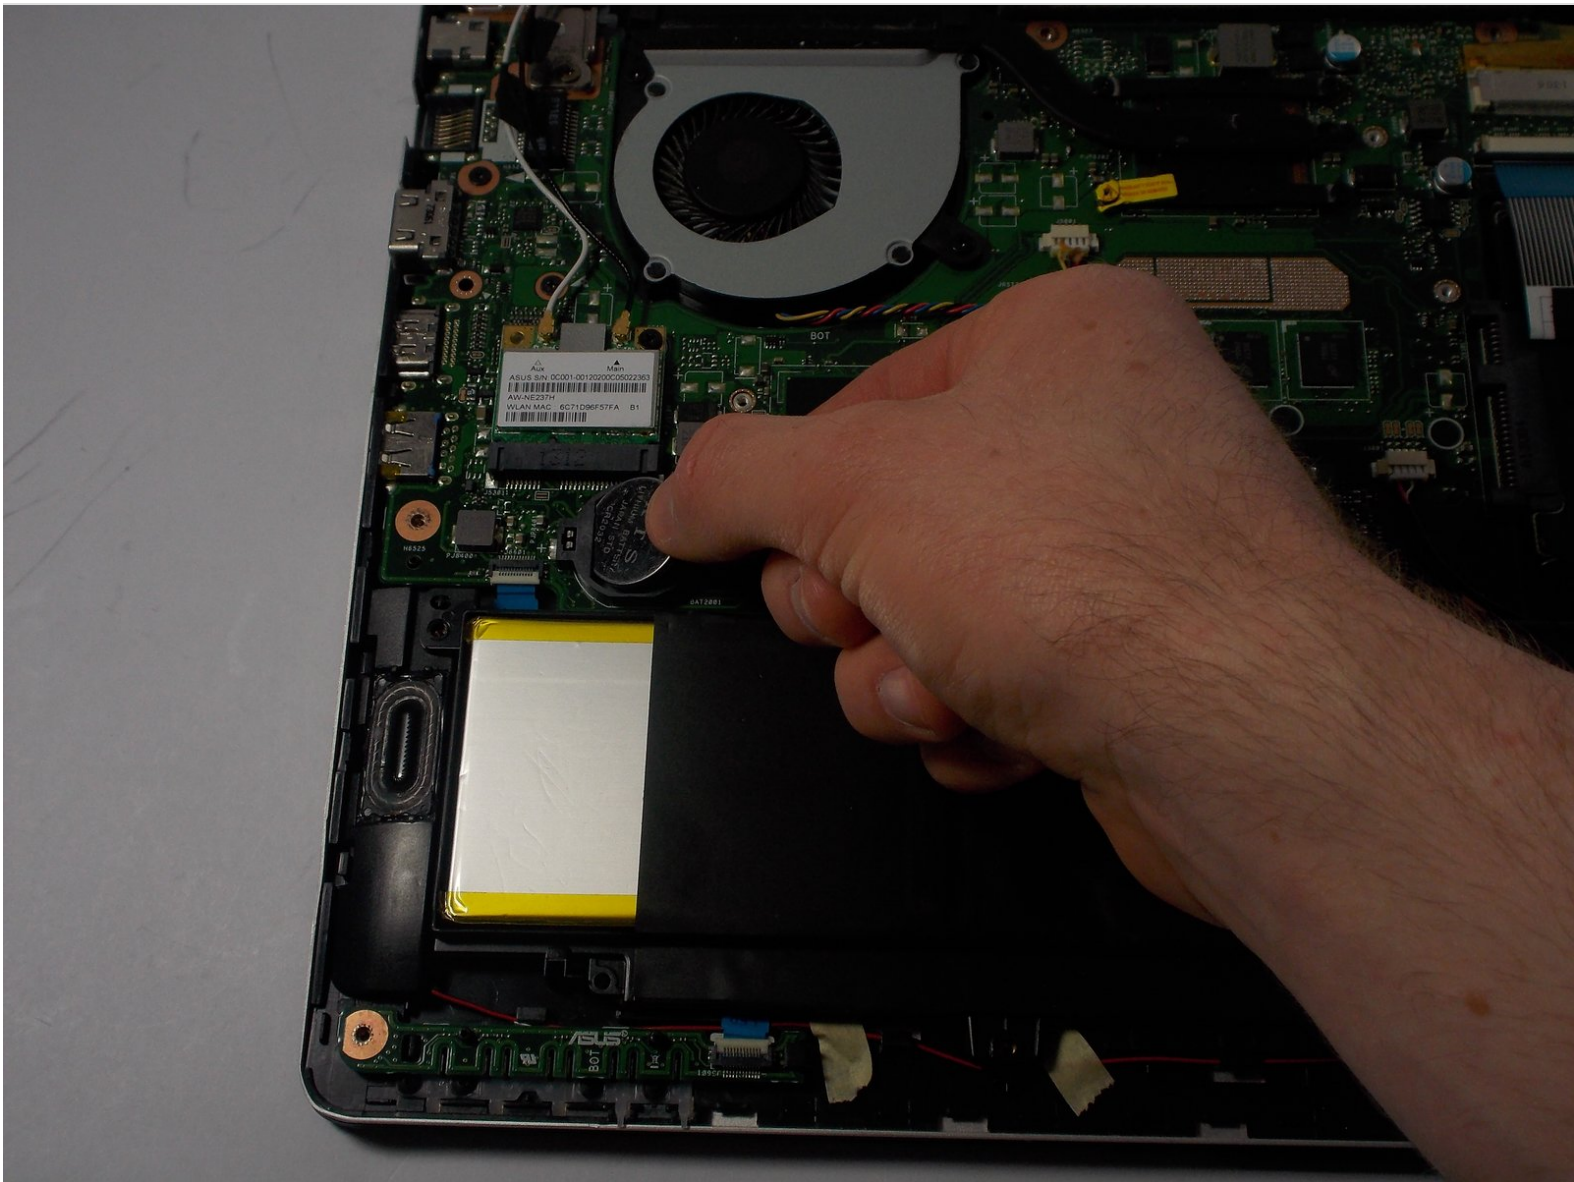

INTRODUCTION

This guide informs the viewer how to replace a CMOS battery, which controls the time,date, and hard disk of the computer. Please follow the steps below to replace the CMOS battery.



TOOLS:


- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — CMOS Battery




- Place the laptop upside down so that the bottom panel is facing upwards.

Step 2

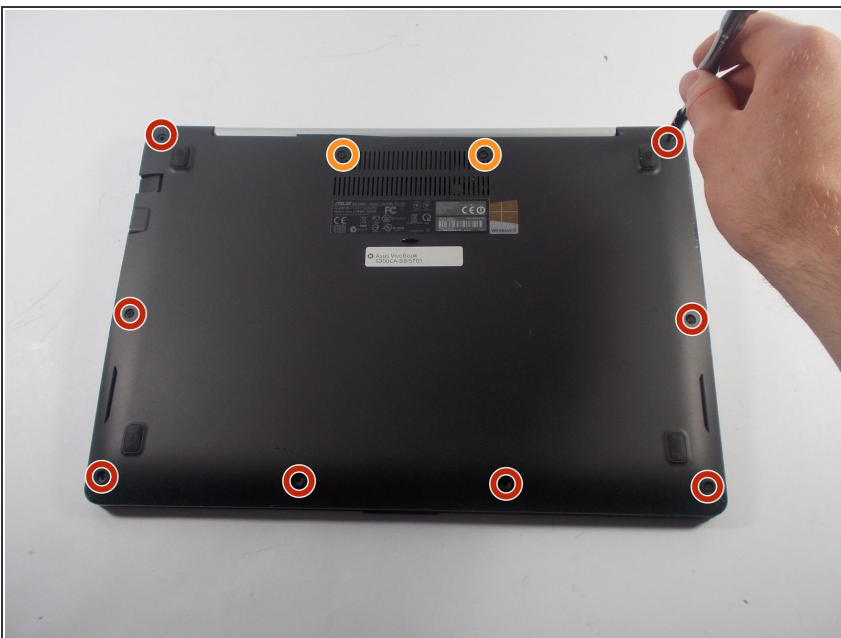

- Unscrew the following 10 screws
 - Eight 5 mm Phillips head screws
 - Two 10 mm Phillips head screws

Step 3

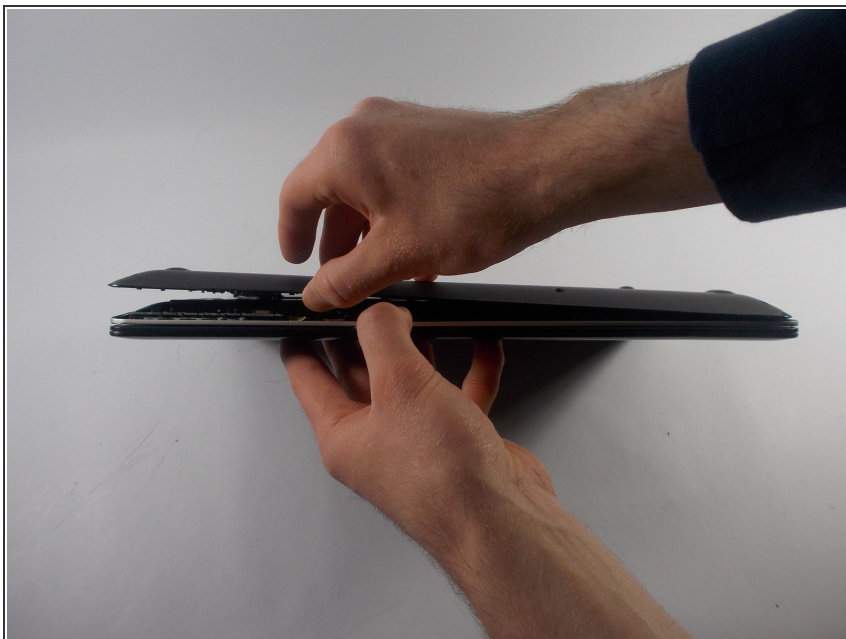

- Carefully peel the panel off of the bottom of the laptop.

Step 4



- Carefully remove the CMOS battery from its port by lifting it upward.

To reassemble your device, follow these instructions in reverse order.