




Giant Talon 29er Chainring Replacement

Replace the chainrings on a Giant Talon 29er bicycle.

Written By: Ben Frisbie

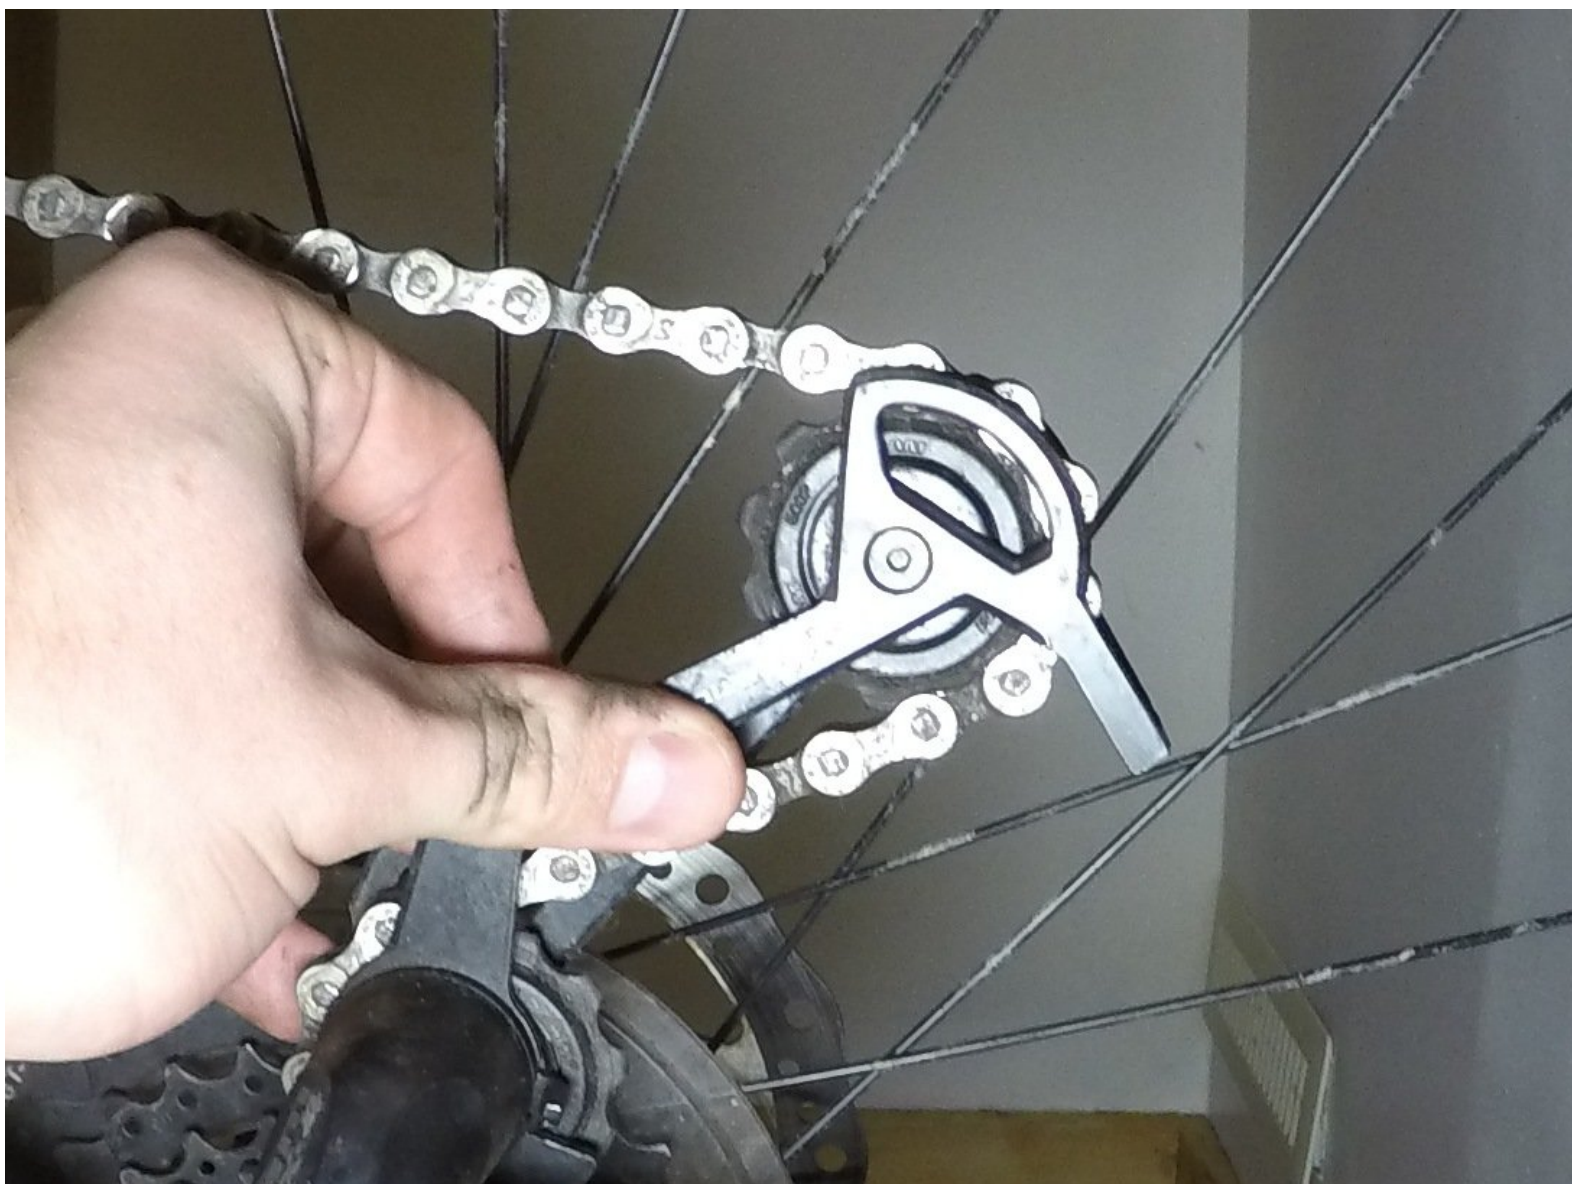

INTRODUCTION

This guide will show how to remove, disassemble, and replace the chainrings from the crank arm on a Giant Talon 29er bicycle. The chainrings should be replaced when the chain starts to skip teeth while riding.



TOOLS:



- [5mm Hex Key](#) (1)
- [8mm Hex Key](#) (1)



PARTS:

- [Chainring](#) (1)

Step 1 — Chainring

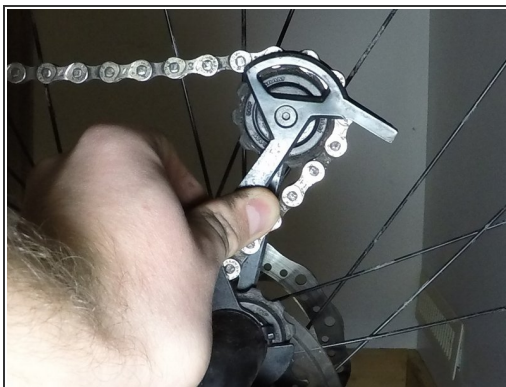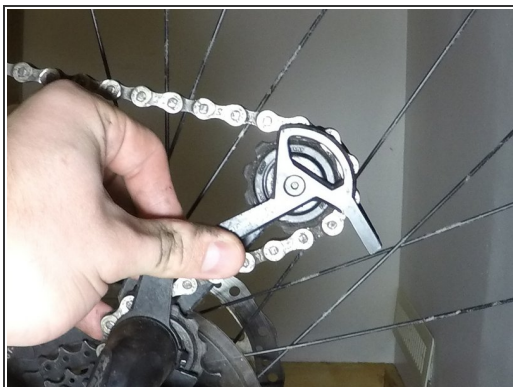

- Push the chain tensioner towards the front of the bicycle to release the tension on the chain.
- Unroute the chain from the chainrings.

Step 2




- Remove the 8 mm Hex screw from the crank arm.

Step 3



- Remove the crank arm and chainrings by pulling the crank arm away from the bicycle frame.

Step 4

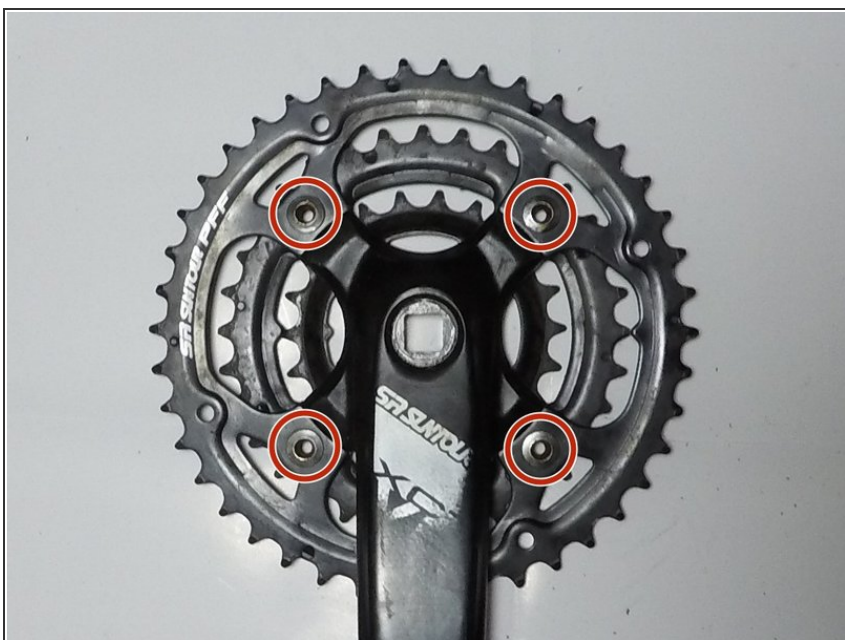

- Remove the four 5 mm Hex screws that mount the crank arm to the chainrings.

Step 5



- Rotate the largest chainring 45 degrees in either direction.
- Remove the crank arm from the chainrings.

Reassemble your bicycle with the new chainrings by following these instructions in reverse order.