



HTC Warhawk Buttons Replacement

How to replace broken buttons

Written By: Caitlin Bruce






TOOLS:

- [Spudger](#) (1)
 - [T5 Torx Screwdriver](#) (1)
-

Step 1 — Buttons

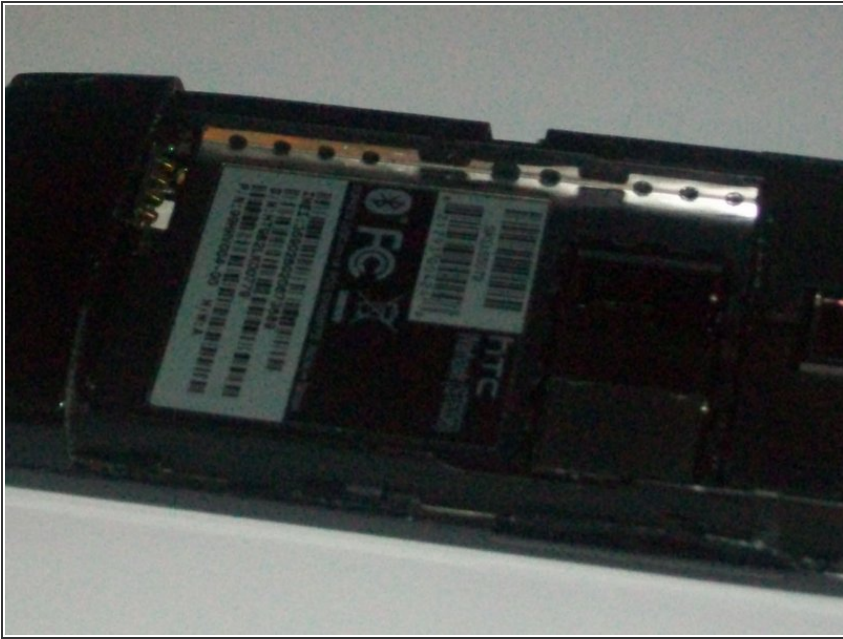

- Take the back cover off the phone and take the battery out.

Step 2



- Take a SL#2.5 screwdriver and pop the black piece off shown here

Step 3




- Take a T5 screwdriver and unscrew the two screws seen here

Step 4



- Unscrew the two screws on the back of the phone with a T5 screwdriver

Step 5

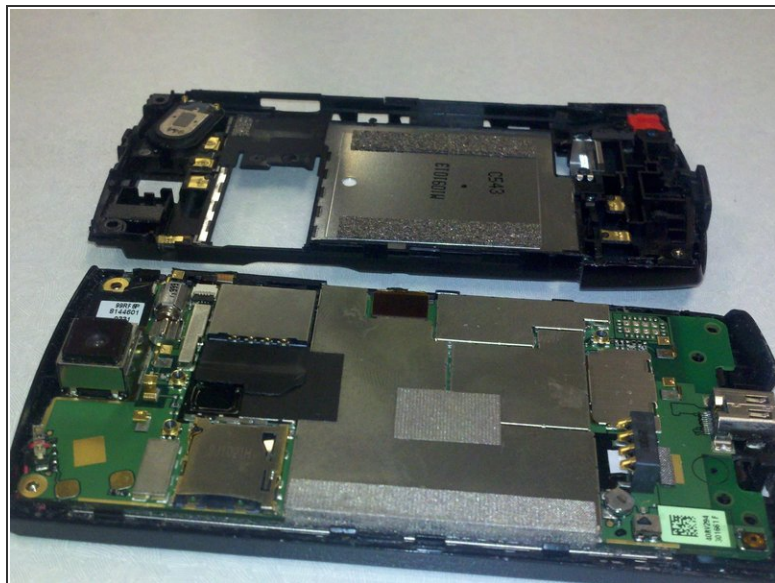



- Take the SL#2.5 screwdriver and pry off the back cover
- The phone should now look like the second picture

Step 6



- Take the SL#2.5 screwdriver and lift up the white connector at the top right corner of the phone on the side with the circuit board

Step 7

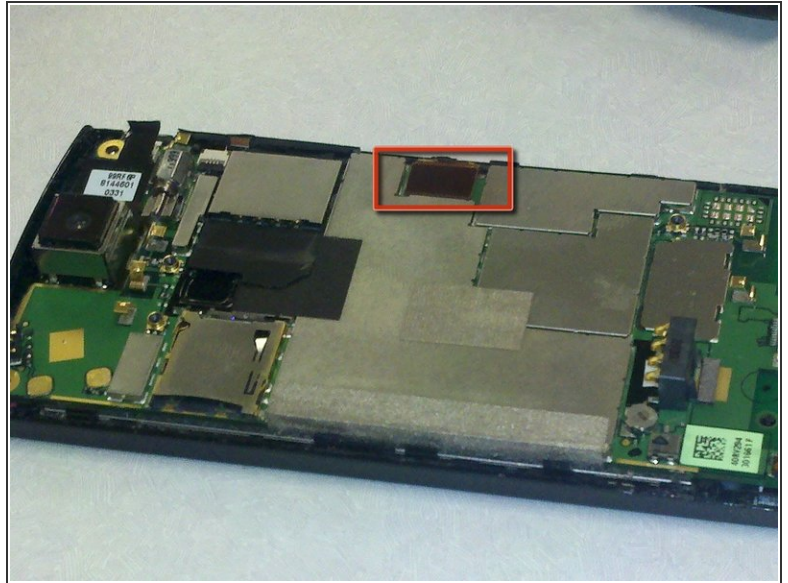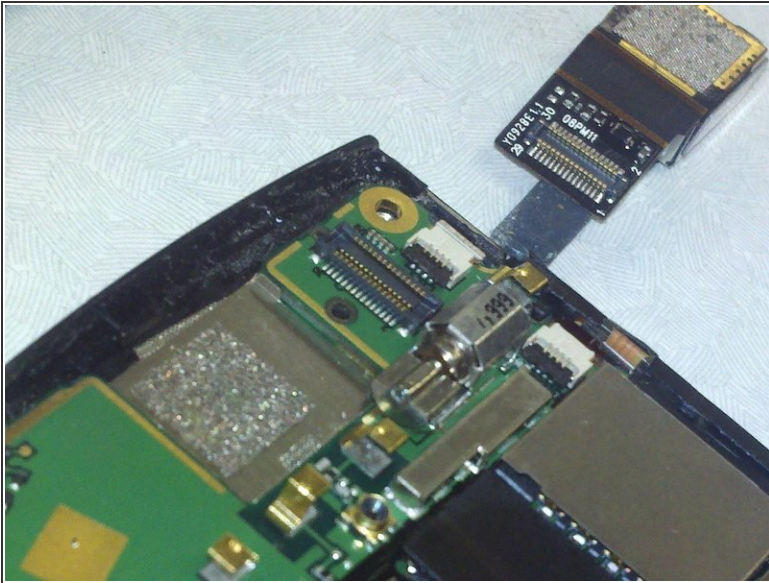


- Next lift up the camera lens from the board.
- It should now look like the second picture
- Then lift up the circuit circled in red on the second picture

Step 8



- Take the SL#2.5 screwdriver and pry off the volume buttons on the side of the phone
- The circuit board should now be detached from the LCD part of the phone

Step 9

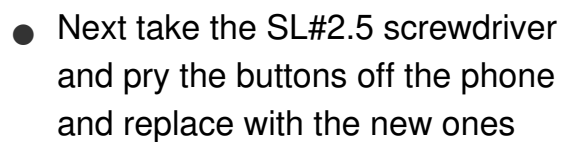

To reassemble your device, follow these instructions in reverse order.