



# Canon AE-1 Tripod Mount Replacement

Replacing camera tripod mount

Written By: Ben Barber



## INTRODUCTION

Over time the tripod mount can become damaged and the tripod will no longer thread into the camera. This guide will explain how to replace the tripod mount.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)



### PARTS:

- [Replacement tripod mount](#) (1)



## Step 1 — Tripod Mount




- Turn the camera so the bottom of the camera is facing up.
- Remove the two Phillips screws from the bottom cover using the Phillips #00 Screwdriver.

## Step 2




- Lift and remove the bottom cover from the camera.

### Step 3

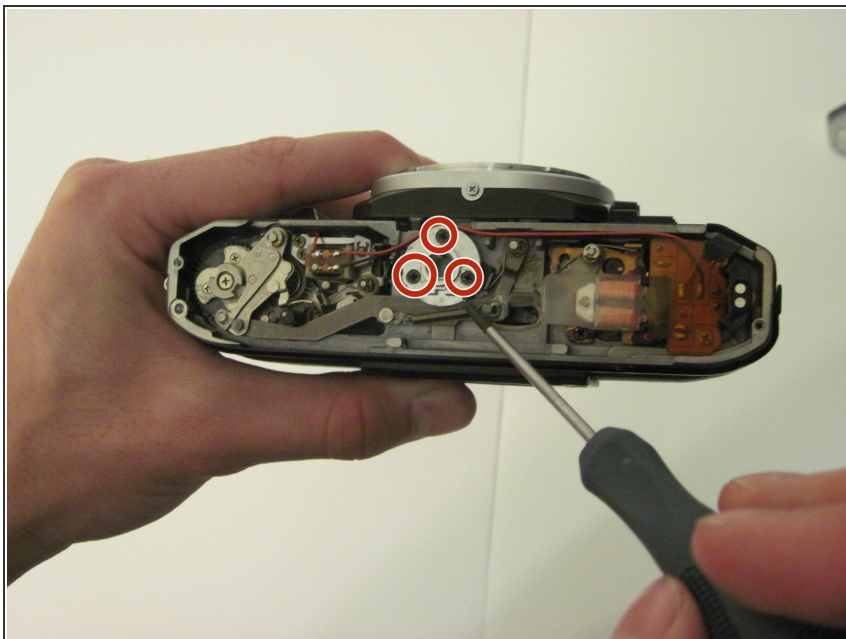

- Remove the three screws securing the tripod mount using the Phillips #00 Screwdriver.

### Step 4

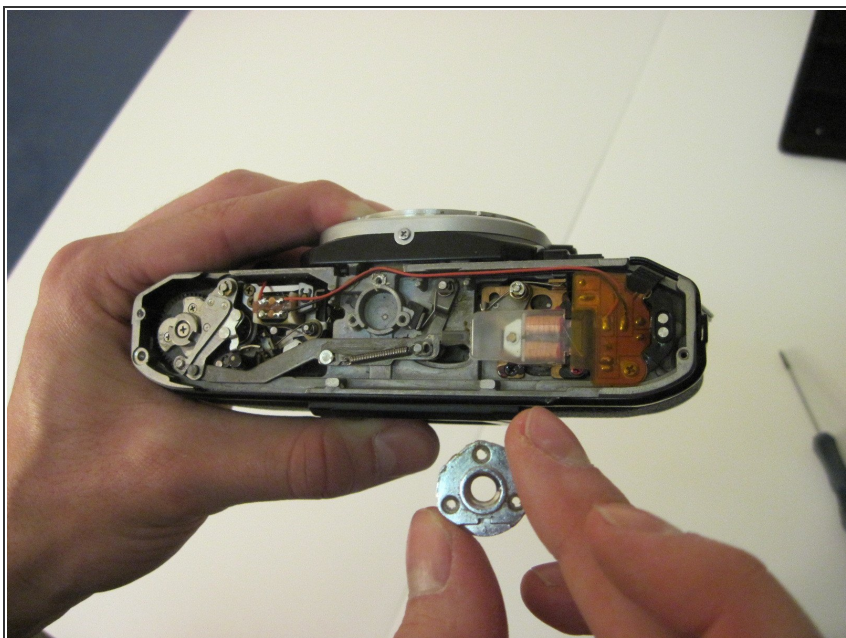

- Lift and remove the tripod mount from the camera.

To reassemble your device, follow these instructions in reverse order.