




# Nokia N70 Back Camera Replacement


Written By: Justin

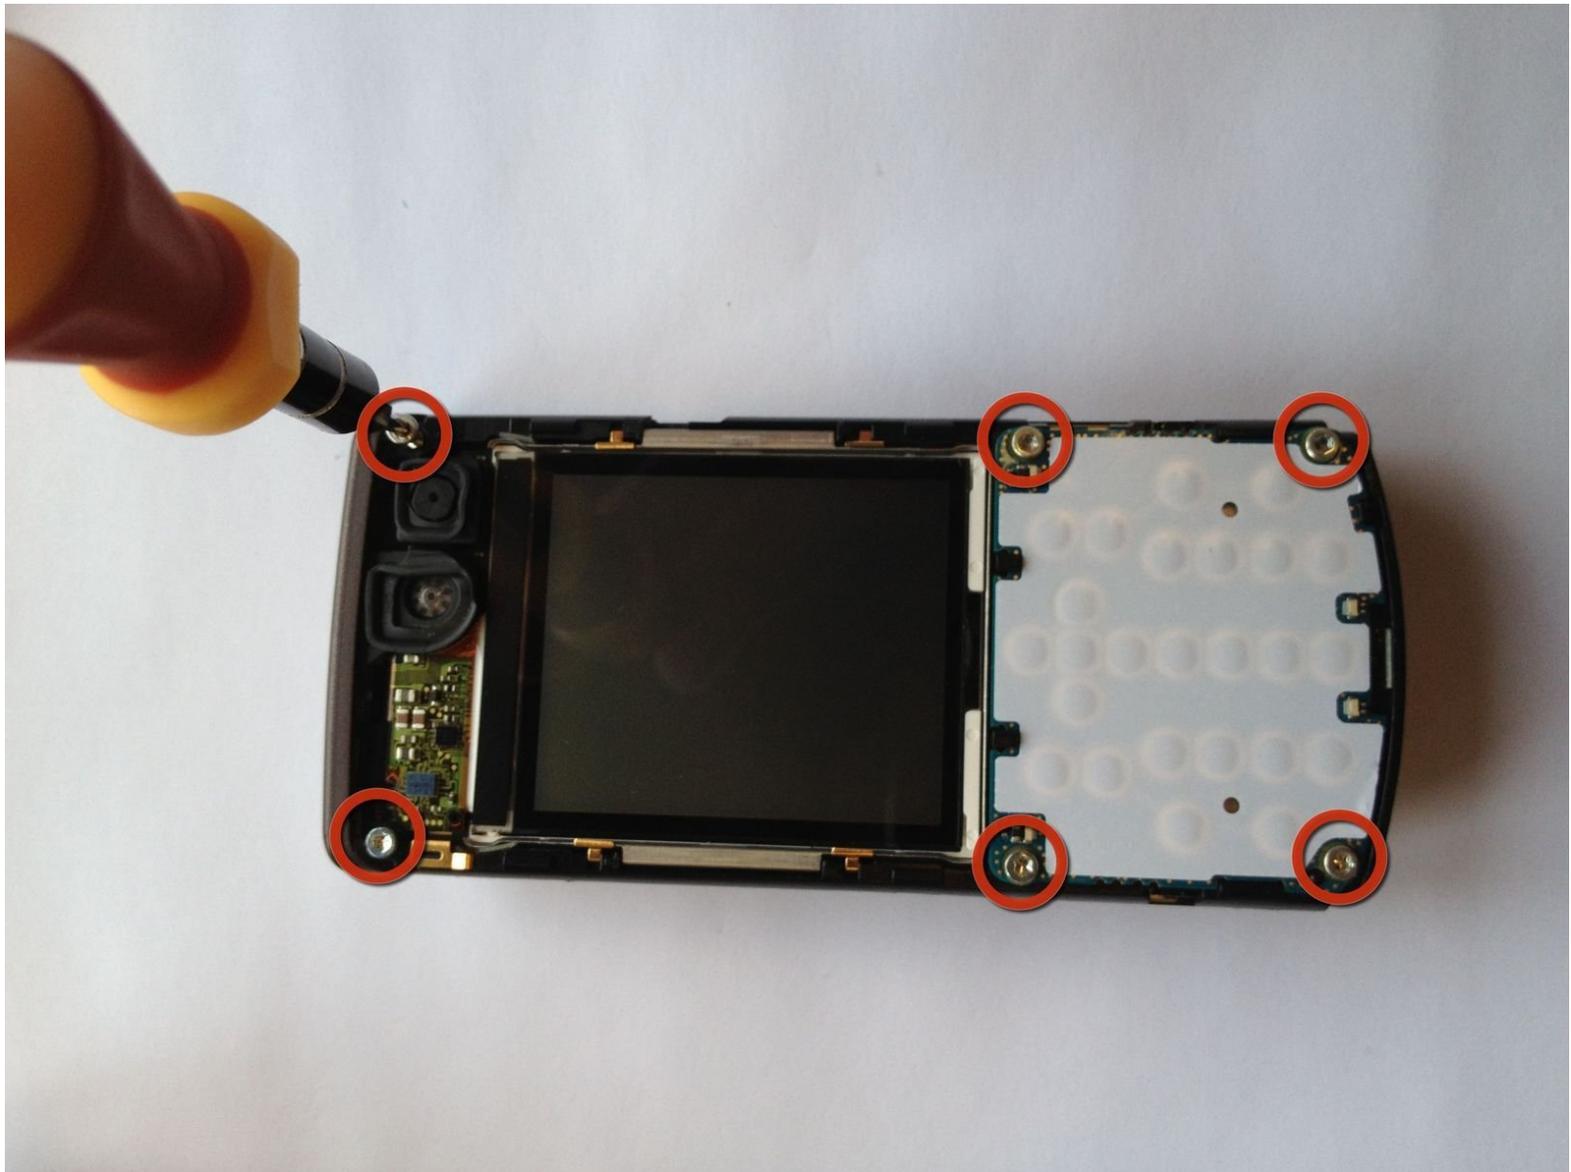

 **TOOLS:**

- [iFixit Opening Tools](#) (1)
  - [T6 Torx Screwdriver](#) (1)
-

## Step 1 — Battery

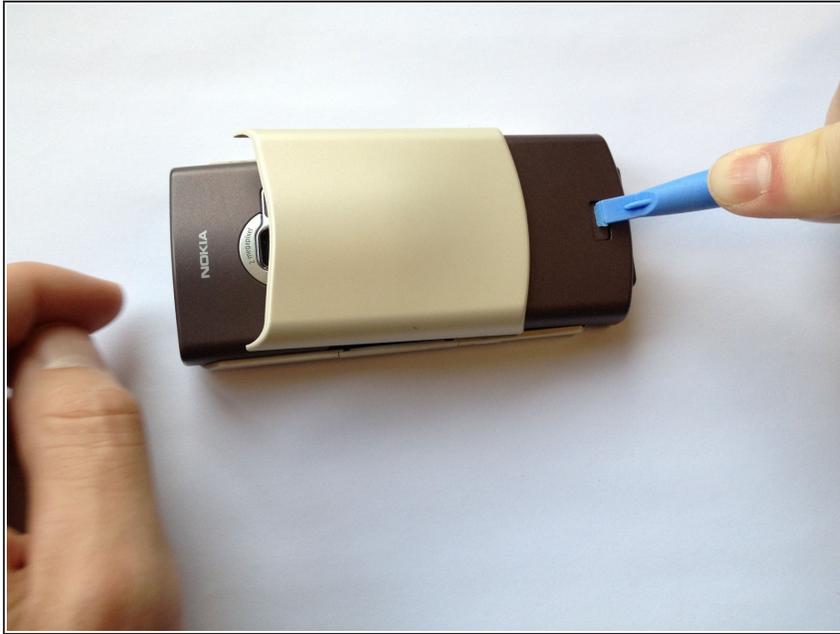

- Orient the phone as shown.
- Press the button with the plastic opening tool and slide the back case downward relative to the phone.

## Step 2




- Remove the battery cover by lifting it away from the phone.

### Step 3




- Insert the plastic opening tool into the marked space.
- Lift up the side of the battery closest to the bottom edge of the phone using the plastic opening tool.

### Step 4

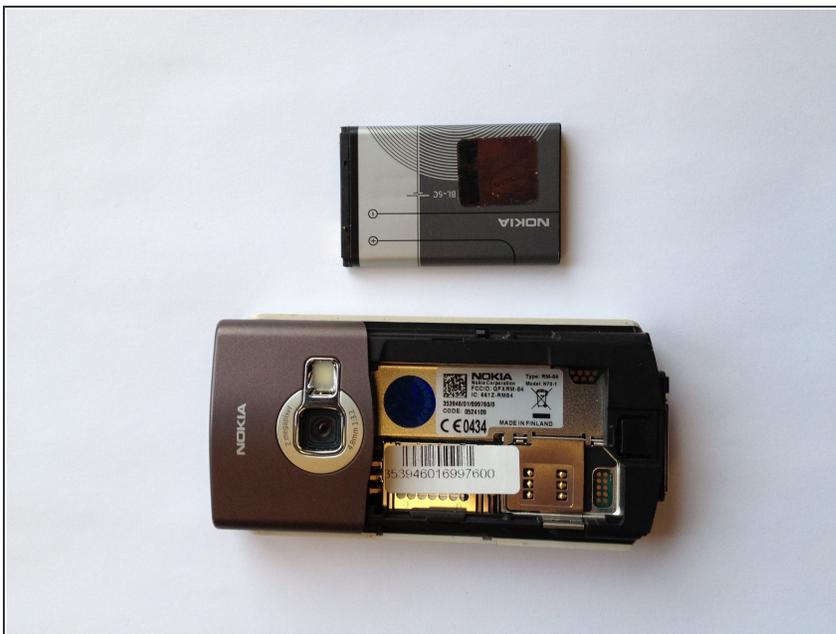

- Remove the battery from the phone.

## Step 5 — Keypad

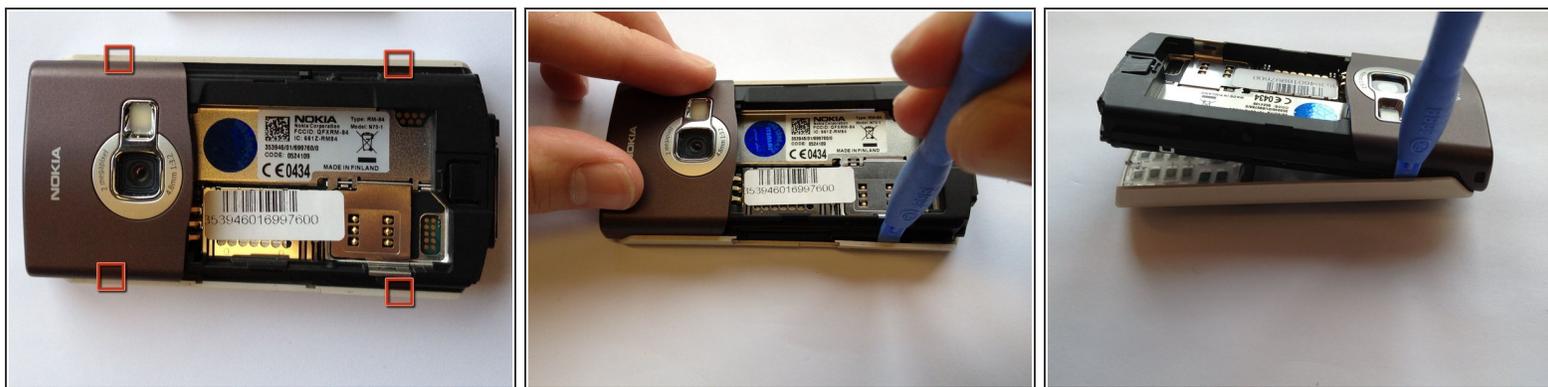


- Insert the plastic opening tool in the marked areas in between the front and back covers.
- Pry each corner with the plastic opening tool until the front case completely detaches.

## Step 6




- ☞ Orient the phone so that the keypad is facing you.
- Remove the keypad by lifting it away from the phone.

## Step 7 — Back Camera

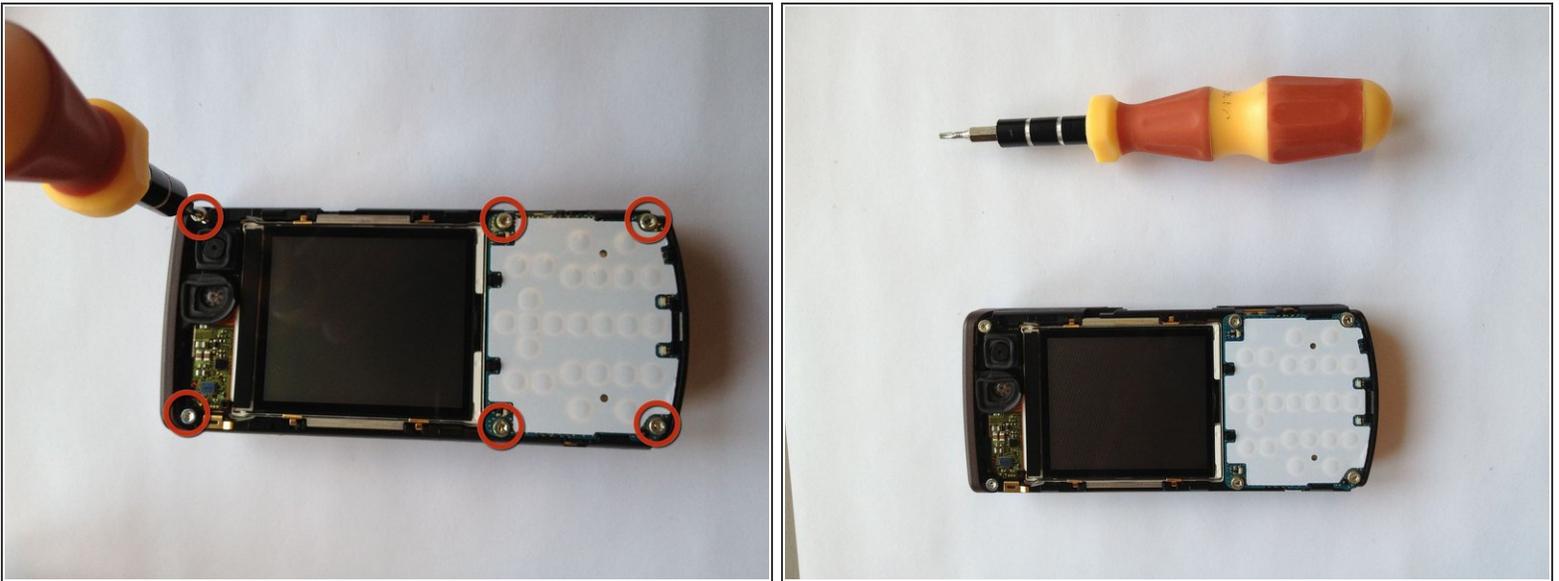


- Using T6 Torx screwdriver remove the six 15 mm torx screws.

## Step 8

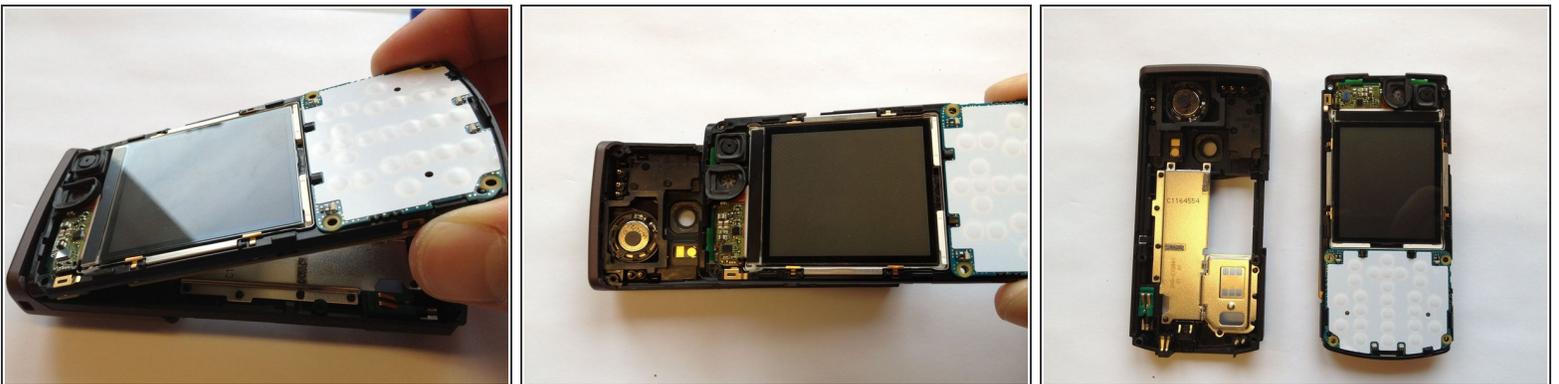

- Separate the front panel from the back by lifting the bottom of the front panel at a 45 degree angle.
- Remove the front panel by lifting the panel away from the phone at a 45 degree angle.

## Step 9

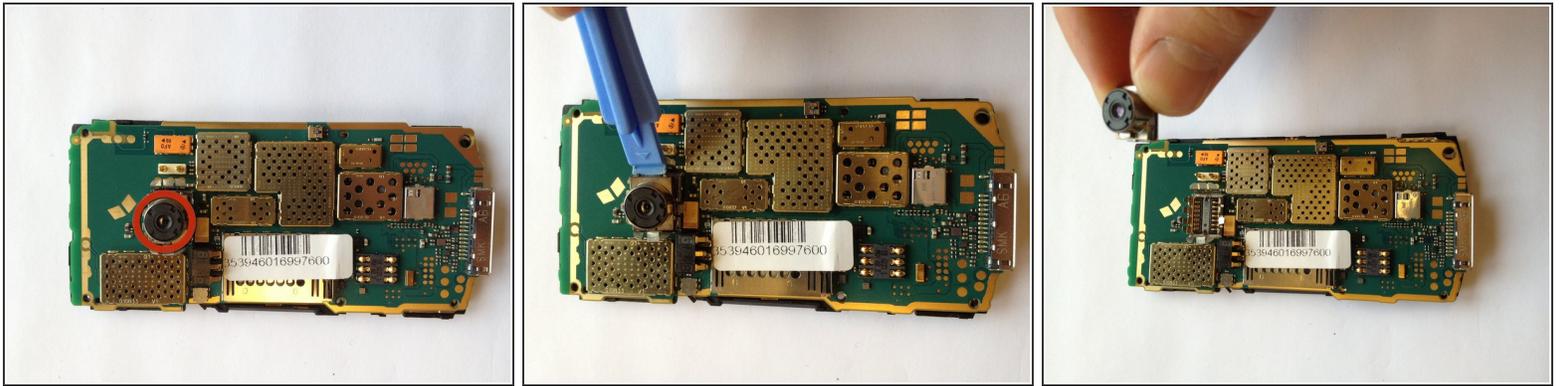

- Locate the rear circuit board by flipping over the front panel.
  - Locate the rear camera and by using the plastic opening tool, gently lift the camera out of the slot.
- ⚠ Caution: Be careful when prying camera out of the slot for the connections are fragile.

To reassemble your device, follow these instructions in reverse order.