



# Samsung Glyde Motherboard Replacement

This guide will provide a step by step procedure for installing the motherboard

Written By: Stephen





## TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery




- Using your thumb, press down and slide the back cover away from the camera.

## Step 2



- Remove the battery from the phone by using your plastic opening tool to find a gap at any edge of the battery and lifting the battery up.

## Step 3 — Motherboard

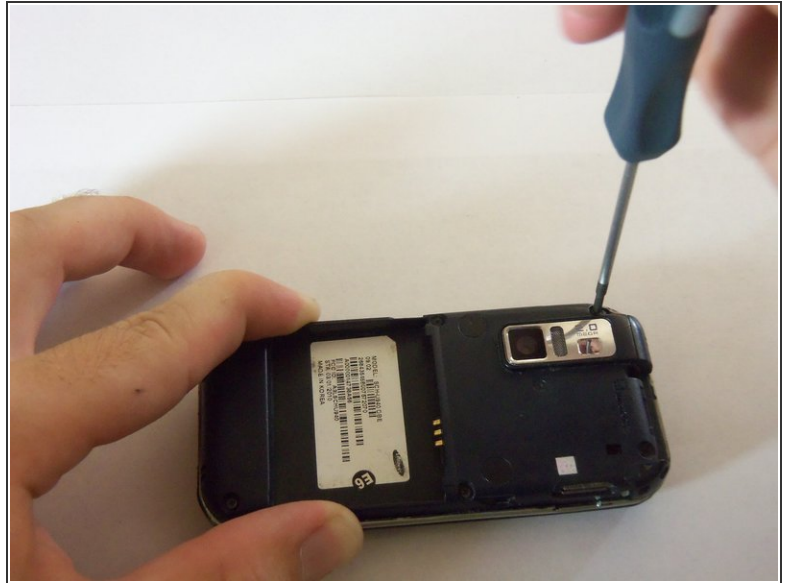

- Using a Phillips#00 screw driver, remove the six 4mm screws holding the back case together.



## Step 4





- Use a plastic opening tool to pry the case off. To do this, find a gap on any side of the phone, top preferably, and slip the tip of the tool in the gap
- Now use moderate strength and slowly maneuver the tool around the outside until the case becomes loose.
- Using your fingers, take the case off.

## Step 5



- The green film above the camera is the camera connector to the motherboard.
- Use a plastic opening tool to disconnect the camera connector.


## Step 6

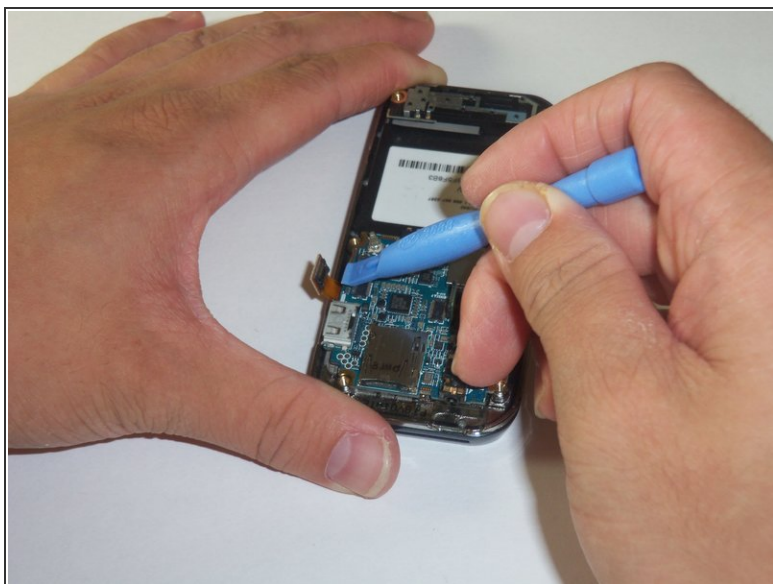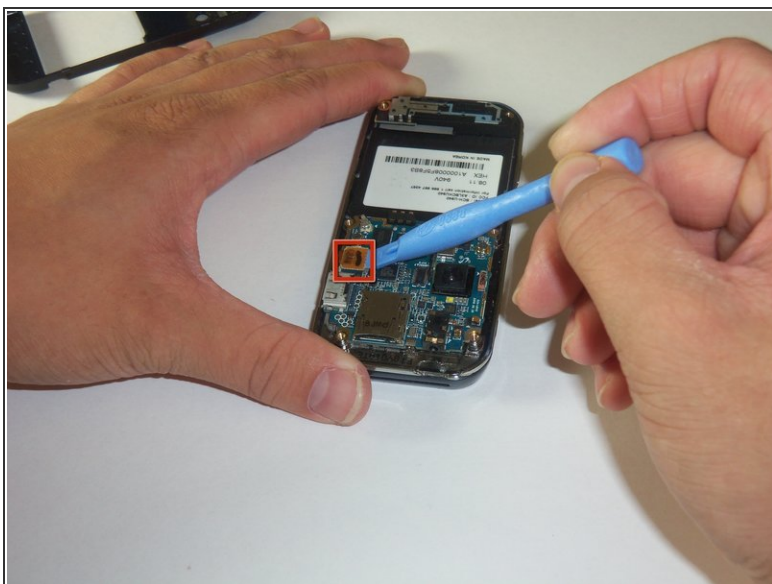

- The golden film connector connects the keyboard to the motherboard.
- Use a plastic opening tool to disconnect the keyboard connector.




## Step 7

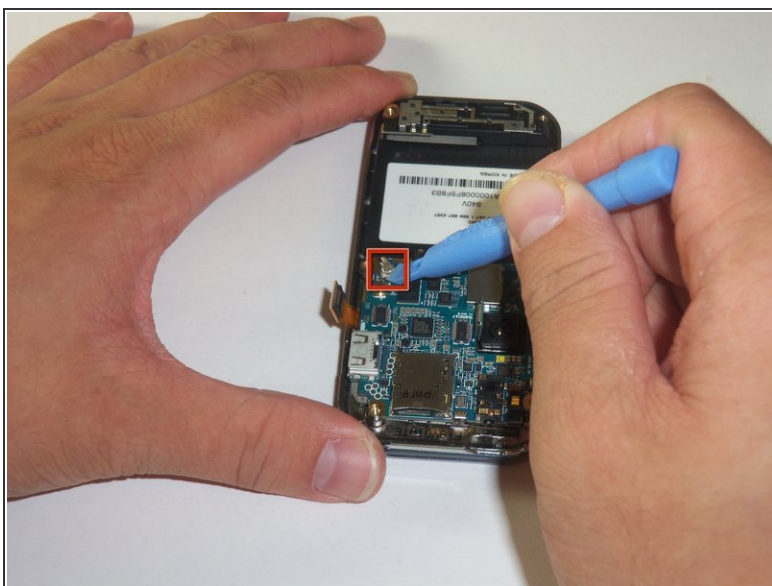


- The circular connector holds the motherboard in place.
- Using a plastic opening tool, disconnect the circular connector.

## Step 8

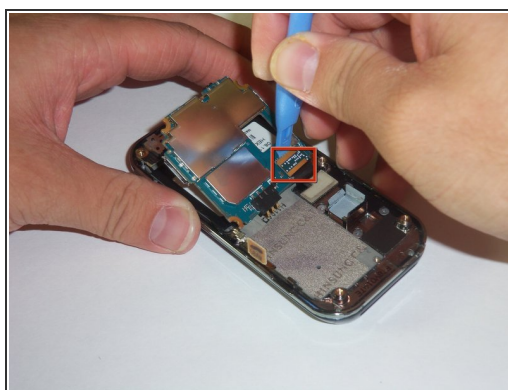

- There is a LCD connector underneath the motherboard.
- Gently lift the far edge of the motherboard upwards toward the center of the phone.
- Using a plastic opening tool, disconnect the LCD connector.

## Step 9

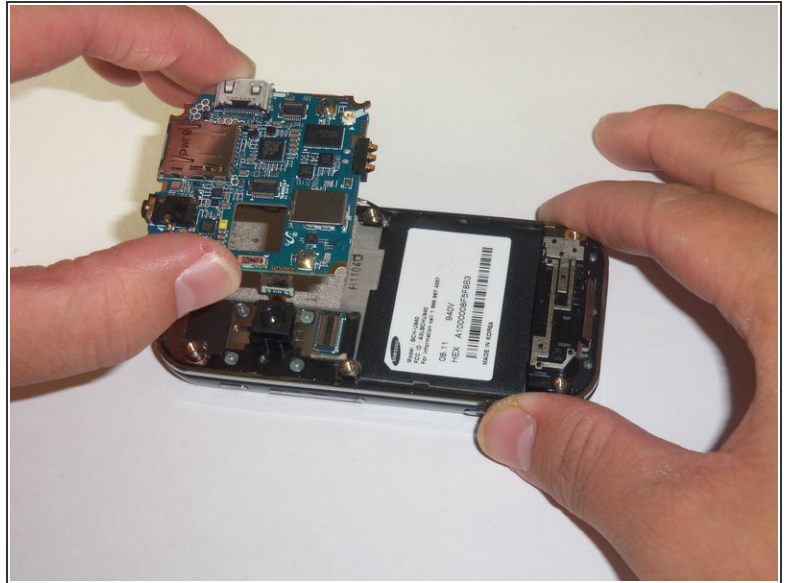

- After disconnecting the four connectors, gently lift the motherboard up with your fingers.
- Place the motherboard in a secure area.

To reassemble your device, follow these instructions in reverse order.