



# iPhone 4S Power Button Replacement

Internal prerequisite with front facing camera removed.

Written By: Walter Galan



---

# INTRODUCTION



Internal prerequisite with front facing camera removed.



## TOOLS:


- [Phillips #000 Screwdriver](#) (1)
  - [Tweezers](#) (1)
-

## Step 1 — Power Button

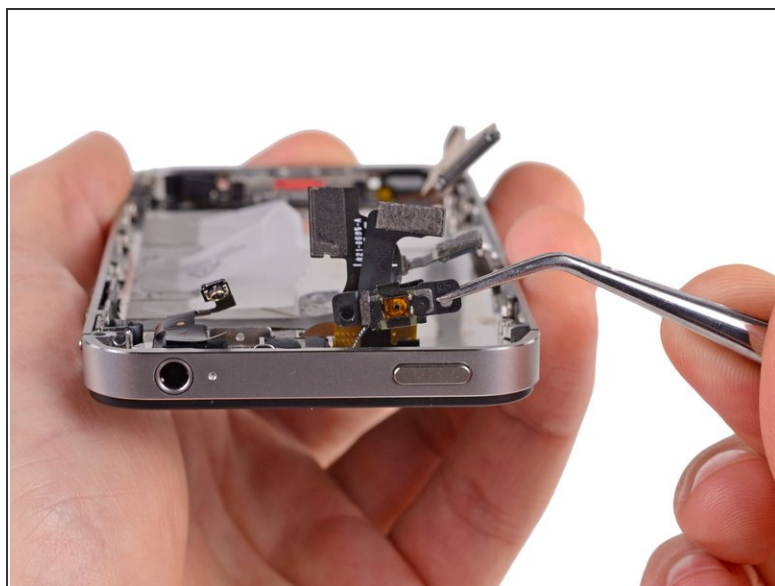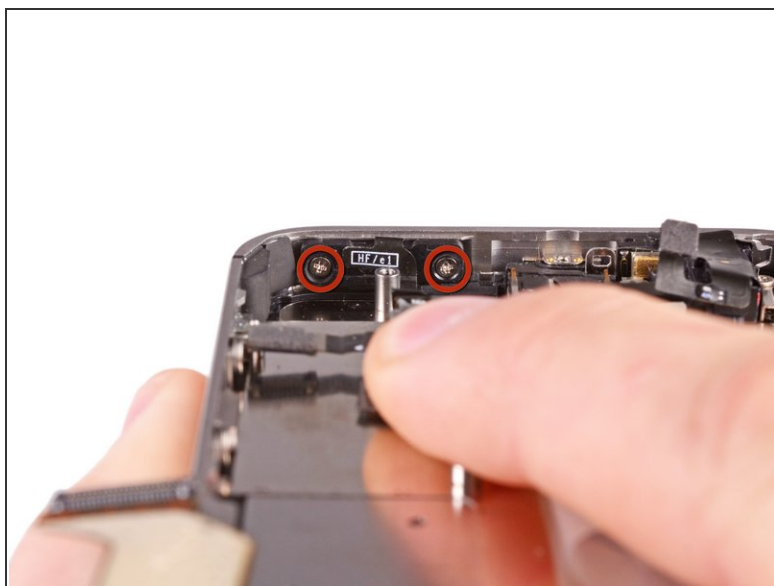

- Remove the two 1.6 mm Phillips screws securing the power button bracket to the outer case.
  - ⚠ Take extra care with the display cables, which can prevent easy access to the right-hand screw. The cables are easily damaged.
- Slightly pull the power button bracket away from the outer case.

## Step 2

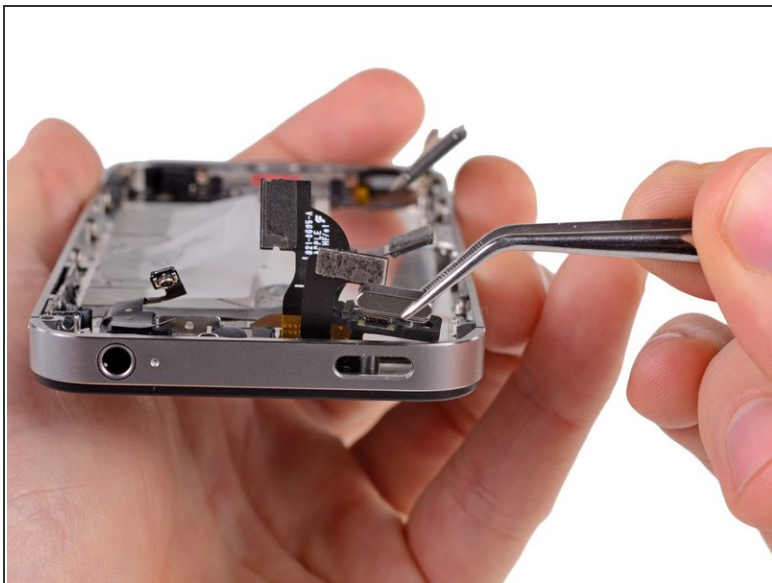

- Use a pair of tweezers to remove the power button from the iPhone.
- ⓘ During reassembly, take note of the correct orientation of the power button. The metal loop should be facing downwards and the outward edges should be on top.

To reassemble your device, follow these instructions in reverse order.