




HP Pavilion dv6500 RAM Card Replacement

In this guide, we will explain in a few short...

Written By: Andrew

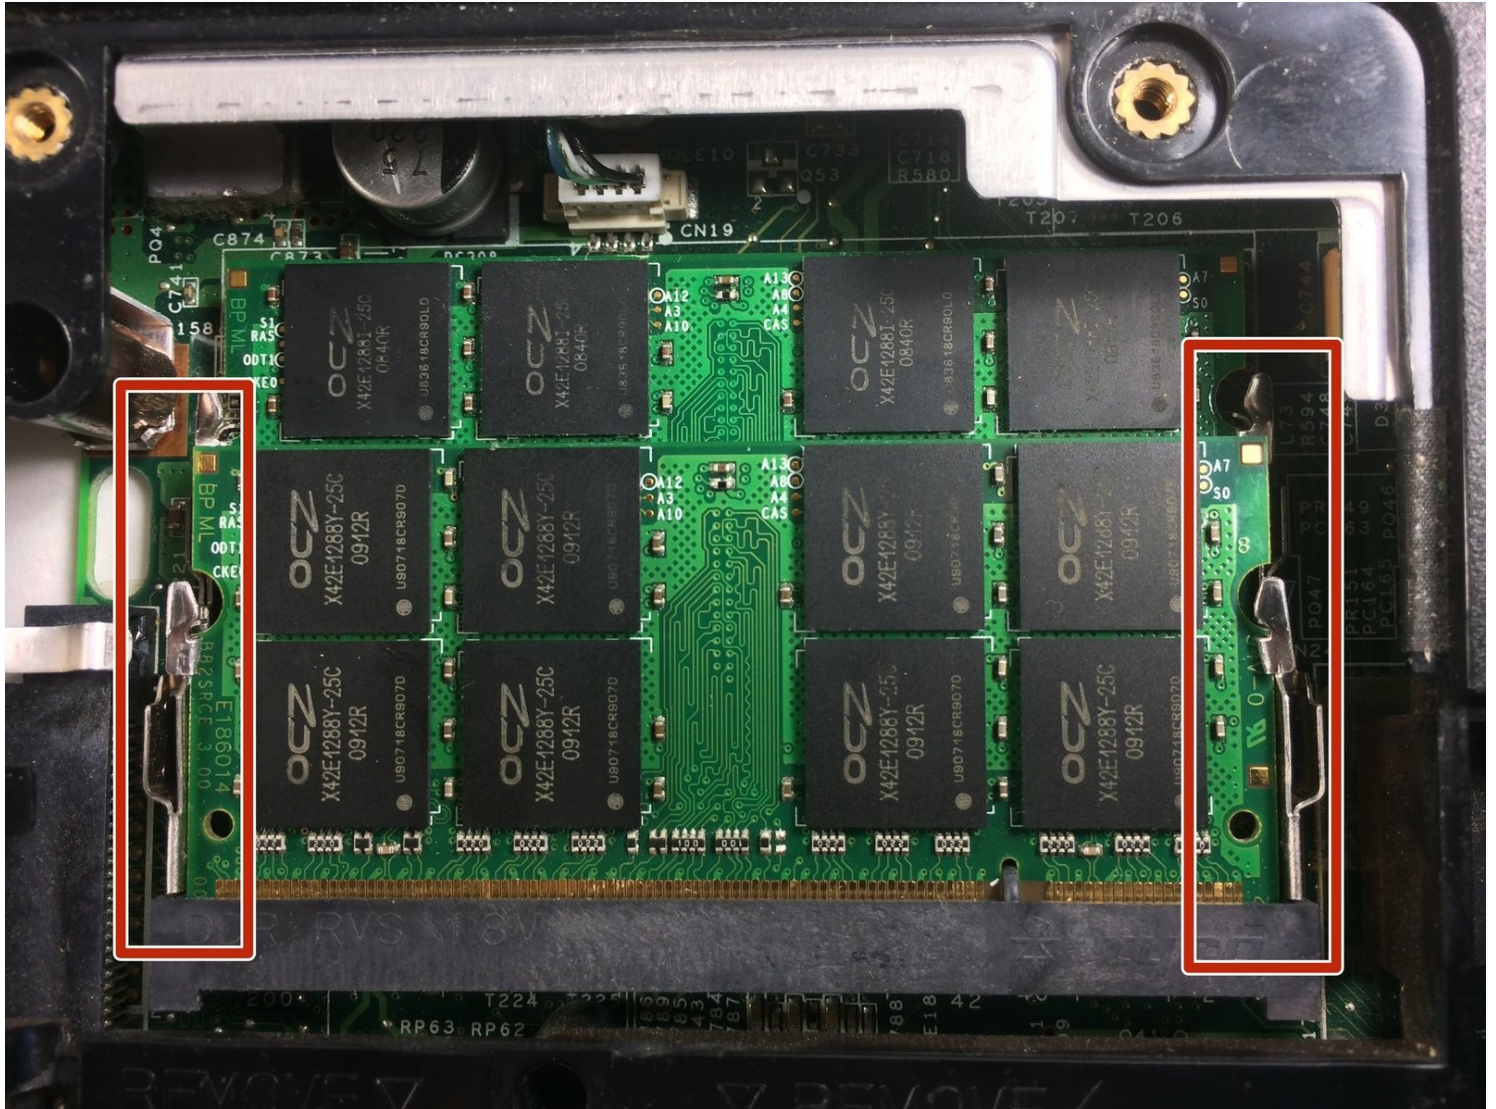

INTRODUCTION

In this guide, we will explain in a few short steps the process that will need to be taken in order to replace either of the RAM cards inserted in the laptop.

TOOLS:

[Phillips #0 Screwdriver](#) (1)

[Phillips #00 Screwdriver](#) (1)

Step 1 — Battery



- Flip computer face down.


Step 2



- Remove the battery by sliding the button to the side.


⚠ Be careful if the battery is leaking or appears punctured in anyway. Battery acid is harmful and may cause burns.

Step 3 — Back Panel

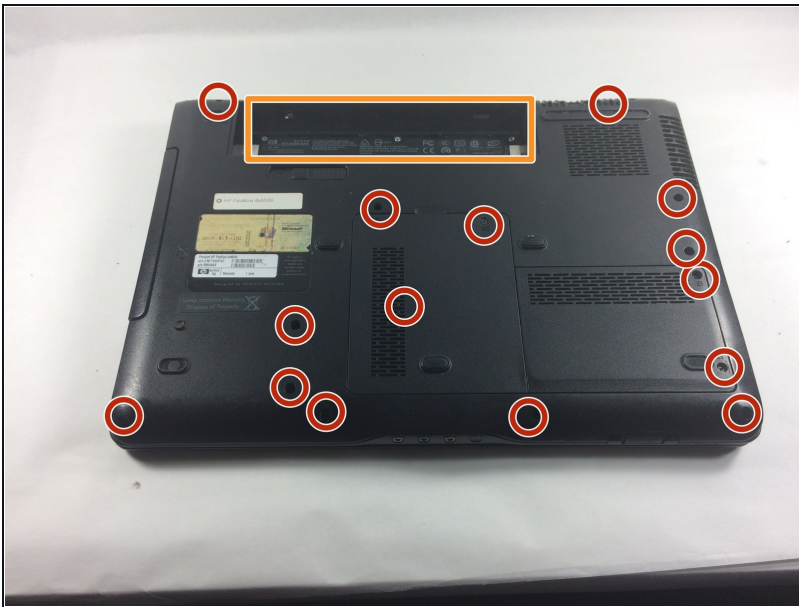

- Remove fifteen 7.0mm PH0 screws.
- Remove five silver 4.0mm PH 0 screws inside the cavity for the battery.

Step 4 — RAM Card

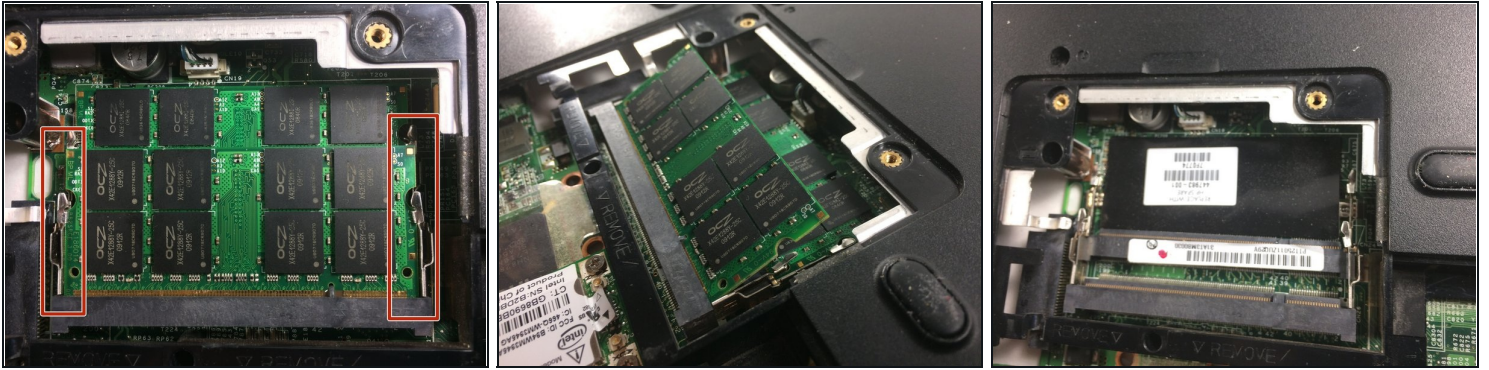

- Using your fingers or thin non metallic [tweezers](#), pull the 2 silver levers on either side of the RAM card outward to until the ends pop up.
- Slide the RAM cards out of their sockets.

To reassemble your device, follow these instructions in reverse order.