




Teenage Engineering OP-1 Connector Board Disconnection

Use this guide to disconnect the Connector Board of the OP-1.

Written By: teenage engineering

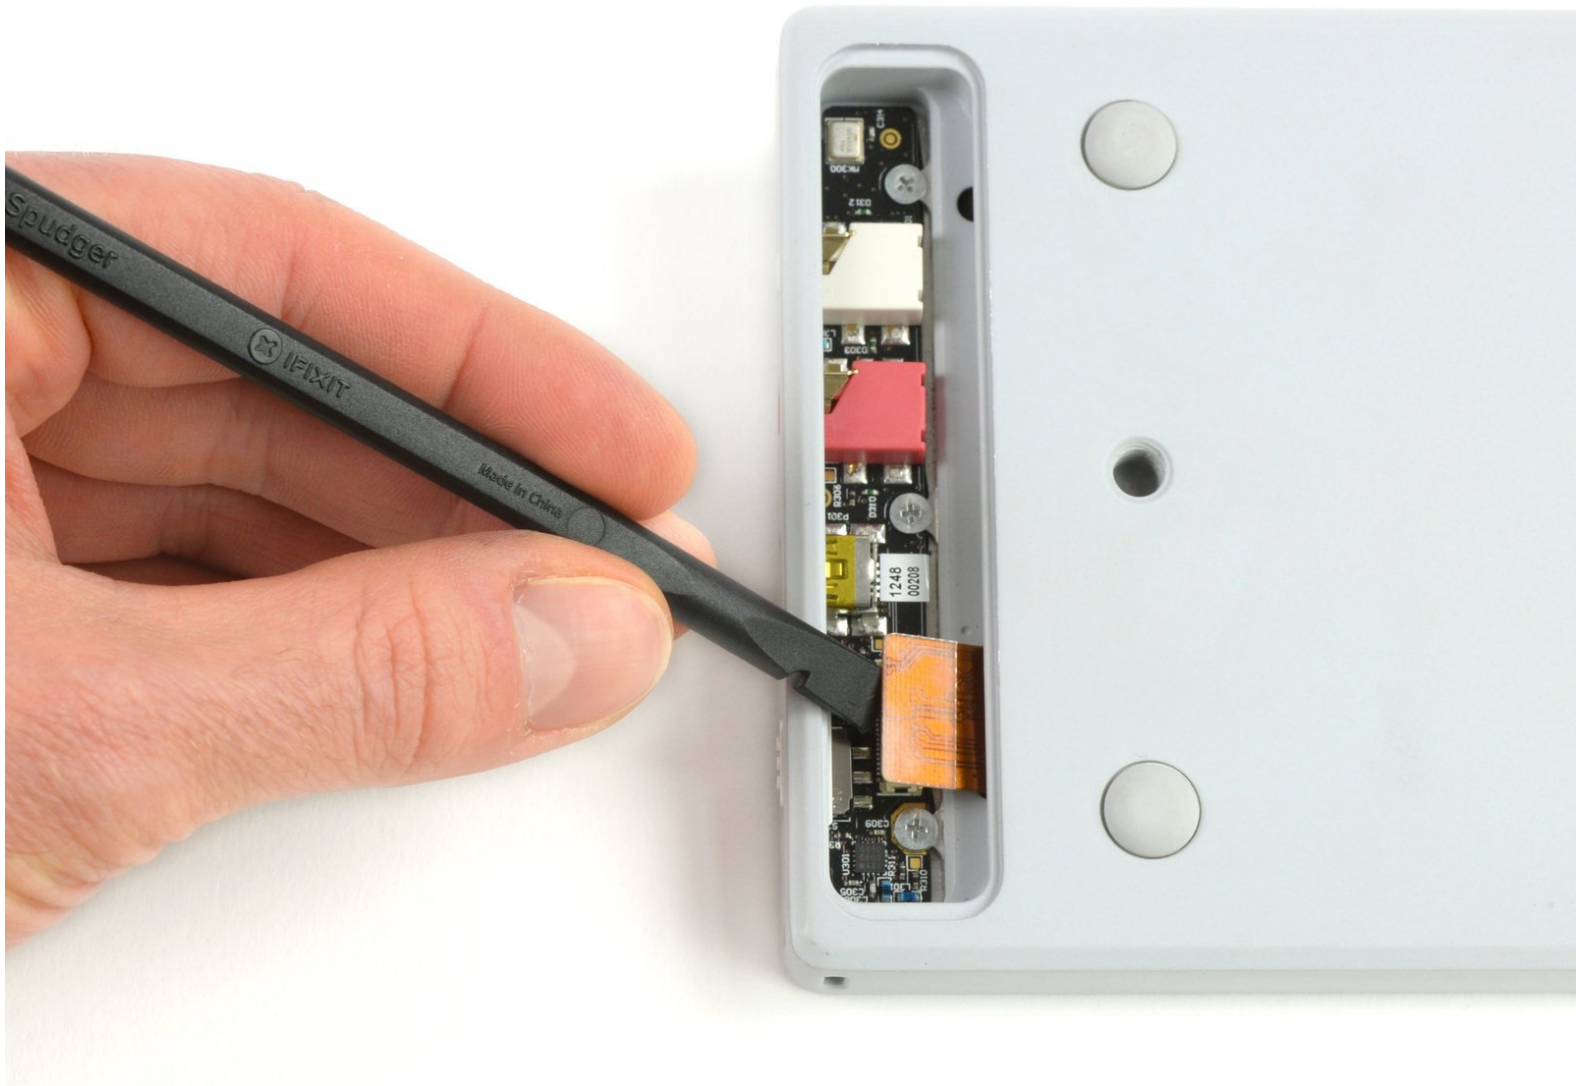

INTRODUCTION

Use this guide to disconnect the Connector Board of the OP-1.

TOOLS:

- [Jimmy](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Remove Back Panel



- Open the back panel by using a Jimmy on the side of the panel. Be careful not to damage the OP-1 coating.
- Lift the back panel and remove it. The Connector Board is revealed.
- Disconnect the flex connector by lifting it up with a spudger.

To reassemble your device, follow these instructions in reverse order.