

LG VX8700 LCD Screen Replacement


Written By: Stanley Thomas





- Phillips #0 Screwdriver (1)
- Soldering Iron (1)
- iFixit Opening Tool (1)

Step 1 — Battery

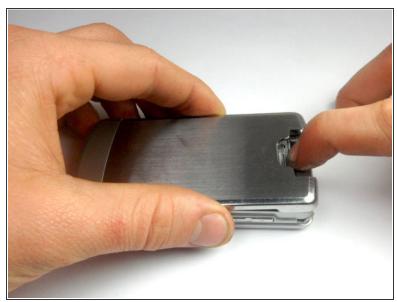



Make sure the phone is completely off.


Remove the back cover by sliding the tab away from the phone using one finger.





- Lift one side of the battery using a plastic opening tool or your fingers.
- Carefully remove the battery and set it aside.
- Mhen installing the new battery, make sure to align the metal pins with those of the phone.

Step 3 — Front Bezel

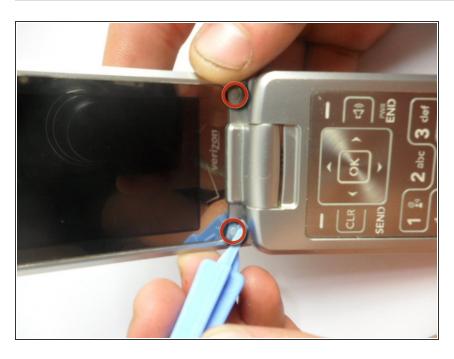

- Turn your phone around and open the flip phone.
- Locate the two grey rubber plugs on the LCD portion of the phone. These plugs cover up two screws.
- Remove the two grey screw-covers at the bottom of the screen





- Remove the screen by using the tab to eject the screen.
 - There is a gap between the case and the screen near the ear piece
 - Insert the plastic opening tool in the gap and pry the screen up.
- The plastic screen cover is glued onto the phone, do not be alarmed if it may be difficult to pry it off.



 Unscrew the four corner 3.21mm screws to separate the top cover of the phone


Step 6






- Turn your phone around
- Remove the top cover of the phone by inserting the plastic opening tool into the groove.
- Carefully open the cover.


Step 7 — Ear Piece

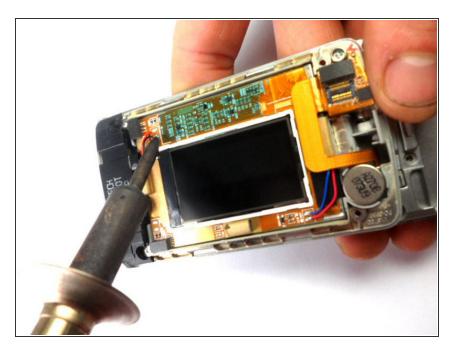

- Desolder the top ear piece using a soldering iron to remove the component
- The ear piece is the black component that is located at the top with black and red wires

Step 8

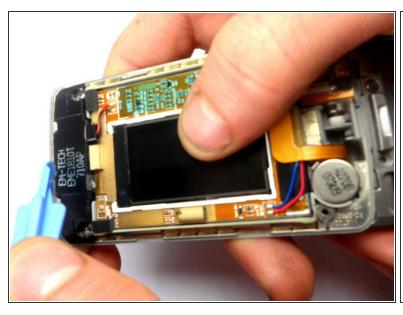

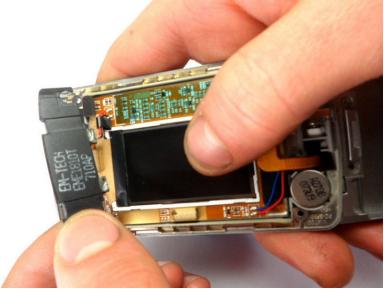

Remove the ear piece from the phone by lifting it using a plastic opening tool.

Step 9 — LCD Screen




 Desolder the wires connected to the LCD board using a soldering iron

Step 10



 Disconnect the Ribbon connecting the two pieces carefully with the plastic opening tool.

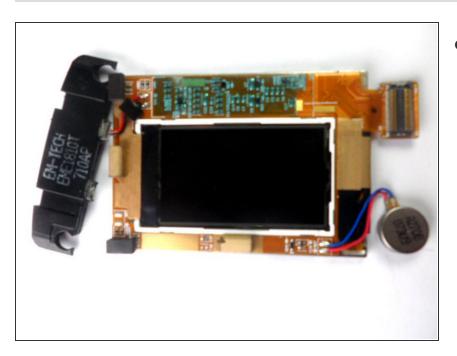

Remove the LCD screen.

To reassemble your device, follow these instructions in reverse order.