



Toshiba Satellite C55-C5240 Battery Replacement

This is a guide that explains how to remove the battery from the laptop.

Written By: Abdel Feliciano Gonzalez



INTRODUCTION

If your battery is not working and you need to take it out, do the following steps to remove it properly.



TOOLS:


- [Phillips #1 Screwdriver](#) (1)




PARTS:

- [Toshiba Satellite L50-B C55-C and C70-C Series Replacement Laptop Battery](#) (1)

Step 1 — Battery

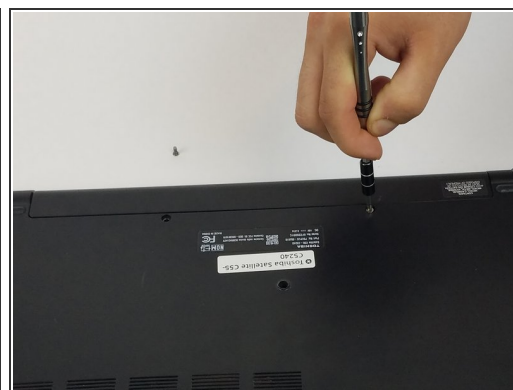

 Make sure you turn off the laptop before starting.

- Remove the two 6.5mm PH1 Phillips screws securing the battery.

Step 2



- Pull the battery out, keeping it flat and parallel to the laptop so that it slides out easily.

To reassemble your device, follow these instructions in reverse order.