


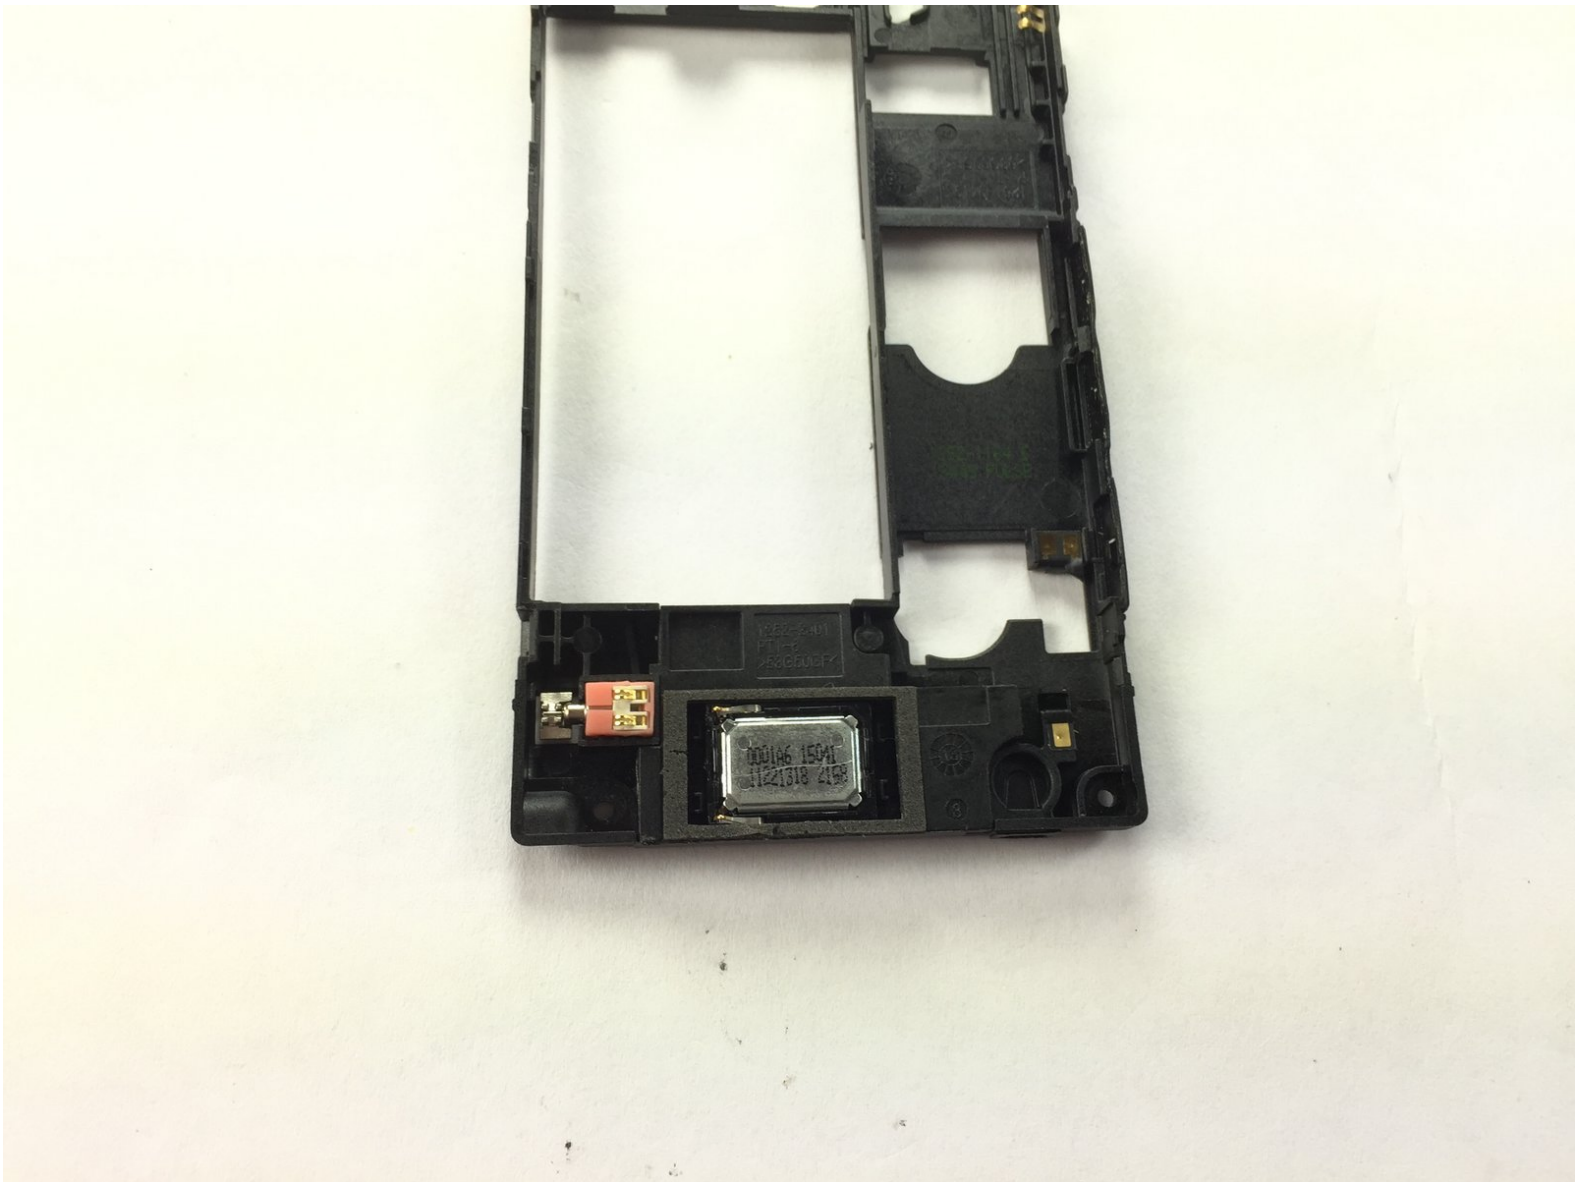

Sony Xperia Sola Speaker Replacement

If there is no sound coming out of your Sony Xperia Sola, you may need to change the speaker. This guide will show you how to replace it.

Written By: Bo Wu



INTRODUCTION

If there is no sound coming out of your Sony Xperia Sola, you may need to change the speaker. This guide will show you how to replace it.



TOOLS:

- [64 Bit Driver Kit](#) (1)
 - [Tweezers](#) (1)
 - [Small Plastic Spudger](#) (1)
-

Step 1 — Speaker



- Lay the phone as shown and put the camera facing up.

Step 2





- Push the back cover as shown, then lift the cover off.

Step 3




- Remove the five screws as shown on the phone by using 26 Bit Kit.
- Use a T6 screwdriver bit to remove top two screws.
- Use a J000 screwdriver bit to remove the bottom two screws.
- Use a T3 screwdriver bit to remove the middle screw (close to camera).

Step 4

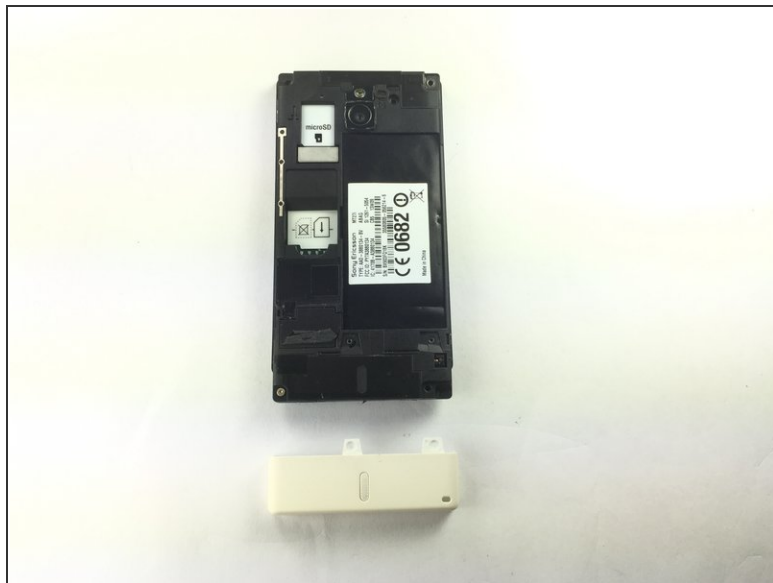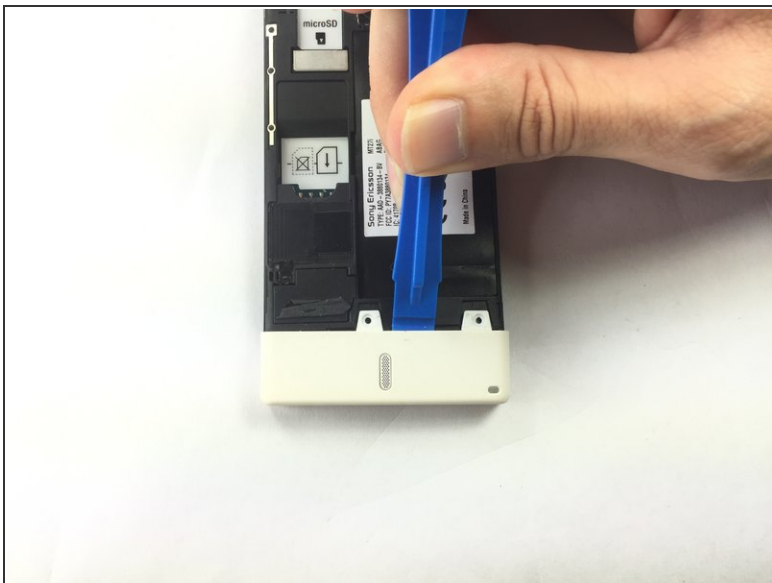


- Use plastic opening tool to remove the bottom white cover as shown.

Step 5

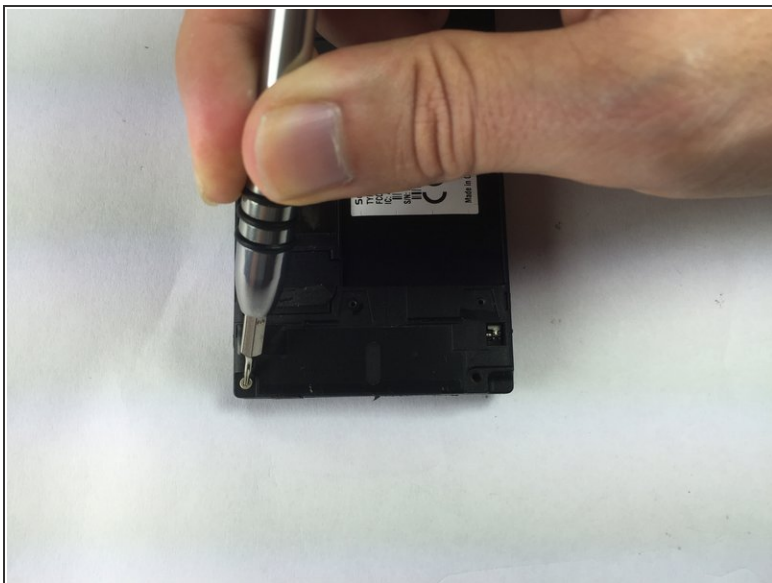

- There are two additional screws under the bottom white cover as shown.
- Use T3 drivers to remove two additional screws as shown.

Step 6

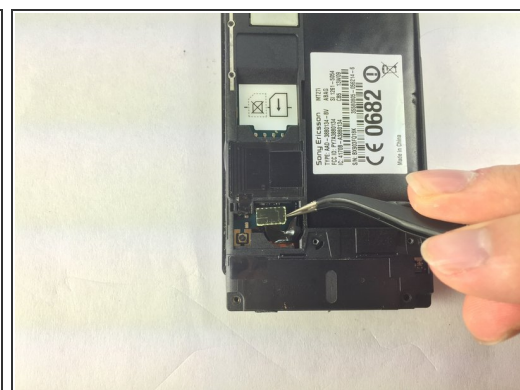


- Using plastic opening tool, lift to remove the small black cover on the bottom left of phone as shown.
- Then, using tweezers to lift the connector straight up to disconnect the battery's circuit as shown.

Step 7



- Turn the phone onto its side and insert a flat object and gently remove cover, using plastic opening tool as shown.

Step 8

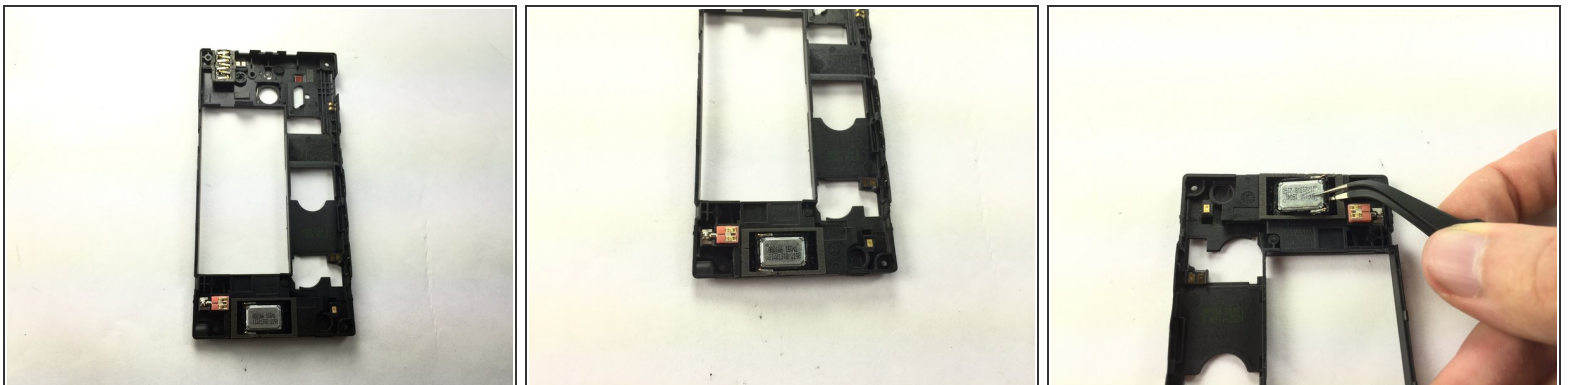

- Flip over the black back cover and locate the speaker phone at the bottom, then use the tweezers to remove the speaker. It is glued to the back cover so a little force will be needed.

To reassemble your device, follow these instructions in reverse order.