



# Nexus S Motherboard Replacement

Written By: Walter Galan



---

## INTRODUCTION

Internal prereq when SIM board is out.



### TOOLS:

- [iFixit Opening Tools](#) (1)
-

## Step 1 — Motherboard



- Insert the flat edge of a plastic opening tool underneath the headphone jack connector and pry upwards.

## Step 2




- Repeat the same procedure as the previous step to disconnect the digitizer connector.

### Step 3



- Use a plastic opening tool to pry the speaker connector (highlighted in red) from its socket on the motherboard.
- Remove the three Phillips screws securing the motherboard to the inner assembly.

### Step 4

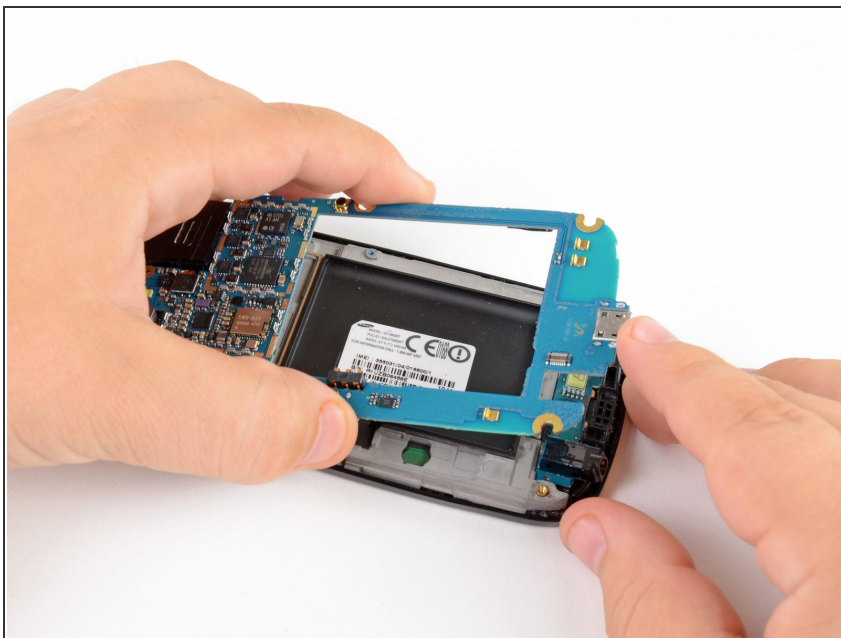

- Lift and remove the motherboard from the Nexus S, minding any cables that may get caught.

To reassemble your device, follow these instructions in reverse order.