


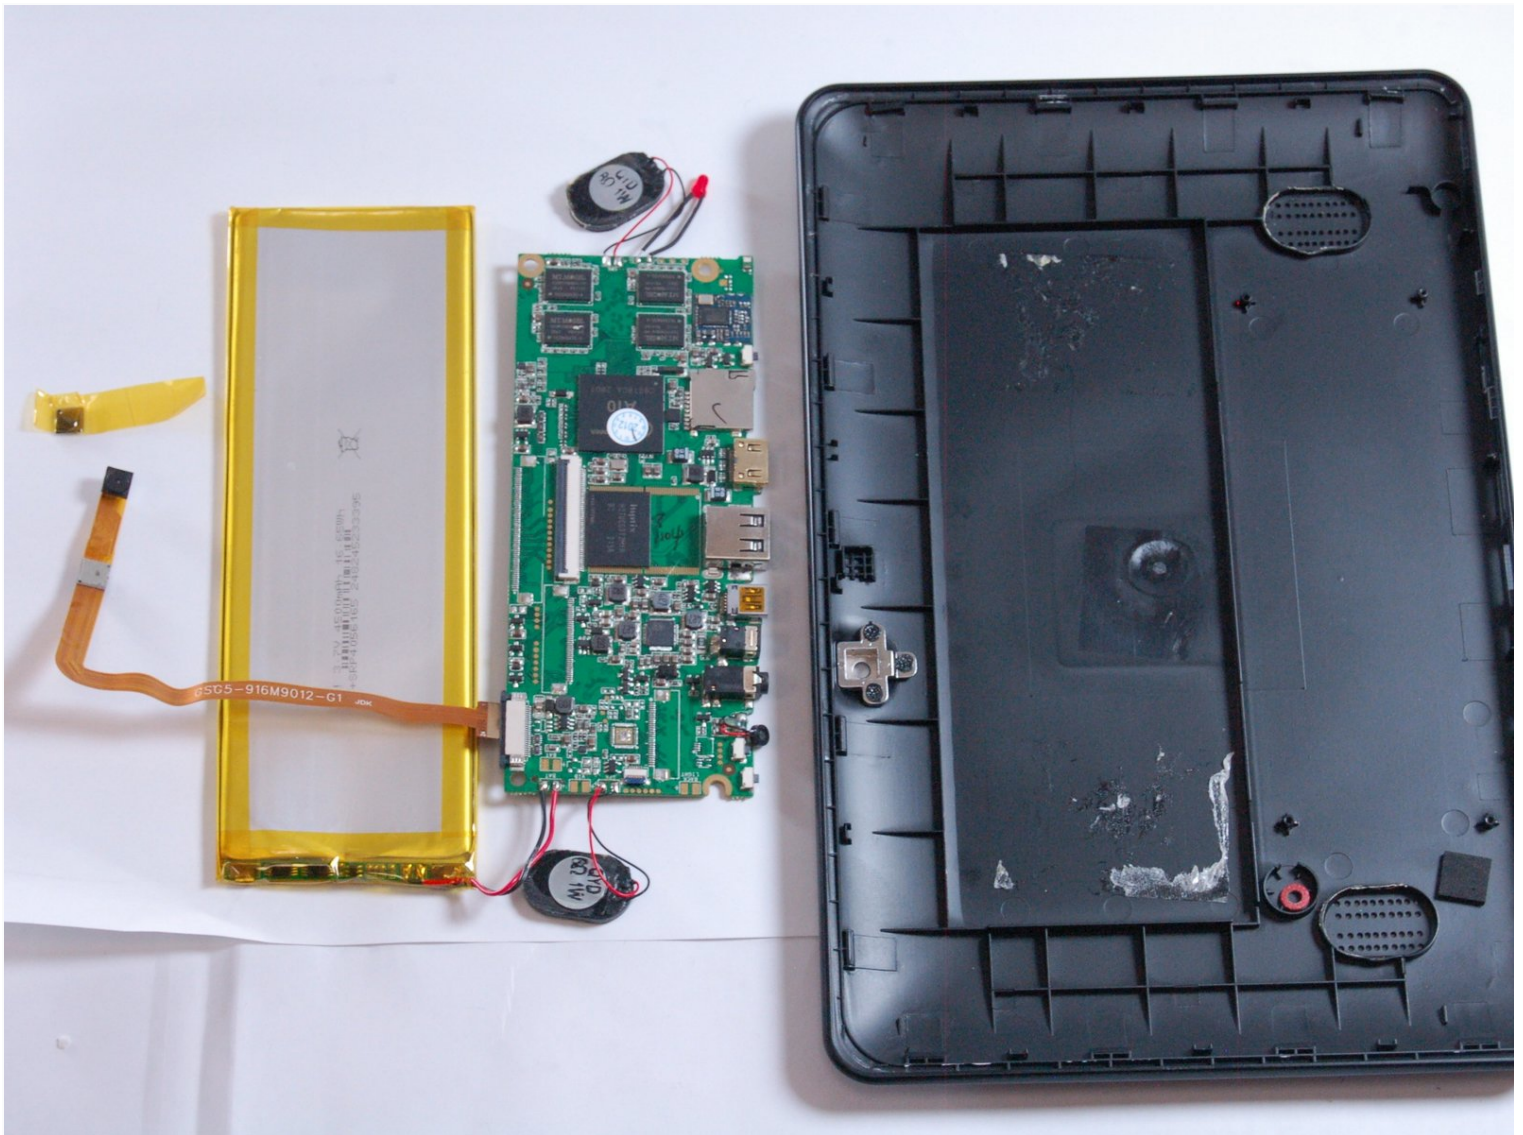

Supersonic Matrix SC-91MID Back cover Replacement

In this guide, you will remove the back cover...

Written By: Jake



INTRODUCTION

In this guide, you will remove the back cover of the Supersonic Matrix SC-91MID to access the internal hardware.

TOOLS:

[Tweezers](#) (1)

[Spudger](#) (1)

[iFixit Opening Tool](#) (1)


[iFixit Opening Picks \(Set of 6\)](#) (1)

Step 1 — Back cover



- Use an opening tool to separate the back cover of the tablet by wedging the tool into the crease between the back cover and touchscreen.
- Work your way around the perimeter of the tablet to detach the back cover and remove it carefully so you don't rip any cables attached.

Step 2

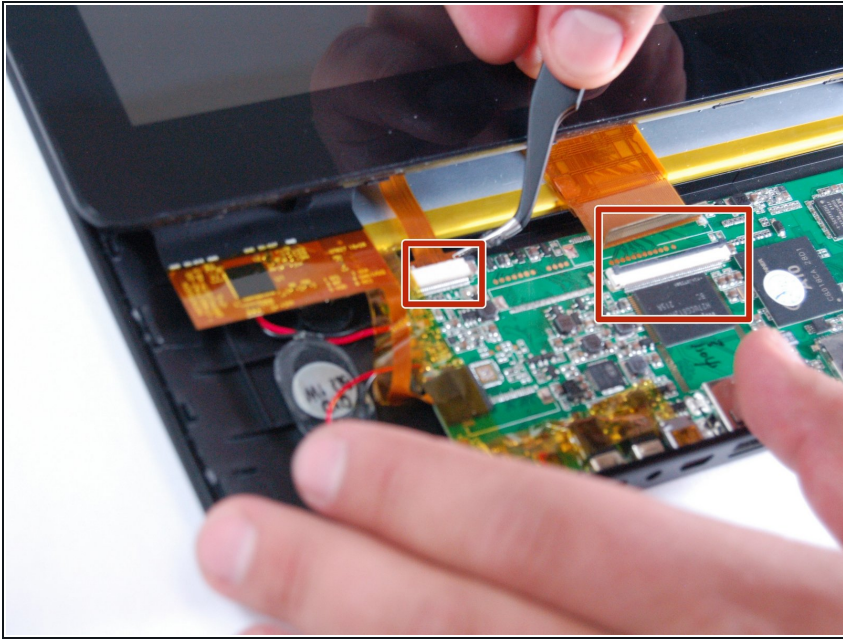

- Use a spudger to carefully disconnect the display ribbons from the motherboard.

Step 3



- To remove the battery, use the spudger to pry the battery up and away from the tablet.
- ⓘ You might have some difficulty removing due to glue holding the battery in place.
- ⚠ Work your way around the perimeter of the battery with the spudger or opening picks gently so you don't bend or puncture the battery.

Step 4



- Use a spudger to remove the speakers.
- To remove the motherboard, remove the three screws that hold the board in place with a Phillips screwdriver.

To reassemble your device, follow these instructions in reverse order.