



Lenovo Yoga 710-14IKB Battery Replacement

How to remove or replace the battery on your Lenovo Yoga 710 laptop.

Written By: Grant Doerksen



INTRODUCTION

Use this guide to remove or replace the battery on your Lenovo Yoga 710 laptop.



TOOLS:


- [iFixit Opening Tool](#) (1)
- [Phillips #00 Screwdriver](#) (1)
- [T4 Torx Screwdriver](#) (1)



PARTS:

- [Lenovo Yoga 710 14" and 15" Battery](#) (1)
- [Lenovo IdeaPad Yoga 710-14 Lower Case](#) (1)

Step 1 — Back Cover

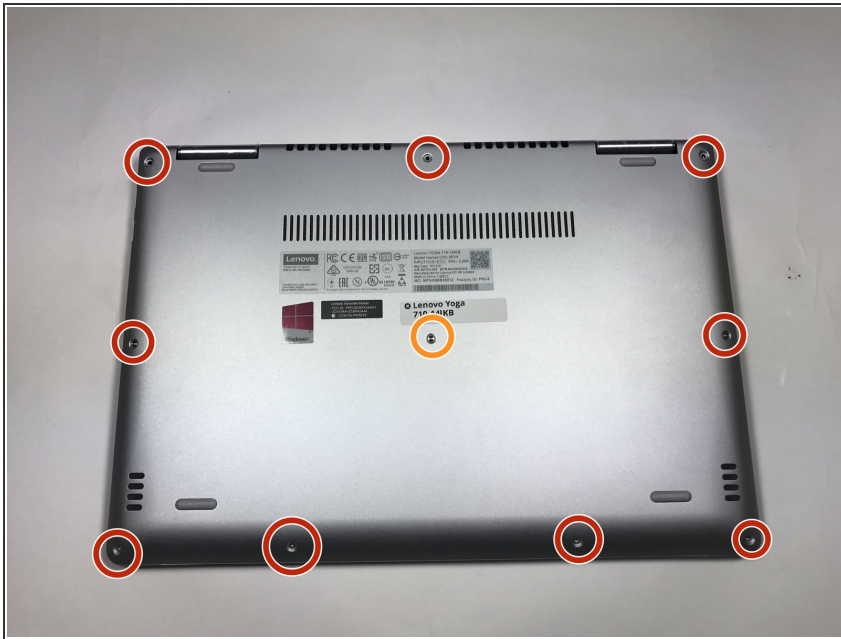

⚠ Ensure your device is completely OFF before starting this guide.

- Use a Torx T4 screwdriver to unscrew the nine 5 mm screws holding the cover in place.

- Use a Torx T4 screwdriver to unscrew the 8 mm screw in the center.

★ When, reassembling, make sure not to tighten the screws too much or you may risk cracking the plastic cover.

Step 2



- Use the plastic opening tool to pry the cover up and away from the laptop, starting at one end and working your way around the cover.

i The cover is large and flat and made of thin plastic. It cracks easily, so make sure not to pry too hard.

Step 3 — Battery



- Use a Phillips #00 screwdriver to remove the four 3 mm screws holding the battery in place.
- ⓘ Be careful not to cross-thread the screws. Also, don't let the screws fall down into the laptop case.

Step 4



- Use your fingers or an opening tool to slide the battery connector out of its motherboard socket.

Step 5



- Remove the battery.

To reassemble your device, follow these instructions in reverse order.

Take your e-waste to an [R2 or e-Stewards certified recycler](#).