






## TOOLS:

- [T10 Torx Screwdriver](#) (1)
-




## Step 1 — Optical Drive

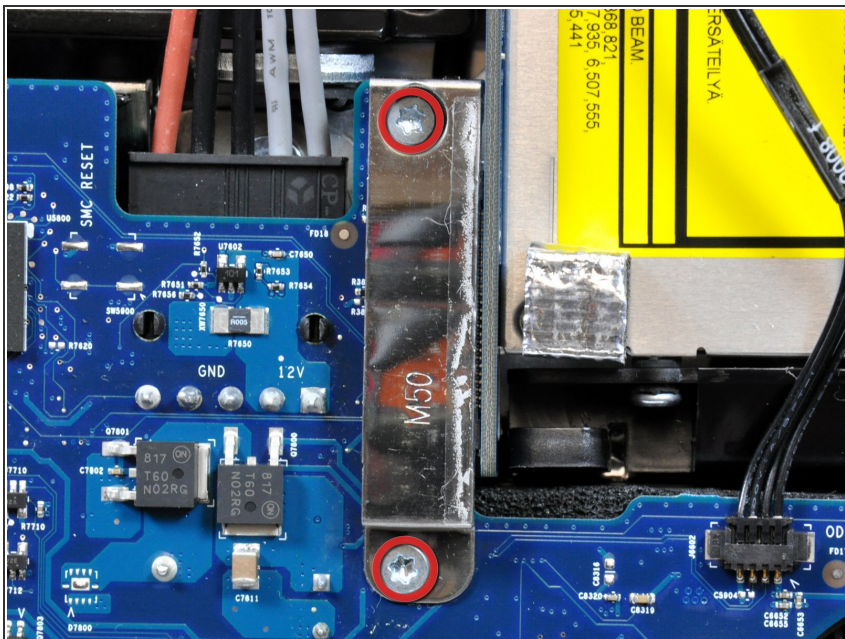


- Remove the two 7 mm T10 Torx screws securing the optical drive clip to the logic board.

## Step 2

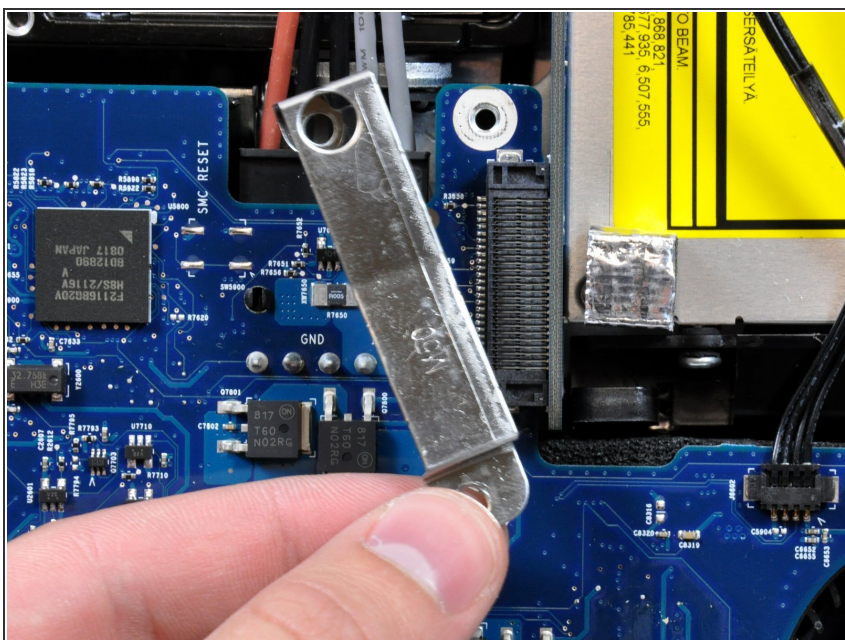


- Remove the optical drive clip.

### Step 3

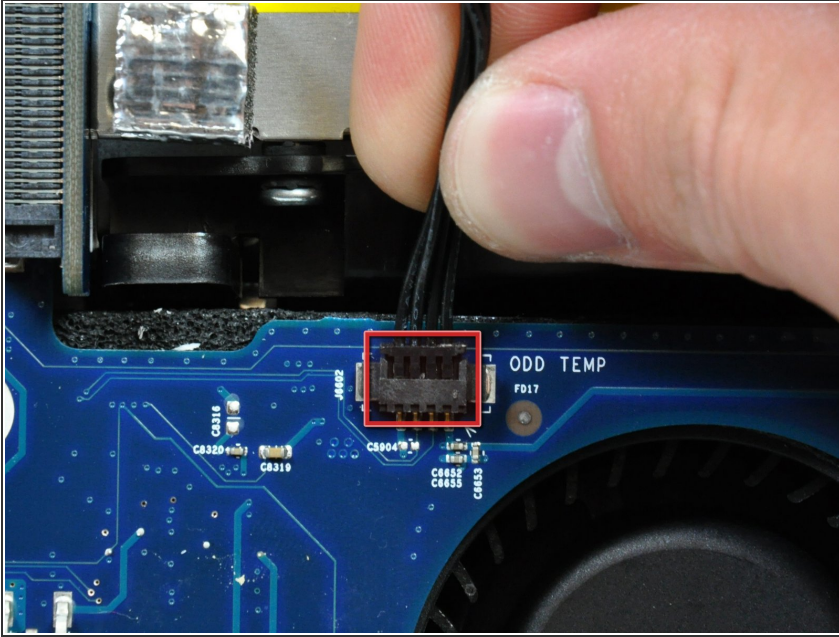

- Pull the optical drive thermal sensor cable connector away from its socket on the logic board.

### Step 4

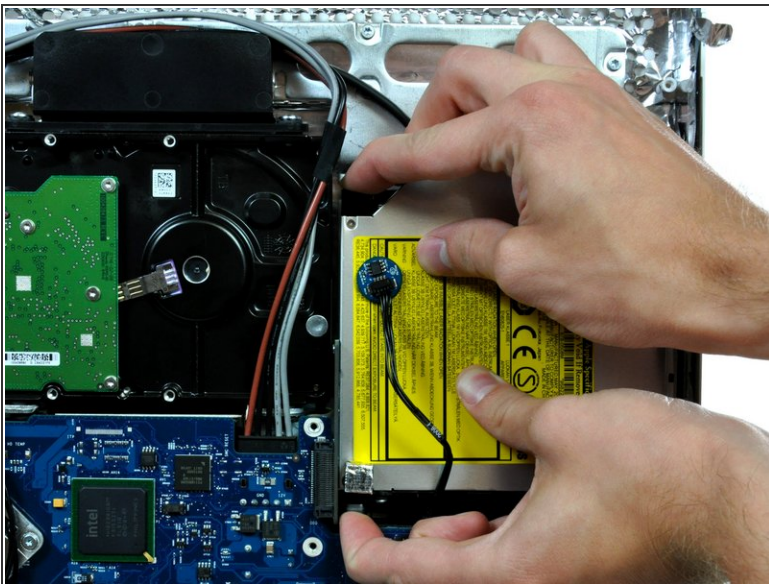

- Squeeze the two optical drive bracket ears together while pulling the drive toward yourself.
- ⓘ It may be helpful to hold the logic board down near the optical drive connector when pulling the drive toward yourself to avoid both components lifting together.
- Pull the optical drive away from the side of the rear panel and remove it from the iMac.

This document was generated on 2020-11-21 04:30:29 AM (MST).

To reassemble your device, follow these instructions in reverse order.