

Nokia 6350-1b Display Screen Replacement

Replace the screen of your Nokia 6350-1b cellphone.

Written By: Anna



INTRODUCTION

Use this guide to replace the display screen of the Nokia 6350-1b cellphone.



TOOLS:

- T5 Torx Screwdriver (1)
- iFixit Opening Tools (1)

Step 1 — Display Screen





- Using a plastic pry, get between the plastic frame and the rest of the phone.
- Move the plastic pry along the frame unlocking all of the locks that keep the frame in place.
- Remove the plastic frame.
- Be careful not to pry too hard, doing so could crack the plastic frame.

Step 2




- Using a T-5 screw driver, unscrew the screws on the four corners of the phone.
- Using a pry, get between the screen cover and the rest of the phone.
- Move along this layer unlocking the various locks that keep it in place.
- Carefully remove the screen cover to reveal the logic board.
- Keep track of the four small screws.
 They will be needed to put the phone back together.

Step 3



- Disconnect the flex cable from the logic board.
- Disconnect the LCD display screen.
- Remove the LCD display screen from the rest of the device.

Step 4

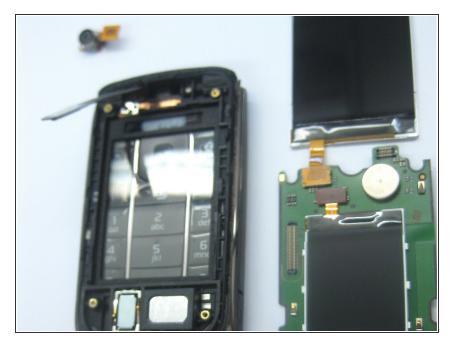

- Connect the new LCD display screen to the phone.
- Reconnect the Logic Board to the flex cable.

Step 5



 Using the T-5 screwdriver, screw the four screws back into the phone.

Step 6



- Place the cover back on the device so that it is in the correct position to be reinstalled.
- Press gently on the cover so that it snaps back into place.

To reassemble your device, follow these instructions in reverse order.