


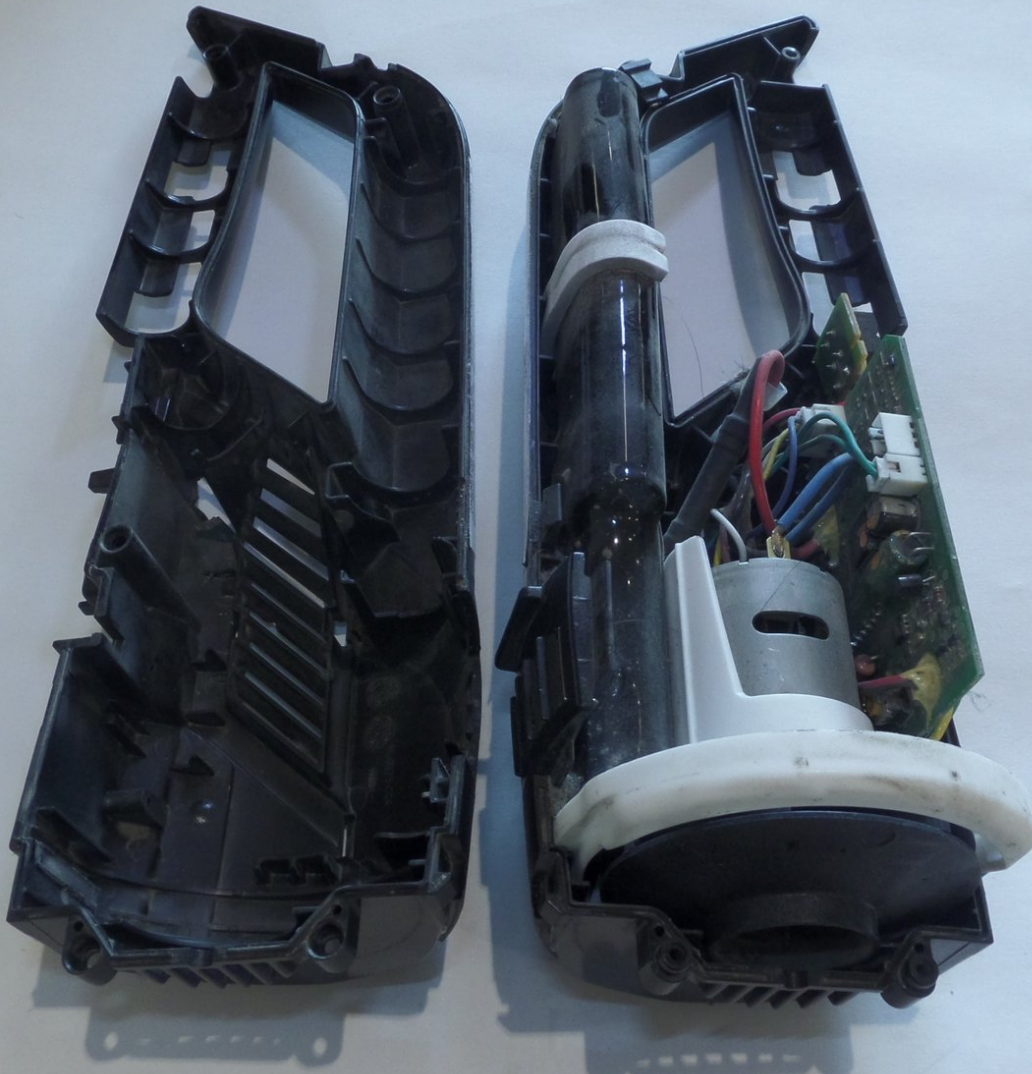

Bissell Bolt ION 2-in-1 Cordless Battery Replacement

This guide will help you take apart the handheld vacuum to replace the battery.

Written By: jasmine soria-gamino



INTRODUCTION

This guide will help you take apart the handheld vacuum using the most appropriate tools to replace the battery.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [Metal Spudger](#) (1)
-

Step 1 — Battery



- Push the silver button to disconnect the dirt dish from the handheld vacuum.

Step 2




- Remove the four 4 .4cm screws using your P0 screwdriver head and screwdriver.
- Remove the Bissell sign to remove the two 4.4cm screws, using your P0 screwdriver head and screwdriver.

Step 3




- Using the metal spudger, insert and lift up to remove the frame from the body.
- Move along the line and repeat on the other side.

Step 4

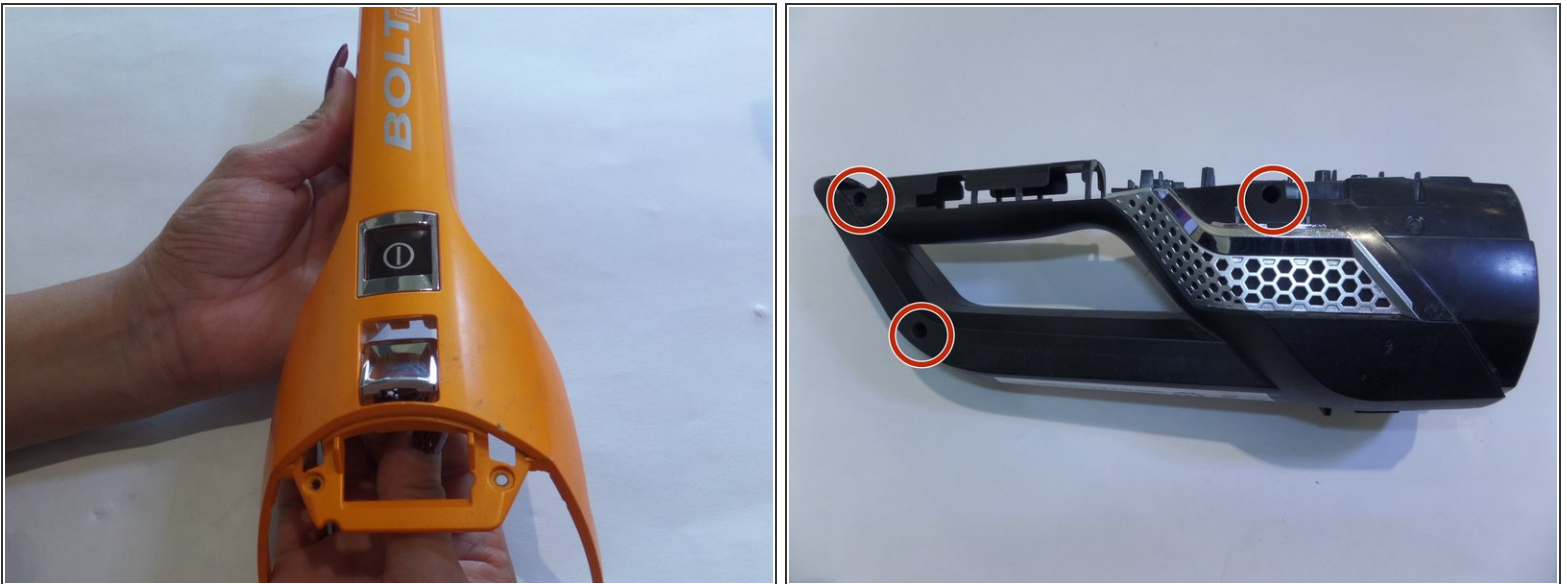

- Remove the orange frame
- Remove the 3 screws on the right side of the vacuum.

Step 5

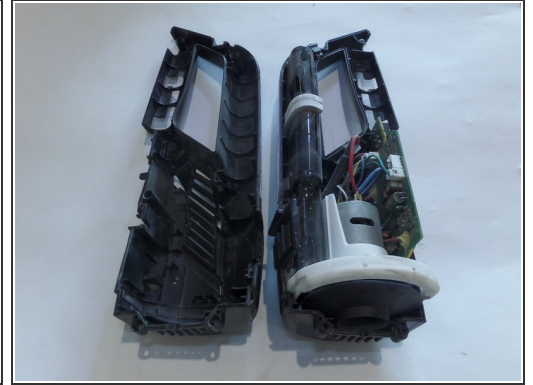

- With metal spudger remove the metal clip on both sides.
- Pull device apart using great force

To reassemble your device, follow these instructions in reverse order.