



Nexus 7 Power & Volume ZIF Connector Replacement

Prerequisite for detaching the Power & Volume ZIF Connector.

Written By: Brett Hartt






TOOLS:

- [Spudger](#) (1)
-

Step 1 — Power & Volume ZIF Connector

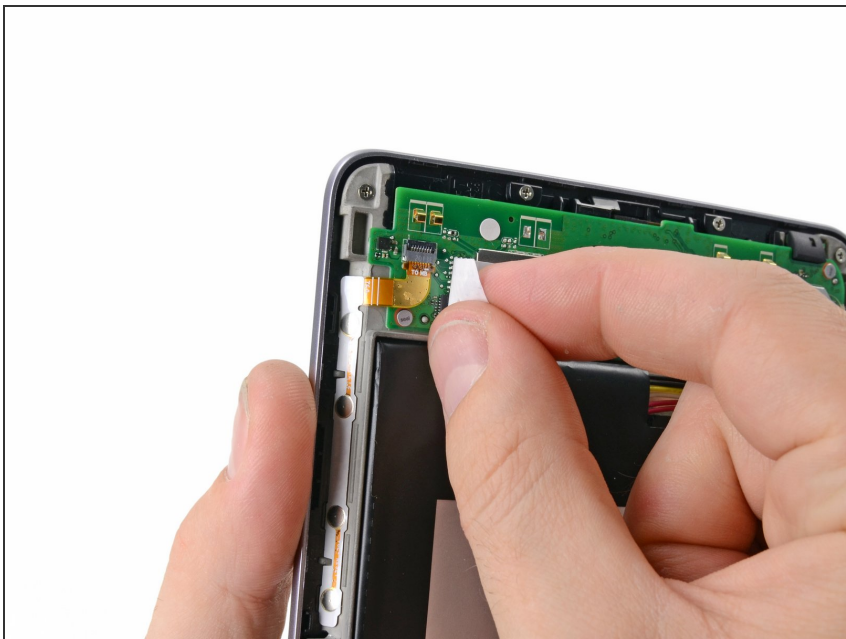

- Peel back the label covering the power and volume button ZIF connector.

Step 2



- Use the tip of a spudger to carefully flip up the retaining flap on the power and volume button ribbon cable ZIF socket.

 Make sure you are flipping up the retaining flap, not the socket itself.

- Use the tip of a spudger to pull the power and volume button ribbon cable straight out of its socket.

This document was generated on 2020-11-28 02:36:44 AM (MST).

To reassemble your device, follow these instructions in reverse order.