



# Canon ZR70MC Battery Pack Replacement

For replacement of the battery pack on this device.. No tools will be needed.


Written By: khalid clarke



## INTRODUCTION

The battery pack keeps the Canon ZR70MC charged. This guide will show you how to remove the battery pack. Taking out the battery pack allows access to the side panel screws. You will need to take out the battery pack if you are going to perform any repairs or replacements involving the removal of the side panel. While going through this guide, keep track of the direction of the battery pack. The replacement battery pack will need to be facing the same direction as the previous battery pack.

## Step 1 — Battery Pack

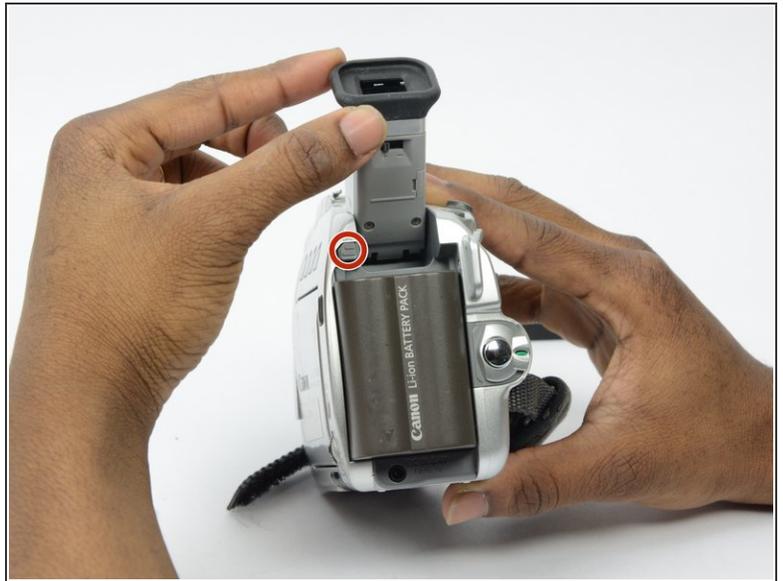

- Turn camera with lens facing away to locate the battery pack.
- Raise the eyepiece to allow easier access to battery pack.

## Step 2



- Locate the battery release button above the battery pack.
- While pressing the battery release with your left hand, push the battery pack up with your right hand to take out the battery pack.

To reassemble your device, follow these instructions in reverse order.