




Jam Voice Battery Replacement

Replacement of a faulty or insufficient battery for the Jam Voice.

Written By: Hope Bukhamseen

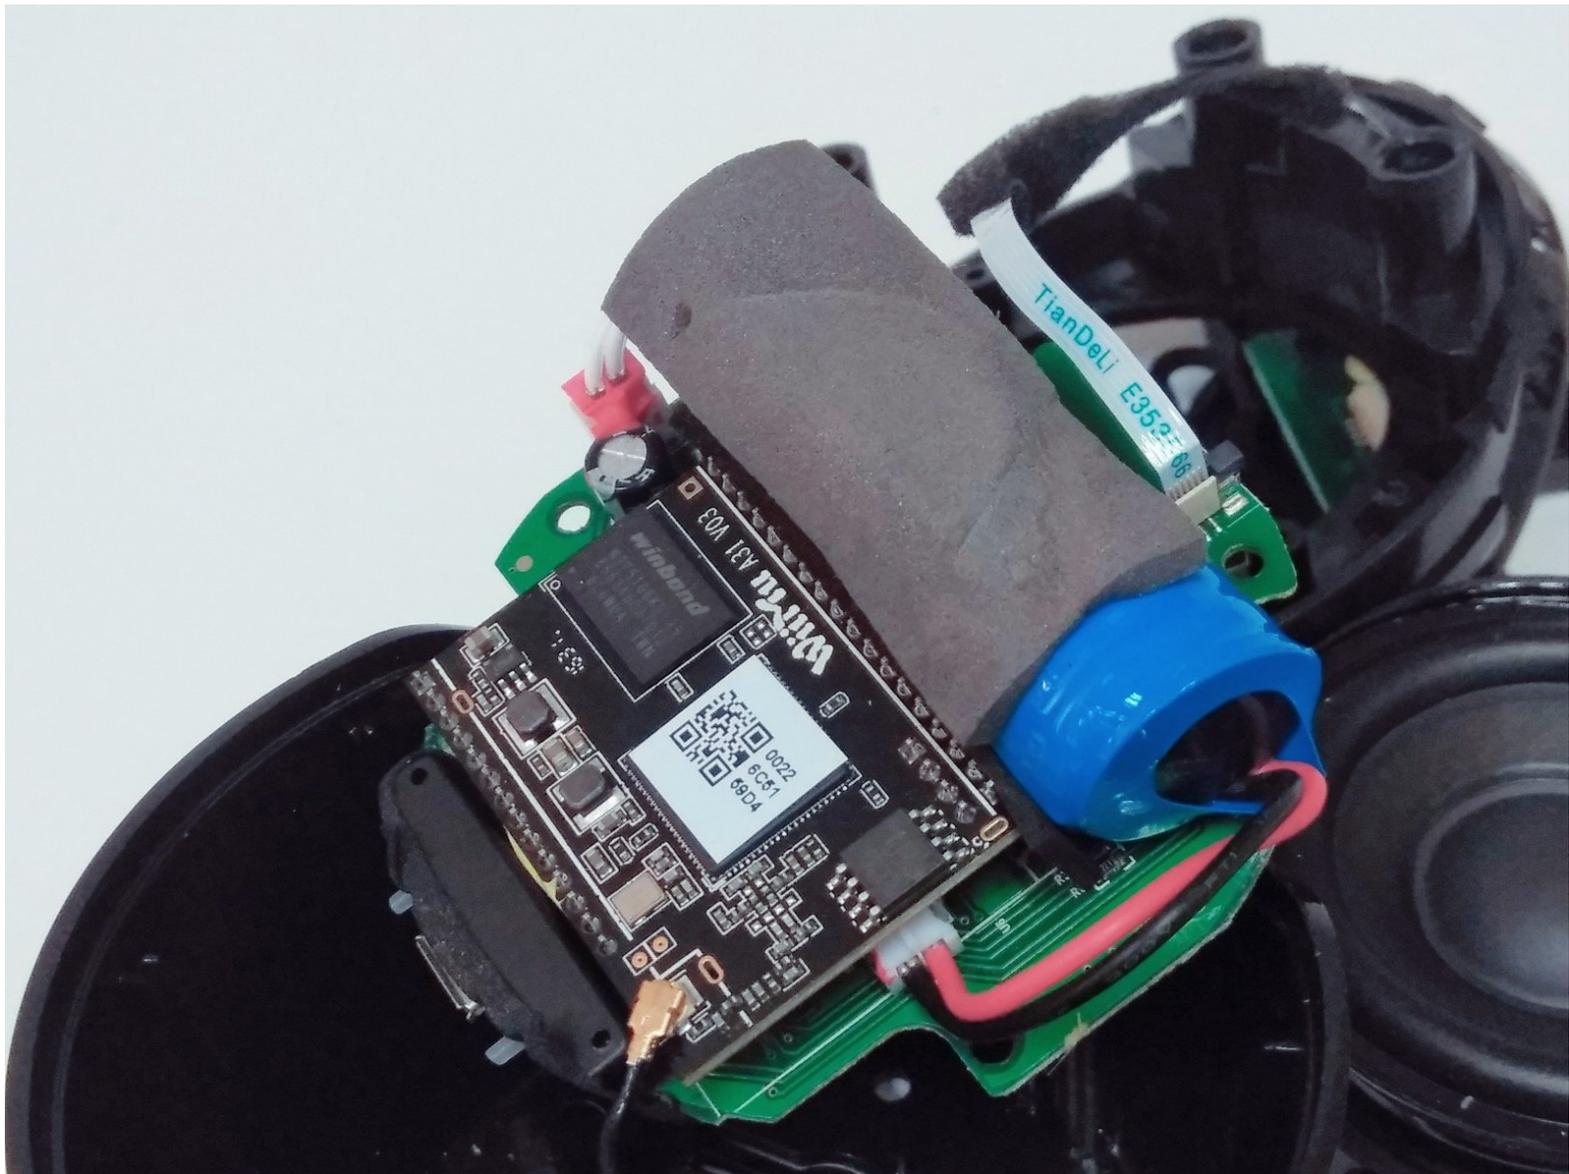


INTRODUCTION

The battery will be replaced by dismantling the device, disconnecting the current battery and connecting a new battery.

TOOLS:

- [iFixit Opening Tool](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
 - [64 Bit Driver Kit](#) (1)
 - [Tweezers](#) (1)
 - [Halberd Spudger](#) (1)
-

Step 1 — Hard Mesh Cover

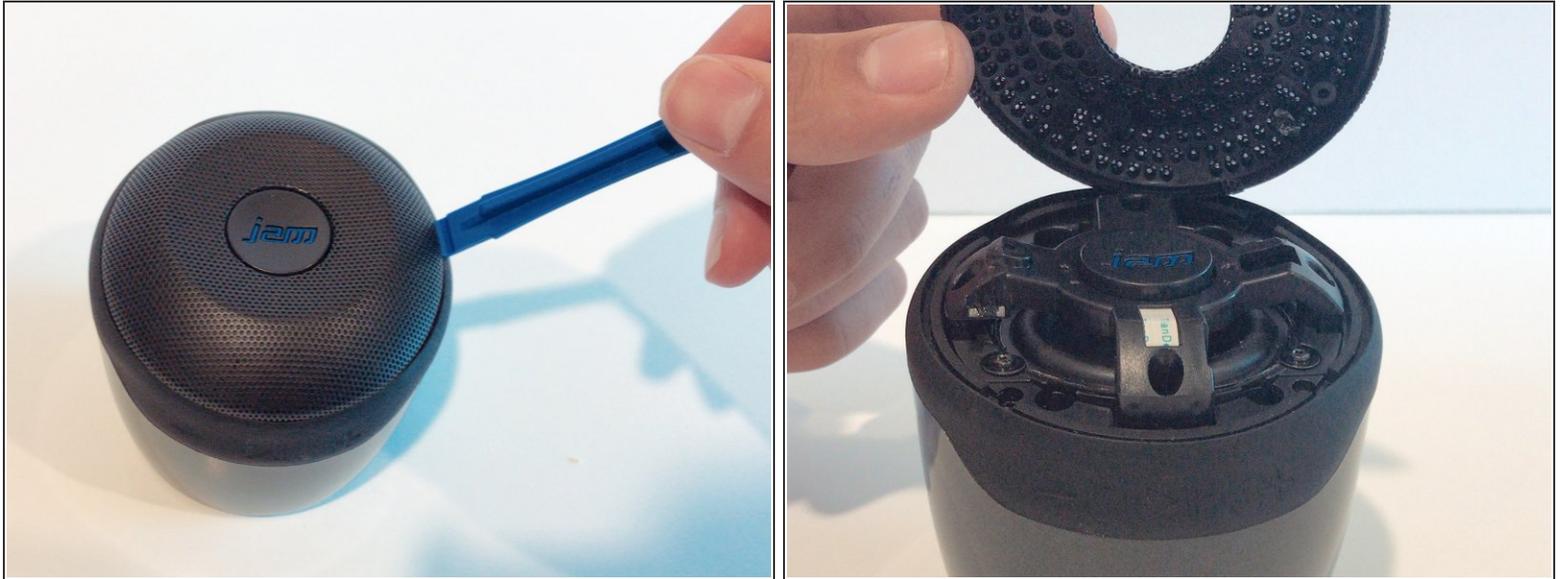

- Insert the plastic opening tool underneath the mesh top.
- Pry the cover open.
- ☑ To reattach the cover, simply align the round posts on the bottom of the cover into the holes.

Step 2 — Motherboard



- Remove the four 7mm Phillips screws from the plastic cover.

Step 3




- Remove the four 5mm Phillips screws that hold down the speaker in place.
- Remove the two 6mm Phillips screws that hold down the plastic casing.

Step 4




- Once all six screws are removed, use a Halberd Spudger or similar tool to lift up the speaker.
- Pull the speaker up and out.

Step 5

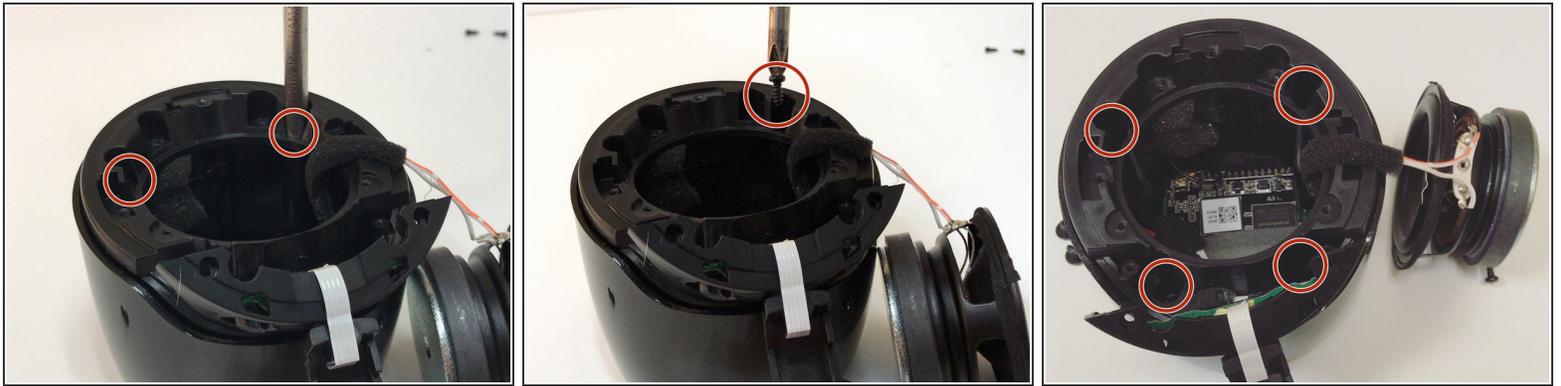

- Remove the four 7mm Phillips screws to expose the motherboard.

Step 6

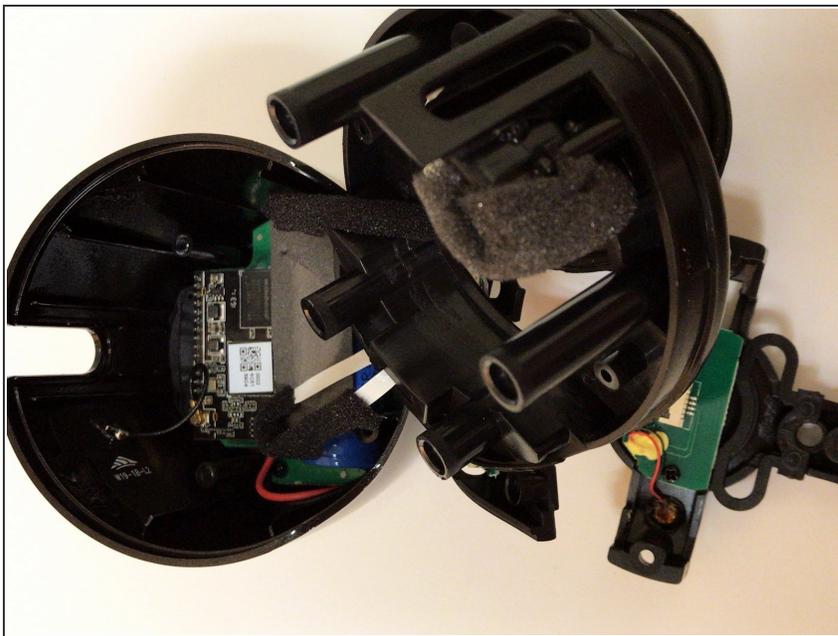


- After removing all of the screws from the plastic cover, remove it by pulling up and out.
- ⚠ Be careful not to pull and damage any of the wires.**

Step 7



- Remove the three 5mm Phillips screws that hold the motherboard in place.
- After the screws are removed, place two fingers on the power button and Bluetooth button to push the motherboard out.

Step 8 — Battery

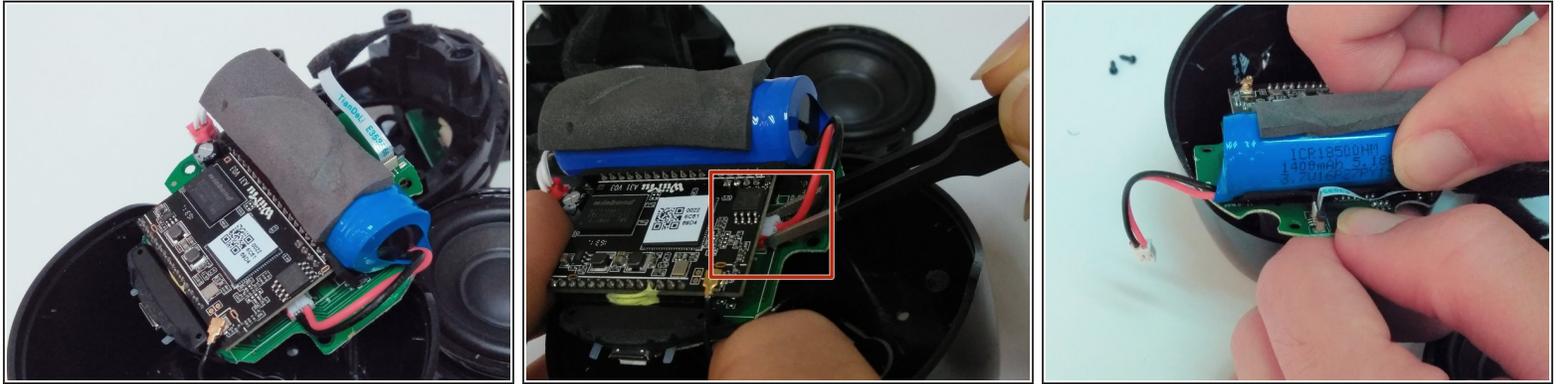

- Expose the motherboard and battery and place in a position that will be easy to access and work with.
- Use tweezers to remove the battery's wire from the motherboard at the connection point.
- ⓘ The battery's connection point is opposite the speaker's connection point.
- Pull the battery from the motherboard.

To reassemble your device, follow these instructions in reverse order.