




Lenovo Yoga 720-15IKB Wireless Adapter Replacement

This guide will show you how to replace the wireless adapter for your Lenovo Yoga 720-15IKB (88YG7000828).

Written By: Matthew Bornhorst

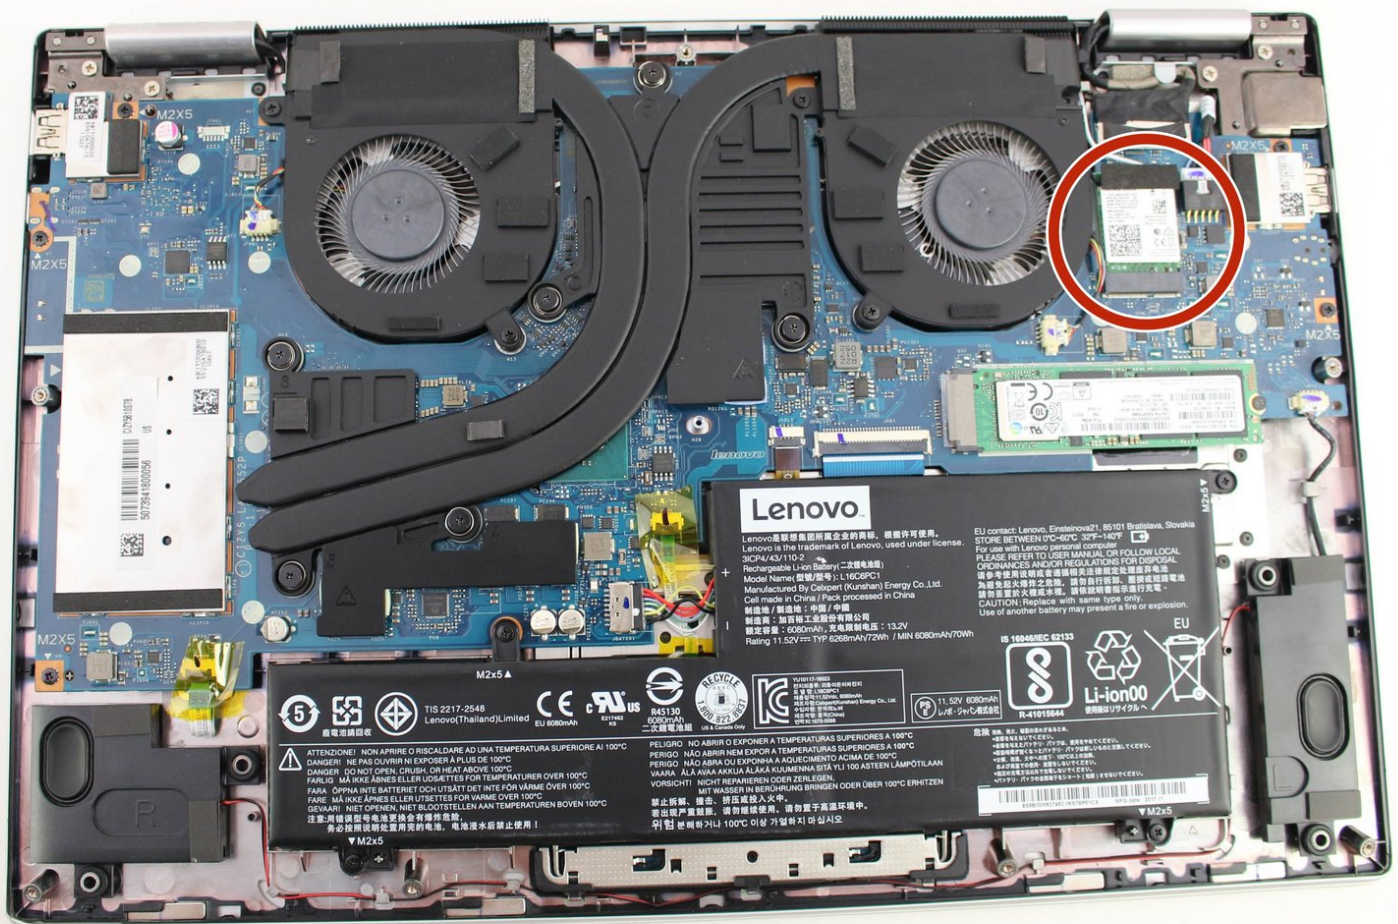

INTRODUCTION

If your Lenovo Yoga 720-15IKB (88YG7000828) is not recognizing any wireless signals or having trouble connecting to Wi-Fi, use this guide to replace the wireless adapter. For more information on these symptoms, refer to the [troubleshooting guide](#).

To complete this repair you'll need a Torx T5 and a Phillips #0 screwdriver.



TOOLS:

- [T5 Torx Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [iFixit Opening Picks set of 6](#) (1)



PARTS:


- [Lenovo 01AX704 Wireless Adapter](#) (1)
- [Lenovo 01AX713 Wireless Adapter](#) (1)

Step 1 — Bottom Cover



- Power off the device before starting.
- Flip the device over with the hinges facing away from you.
- Remove seven 5.0 mm Torx T5 screws.
- Remove three 9.5 mm Torx T5 screws.

Step 2

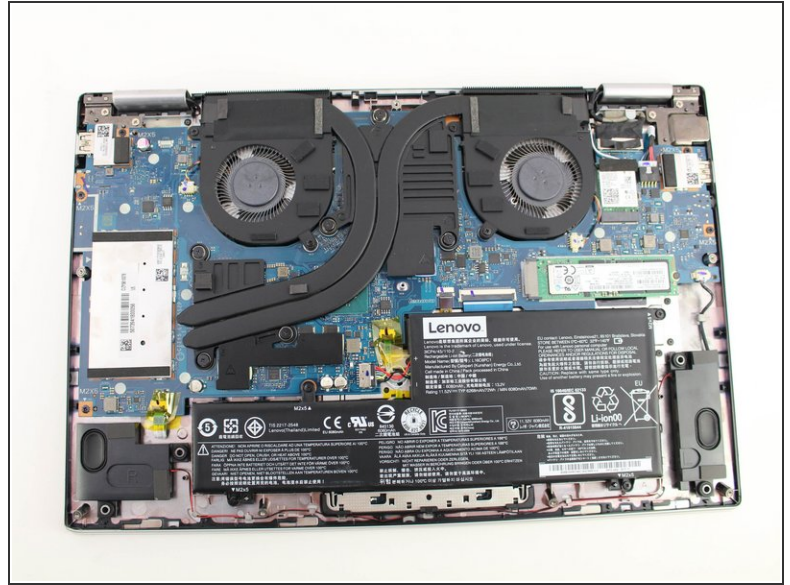

- Pry around the edges from one side to another with a plastic opening tool.




⚠ Do not pry on the side with the hinges because this can break the cover.

- Lift the case from the front until you feel resistance.

⚠ Do not keep lifting after you feel resistance, or the bottom cover can break.


- Pull the cover towards you, away from the hinges.
- Completely lift off the cover.

Step 3 — Wireless Adapter

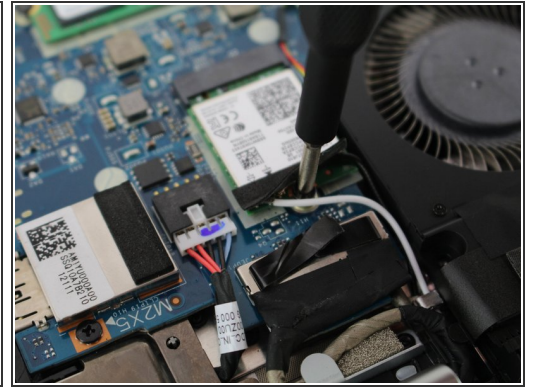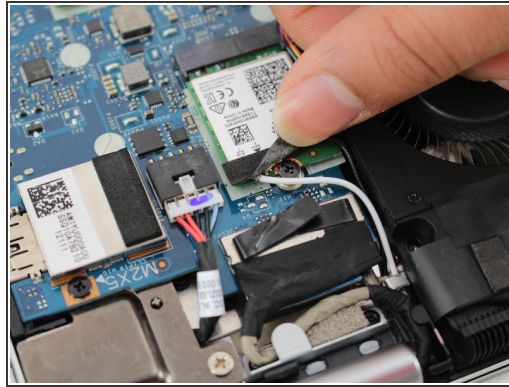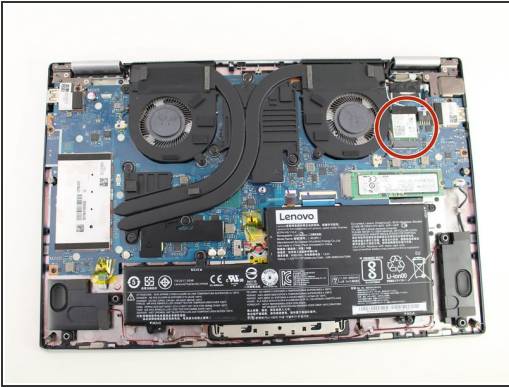

- Lift the foam covering the connecting wires and screw, and use the Phillips #0 screwdriver to remove the 2mm screw.

Step 4

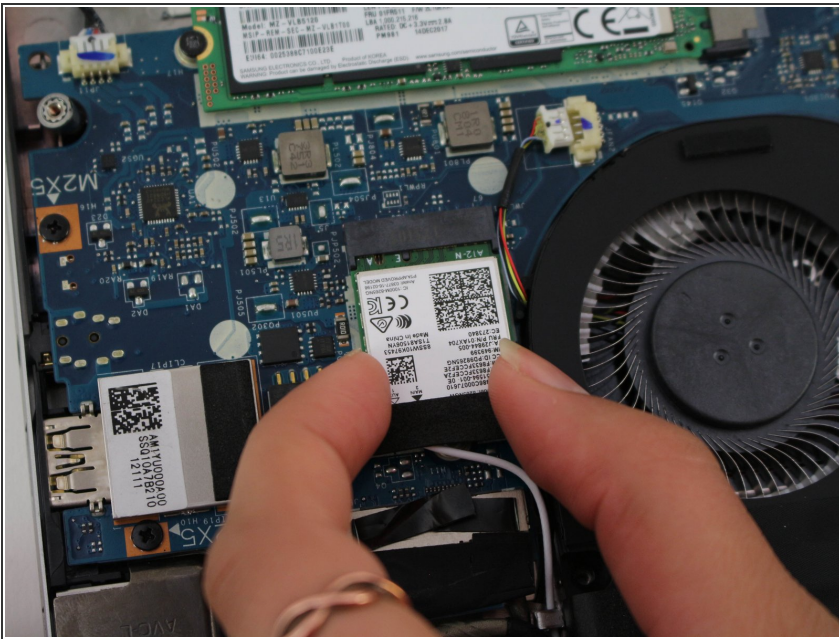

- Grab the adapter from both sides and pull towards the hinge to remove the adapter from the device.

Step 5



- Remove the black and white wires from the adapter by pulling up on each wire.
- ★ When reassembling, make sure to press each wire connector firmly onto the new adapter to make sure it is a secure fit.

To reassemble your device, follow these instructions in reverse order.