



APS Tech 101629 Power Switch Replacement

This guide will show how to replace a worn out power switch.

Written By: Alexis Weckel



INTRODUCTION


This repair guide will guide you through the steps to removing and replacing the power switch of your APS Tech 101629 CD-Drive.

First the external casing, and channel switch will need to be removed.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Spudger](#) (1)
 - [Tweezers](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — External Casing

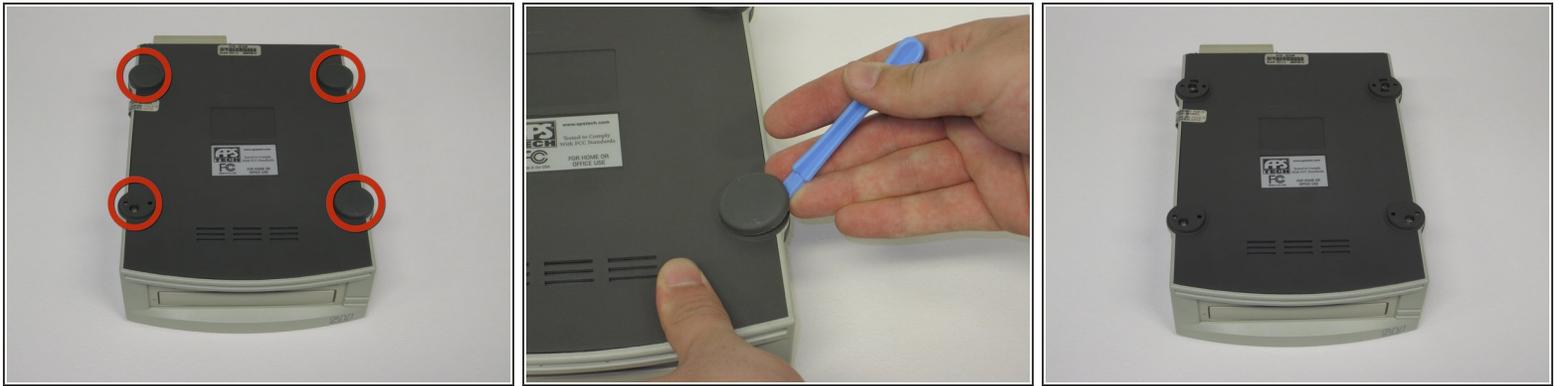

- Pry all four of the plastic feet off the bottom of the enclosure using the iPod opening tool.

Step 2




- Unscrew the four screws previously covered by the feet with a Phillips #1 screwdriver.

Step 3



- Flip the device right side up.
- Gently slide the casing upwards and off the hard drive.

Step 4

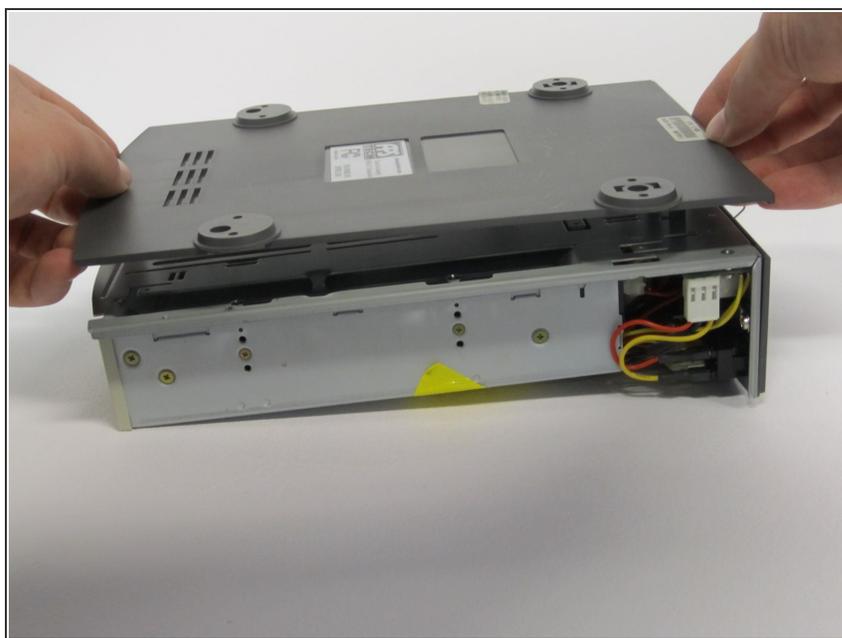



- Flip device upside down again.
- Gently pry the bottom gray casing away from the device.

Step 5




- Rotate so the back of the device is facing you.
- Gently pry the back casing away.
- When the back casing is removed, the fan will become loose.

Step 6 — Channel Switch

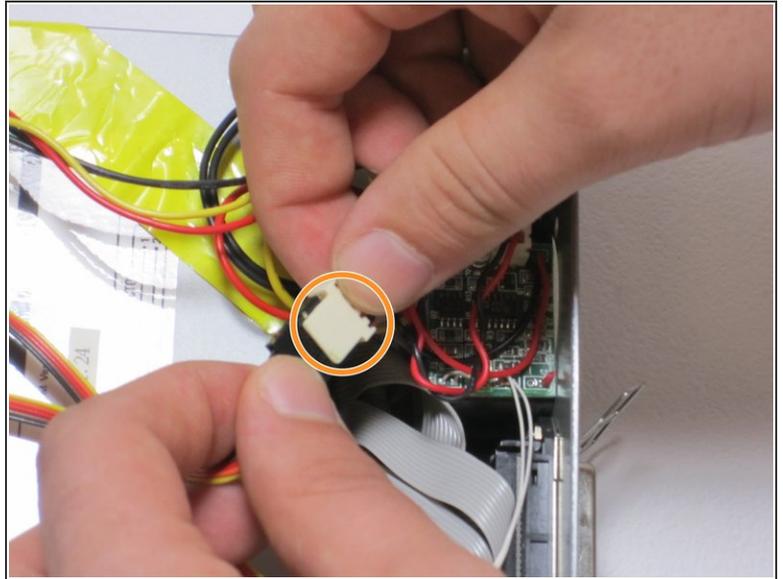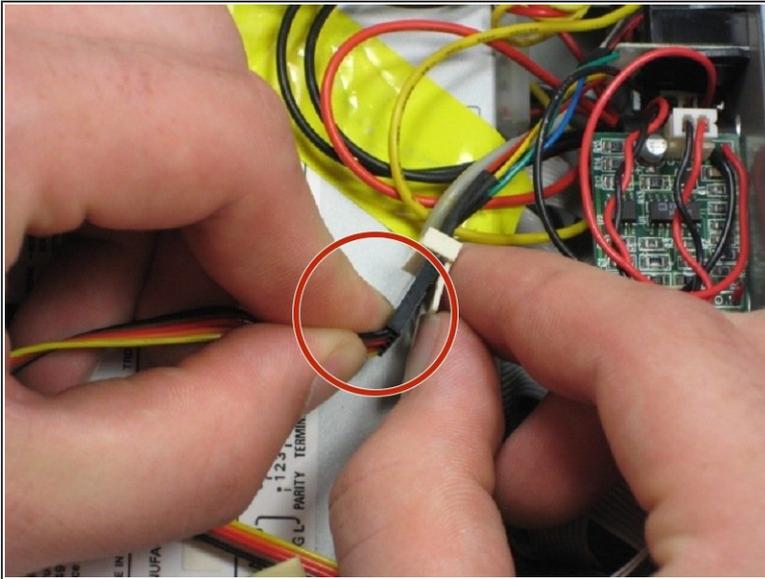


- Find the conjoined ID cable wires that are colored black, orange, and yellow.
- Lift white portion of cable wires to disconnect it.

Step 7

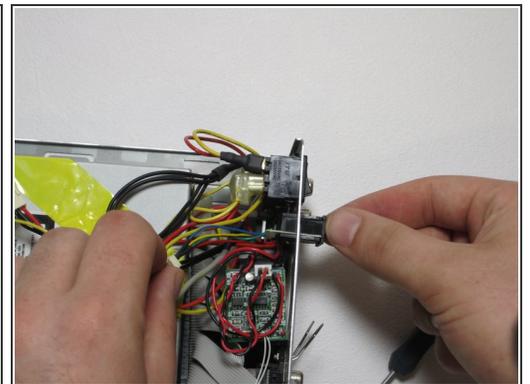



- ⓘ At this point, the fan is loose and can be easily moved but not disconnected.
- Using the spudger, depress the pressure holders at all four corners of the fan.
- Take out the fan and its cords, by pulling it outward from its cavity within the device.

Step 8 — Power Switch

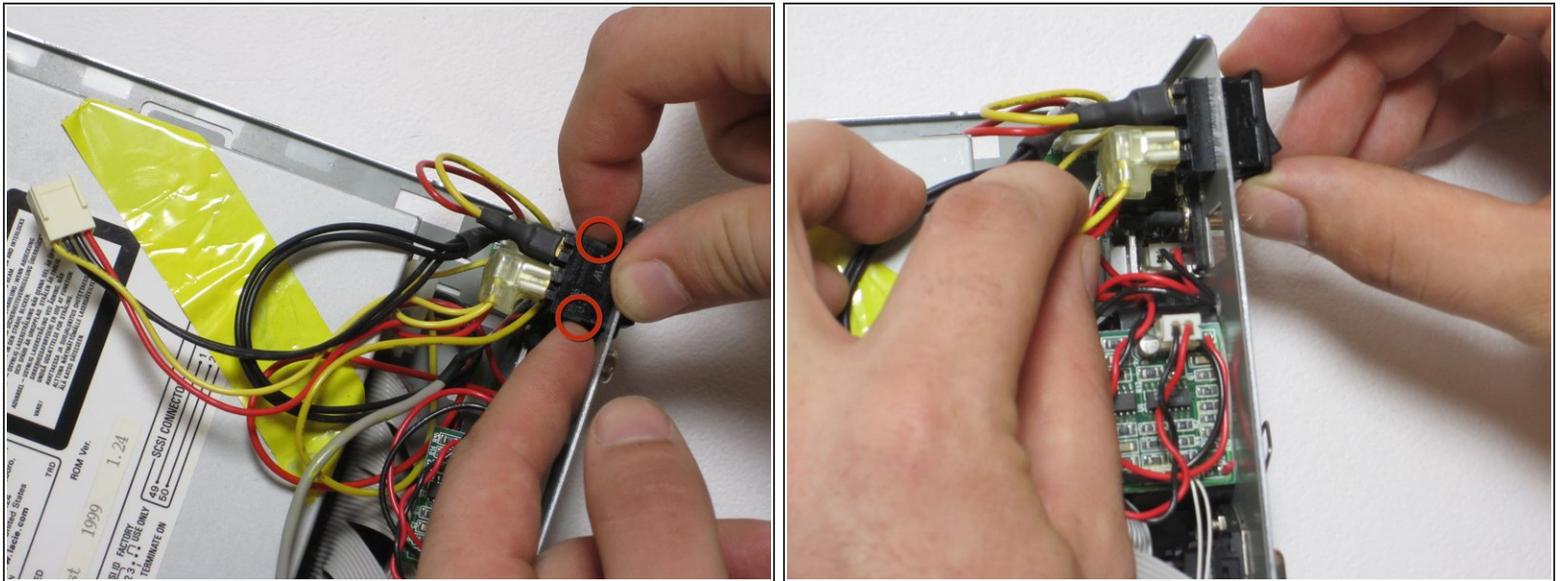

- Depress 2 pressure holds on each side of the power switch.
- Press out the back of the device.

Step 9

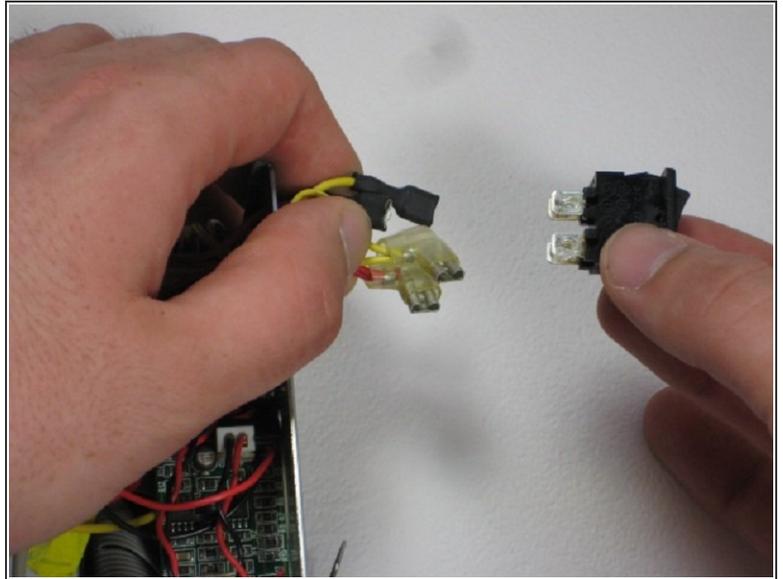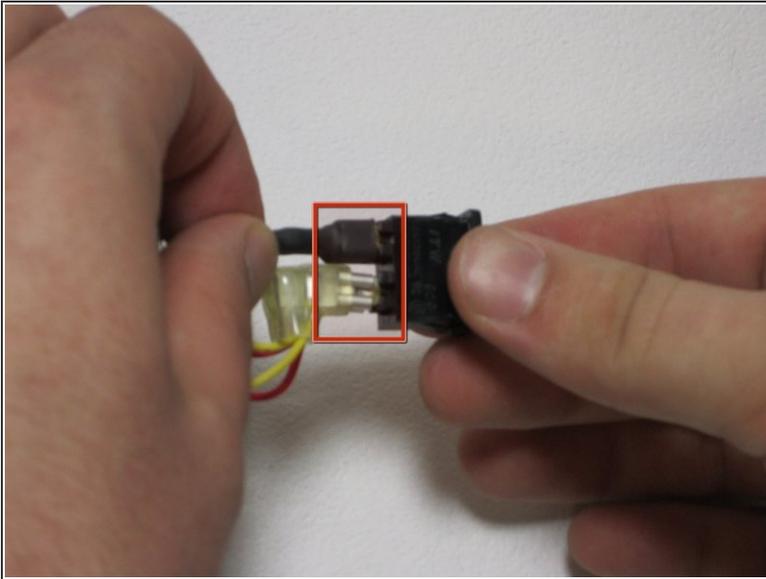

- Remove all four connections from the power switch.
 - Remember that the straight connections are on the far side, while the L-shaped connections are on the near side, and that both yellow connections are on top. This is helpful for reassembly.
- ⓘ These are very hard to get off, use patience and wiggling.

To reassemble your device, follow these instructions in reverse order.