




# iRobot Roomba 980 Rear Wheels

The rear wheel assembly is what propels the...

Written By: Ernesto Rodriguez Romero

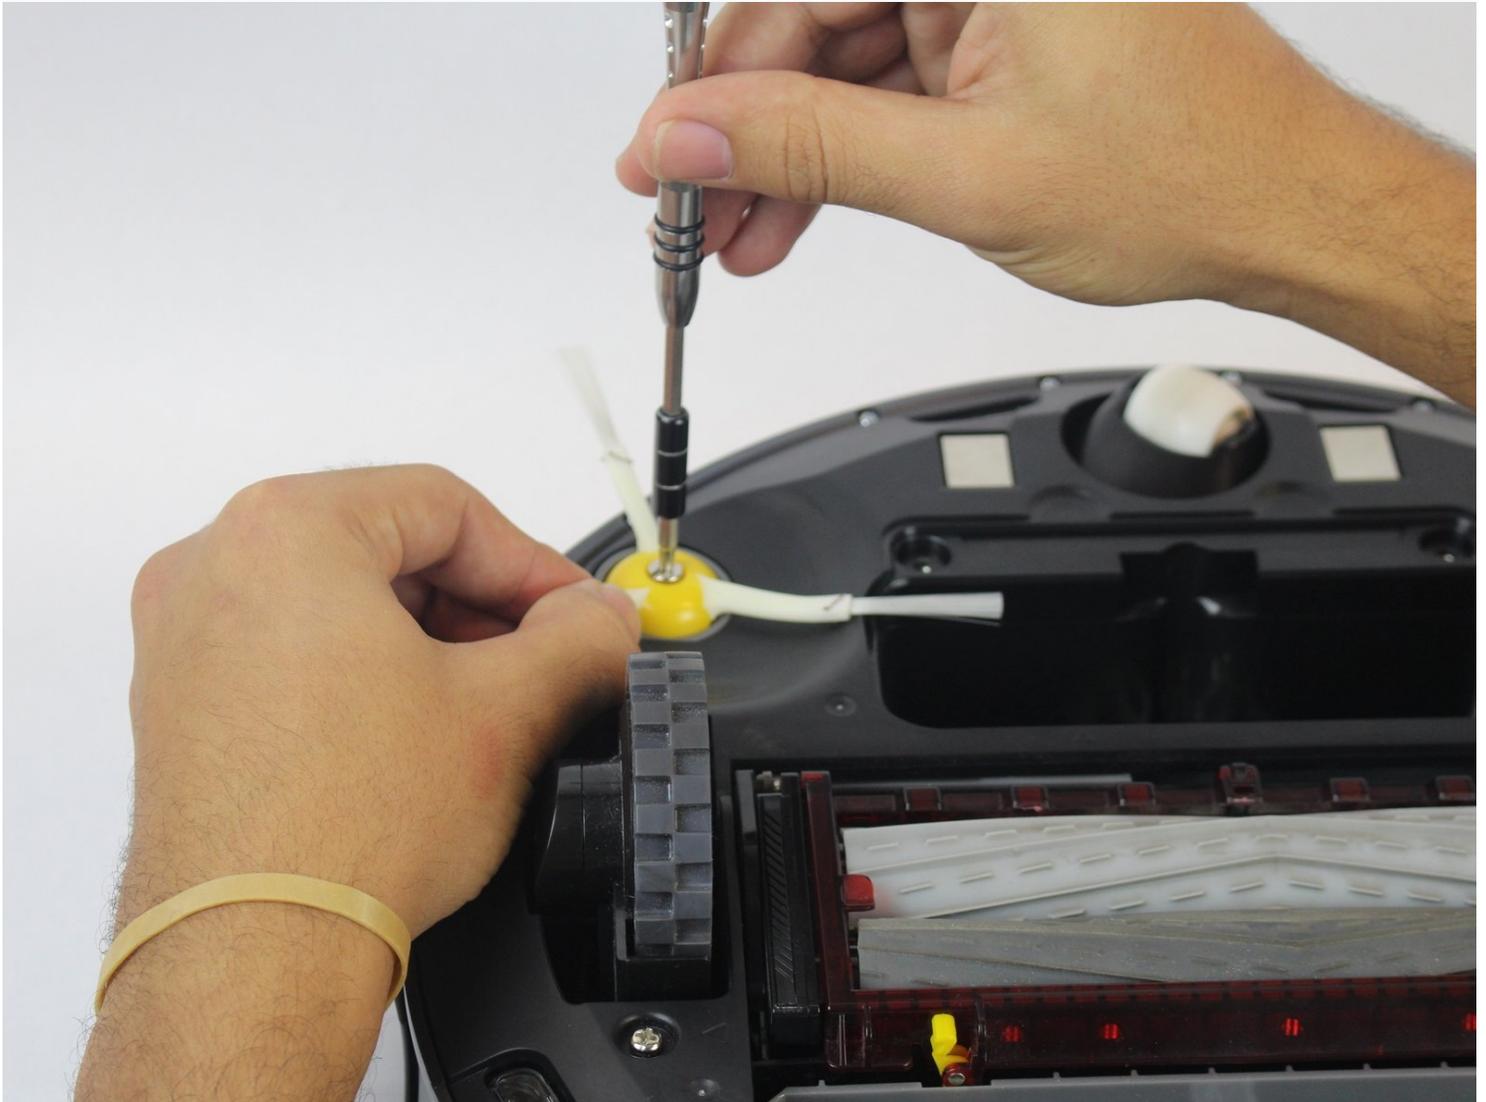

## INTRODUCTION

The rear wheel assembly is what propels the roomba. If they become damaged the roomba will begin to move irregularly or not at all.

### TOOLS:

Phillips #1 Screwdriver (1)

### Step 1 — Battery




- Flip over the device and remove the two 11.5 mm screws using the Phillips #1 screwdriver.

## Step 2




- Unscrew the back plate using a Phillips #1 screwdriver.
- Carefully lift the panel up once the screws are removed.

## Step 3

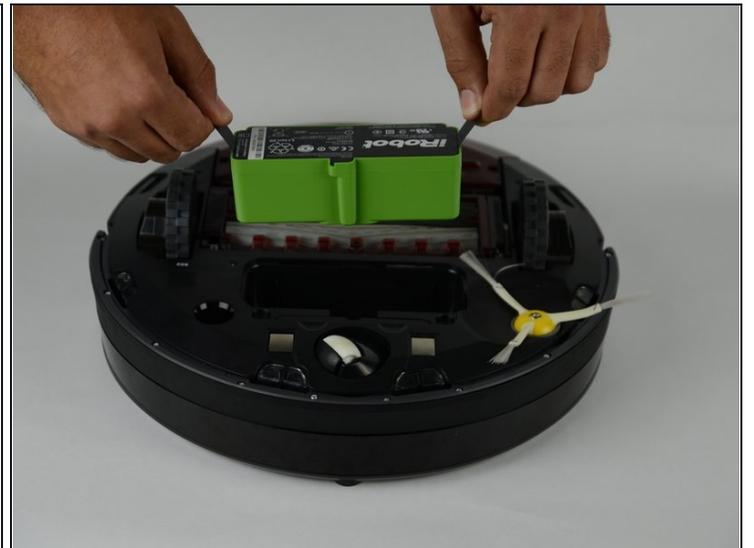

- With both hands, grab the two black tabs on each end of the battery.
- Pull the tabs upwards to remove the battery.

## Step 4 — Rear Wheels

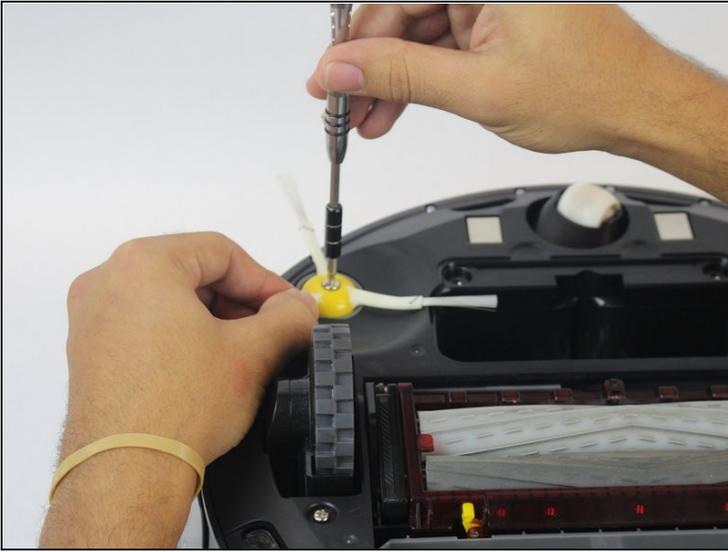

- Loosen the screw on the side brush.
- Lift the side brush from the device.

## Step 5



- Unscrew the (2) 11.5mm screws using the Phillips #1 screwdriver.
- Carefully remove the plate by lifting it off of the device.

## Step 6



ⓘ Removing the brush module may ease the removal of the wheel module

- Locate the (3) 15.8mm gold Phillips #1 screws and unscrew them.
- Lift the wheel module removing it from the vacuum.
- Remove the other wheel by repeating these steps.

---

To reassemble your device, follow these instructions in reverse order.